


Pact Series **TransferPact**

Catalog 2020

Source-changeover systems



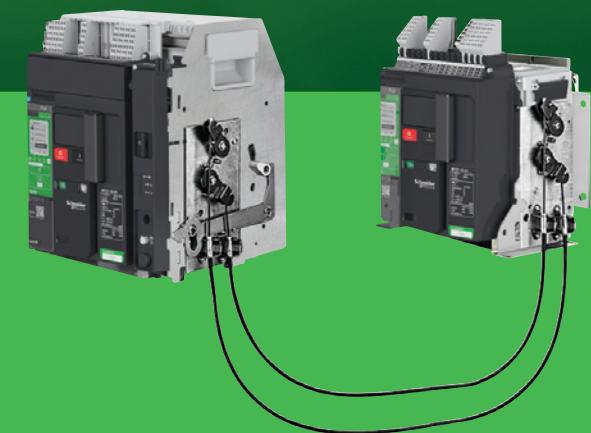

Green Premium™

An industry leading portfolio of offers delivering sustainable value



More than 75% of our product sales offer superior transparency on the material content, regulatory information and environmental impact of our products:

- RoHS compliance
- REACh substance information
- Industry leading # of PEP's*
- Circularity instructions

The Green Premium program stands for our commitment to deliver customer valued sustainable performance. It has been upgraded with recognized environmental claims and extended to cover all offers including Products, Services and Solutions.

CO₂ and P&L impact through... Resource Performance

Green Premium brings improved resource efficiency throughout an asset's lifecycle. This includes efficient use of energy and natural resources, along with the minimization of CO₂ emissions.

Cost of ownership optimization through... Circular Performance

We're helping our customers optimize the total cost of ownership of their assets. To do this, we provide IoT-enabled solutions, as well as upgrade, repair, retrofit, and remanufacture services.

Peace of mind through... Well-being Performance

Green Premium products are RoHS and REACh compliant. We're going beyond regulatory compliance with step-by-step substitution of certain materials and substances from our products.

Improved sales through... Differentiation

Green Premium delivers strong value propositions through third-party labels and services. By collaborating with third-party organizations we can support our customers in meeting their sustainability goals such as green building certifications.




Discover what we mean by green
Check your products!

*PEP: Product Environmental Profile (i.e. Environmental Product Declaration)



A source-changeover system is indispensable:

For critical applications
in particular
For all others
in general

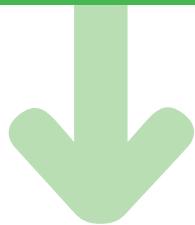

A source-changeover system is indispensable for applications that need a continuous supply of electric power (hospitals, airports, banks, government facilities, etc.).

But a source-changeover system is also suitable for all LV electrical installations exposed to:

- > Nominal voltage loss or dip (when there is high demand for electric power)
- > Unpredictable power quality

> Frequent power cuts.

These factors, and many others, can damage the continuity of service of your electrical installation.

For infrastructure managers, a source-changeover system gives direct economic benefits: it is possible to select your source based on power cost.

In this case, the replacement source is used as an alternative, more economical source.

- > Managing energy efficiently
- > Power Cost
- > Safety

Where backup supply must be reliable: now that is everywhere.

Electricity is the fuel that feeds economic activity. Very few operations can withstand the financial impact of an electrical stoppage.

For occupant comfort, business continuity, and worker/visitor safety, dependability levels which used to apply to hospitals or airports are now becoming required in shopping malls and offices.

Additionally, utility companies make their contracts more sophisticated to deal with energy concerns: for example, by including time restrictions to total accessible power.


For these reasons, backup power sources expand across all types of buildings, and require high performance connection and management.

**Enabling you to meet these challenges,
TransferPact comes as the natural continuation
of the world leading low voltage distribution system
developed by Schneider Electric.**



> \$1 M/hr

average loss ratio
for data centers
without power

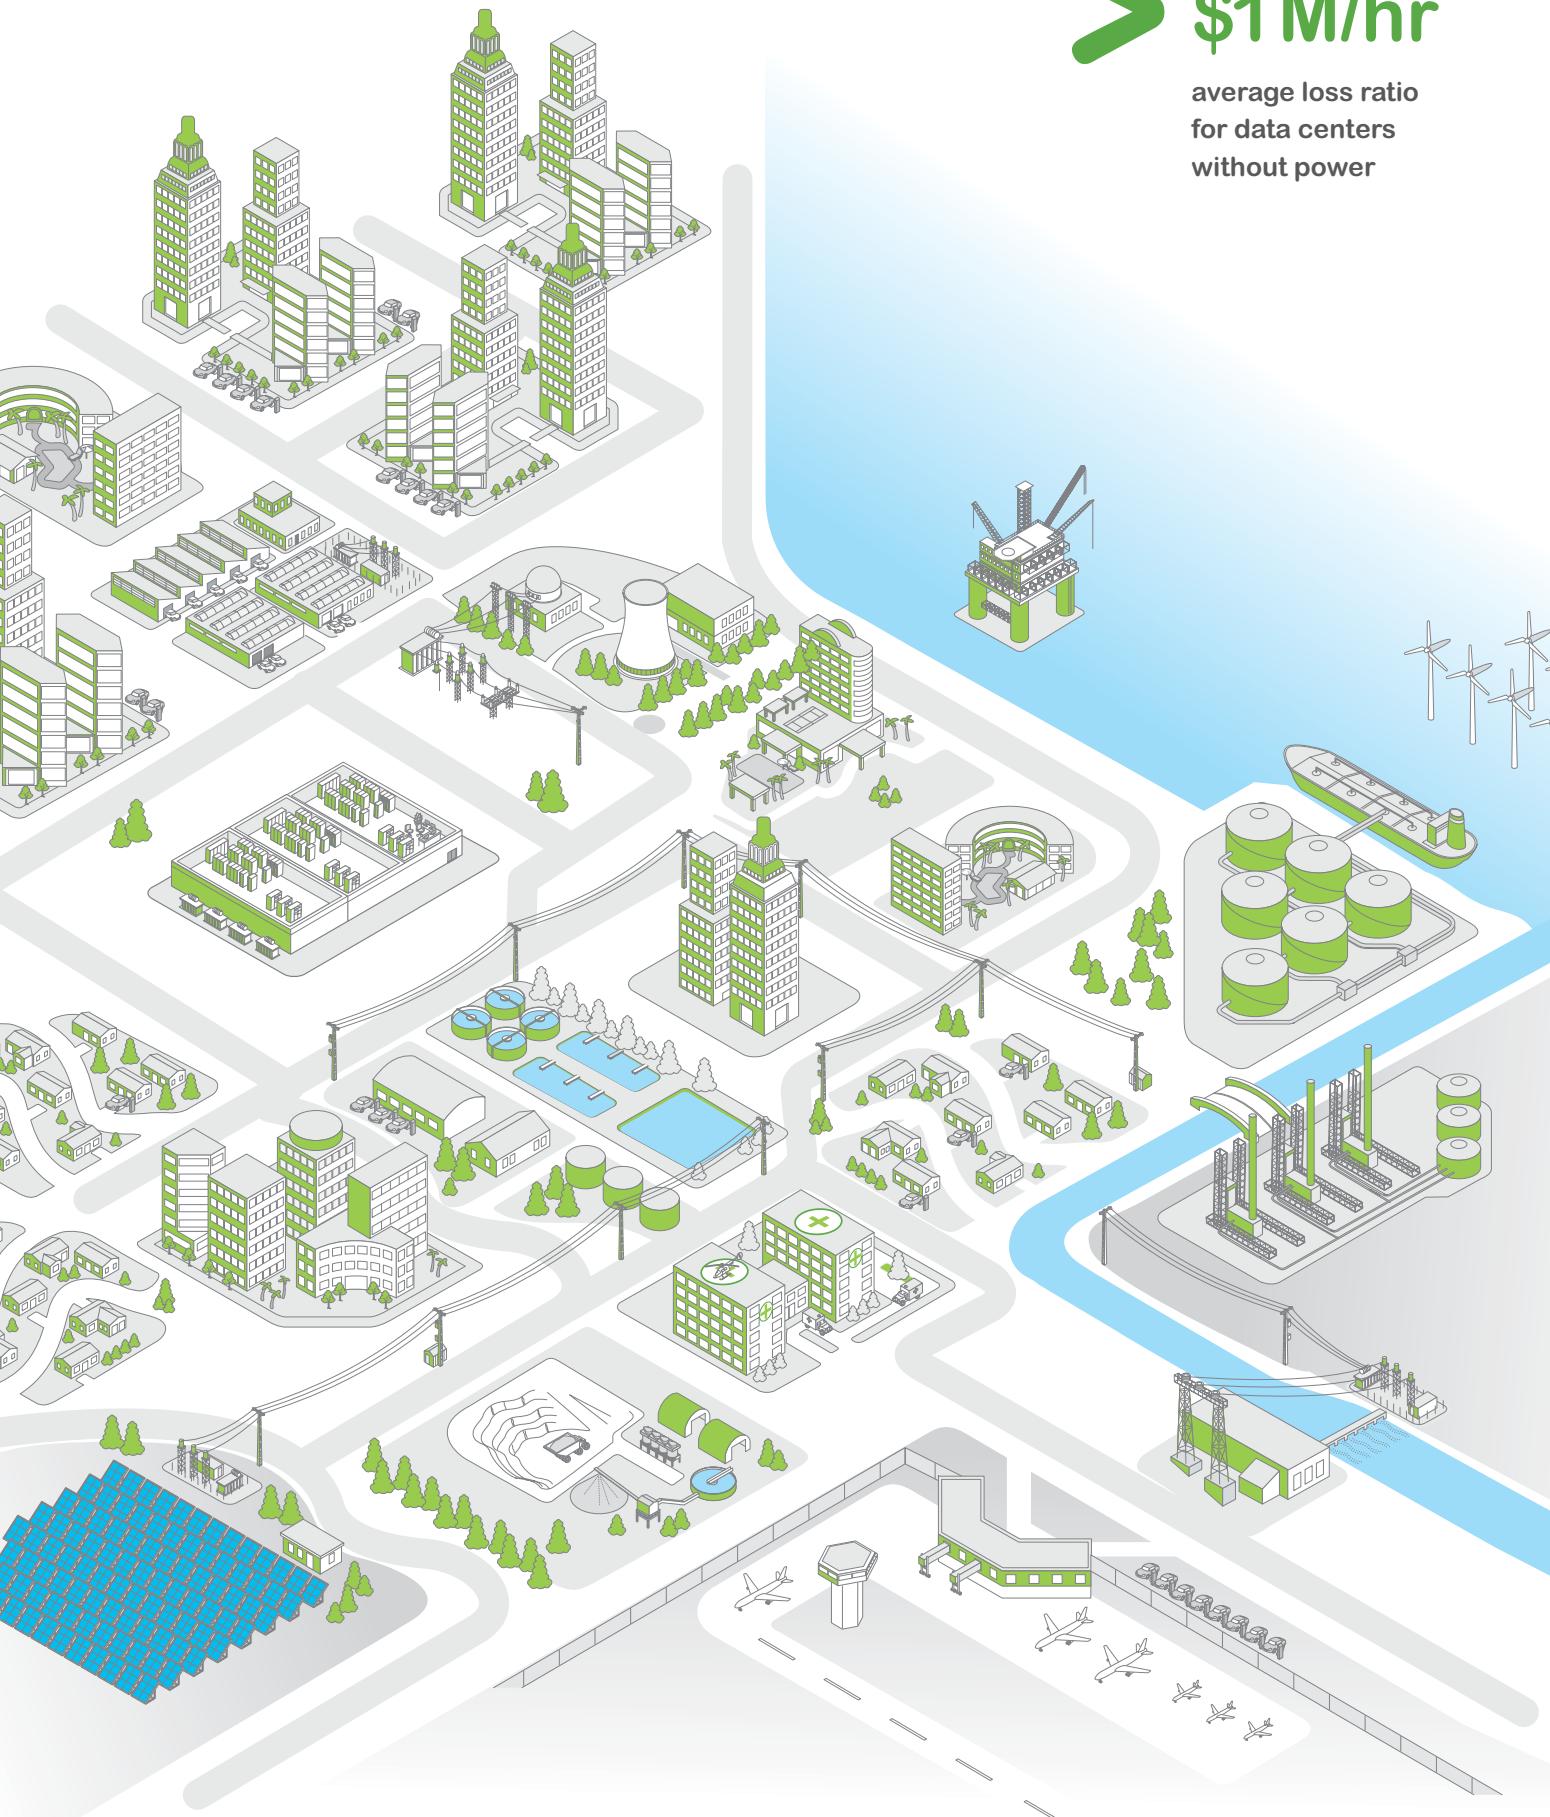

3 ways to switch the load to meet your needs



1

Manual source-changeover system

(or MTSE: Manual Transfer Switching Equipment)

The simplest way to switch the load. It is controlled manually by an operator. The time required to switch from the 'N' source to 'R' source can vary.

System

2 or 3 mechanically interlocked manually-operated circuit breakers or 2 switch-disconnectors.



2

Remote-operated source-changeover system

(or RTSE: Remote Transfer Switching Equipment)

The most commonly used system for devices with high ratings. No direct human intervention is required. Source-changeover is controlled electrically.



System

2 or 3 circuit breakers that may have different configurations, linked by an electrical interlocking system.

In addition, a mechanical interlocking system protects against electrical malfunctions or incorrect manual operations.



3

Automatic source-changeover system

(or ATSE: Automatic Transfer Switching Equipment)

An automatic controller may be added to a remote-operated source-changeover system. It is possible to automatically control source transfer according to programmed (dedicated controllers) or programmable (PLC) operating modes. These solutions ensure optimum energy management.

System

2 or 3 circuit breakers that may have different configurations, linked by an electrical interlocking system. A mechanical interlocking system protects against electrical malfunctions or incorrect manual operations, with an automatic control system (dedicated controllers or PLC).

Applications

Buildings and infrastructure where the need for continuity of service is significant but not a priority: offices, small and medium-sized businesses.




Applications

Industry (assembly lines, engine rooms on ships, critical auxiliaries in thermal powerstations, etc.);
Infrastructure (port and railway installations, runway lighting systems, control systems on military sites, etc.).



Applications

Commercial and service sector (operating rooms in hospitals, safety systems for buildings, computer rooms for banks and insurance companies, lighting and emergency lighting systems in malls, etc.),
industry and infrastructure.

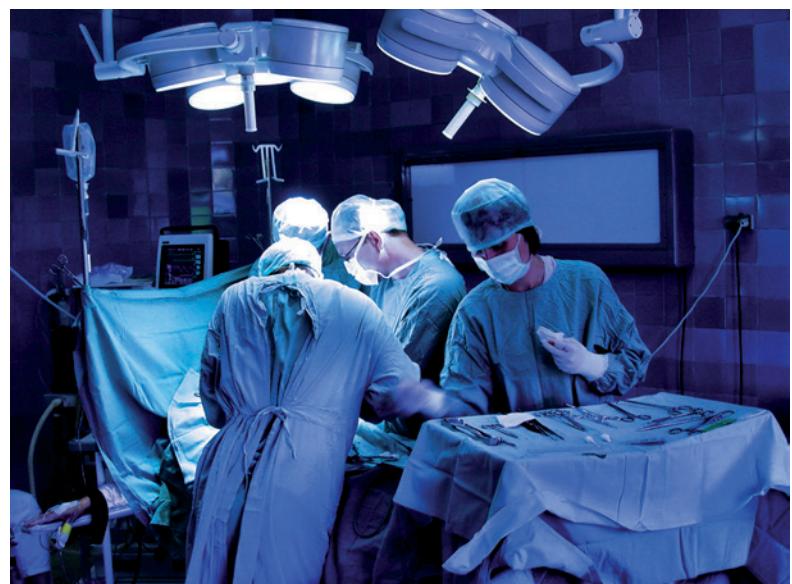

Whatever the system, you benefit from our expertise!



For many years Schneider Electric's source changeover system have proved their reliability everywhere around the world, in most power dependable buildings. Switching is performed by ComPact or MasterPact circuit breakers, the ultimate references in industrial switchgear.

Maximum continuity of service

- Energy availability is ensured whatever the external requirements (e.g. high power demand).
- Maintenance and replacement of the sources (N or R) can be done with no interruption of service.

You can maintain a continuous level of service and customer satisfaction.

Maximum safety

For LV electrical installations where safety and continuity of service are critical for people and/or equipment such as hospitals, airports, banks, malls, etc.

Optimized energy management

- Transfer the load to a replacement source according to external requirements.
- Manage power sources according to power quality and power costs.
- Perform system regulation.
- Switch to an emergency replacement source.

You are no longer dependent on your power supply (and supplier)!

Simplicity and reliability

- Simple installation on LV switchboard.
- Optimized size of the switchboard.
- System based on pre-tested components.
- Compliance with IEC 60947-6-1.

General contents

TransferPact

(Source-changeover systems)

Presentation

A

Functions and characteristics

B

Dimensions

C

Electrical diagrams

D

Catalog numbers and order forms


For maximum continuity of service...

Incoming feeders and main LV switchboards

PB115735.eps



Currents
From 630 to 6300 A.

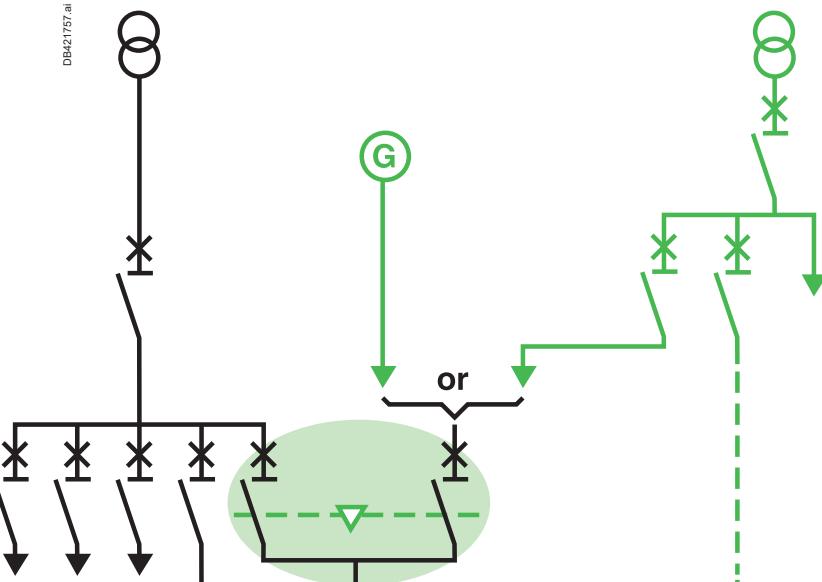


Power distribution

PB115734.eps



Currents
From 250 to 3200 A.

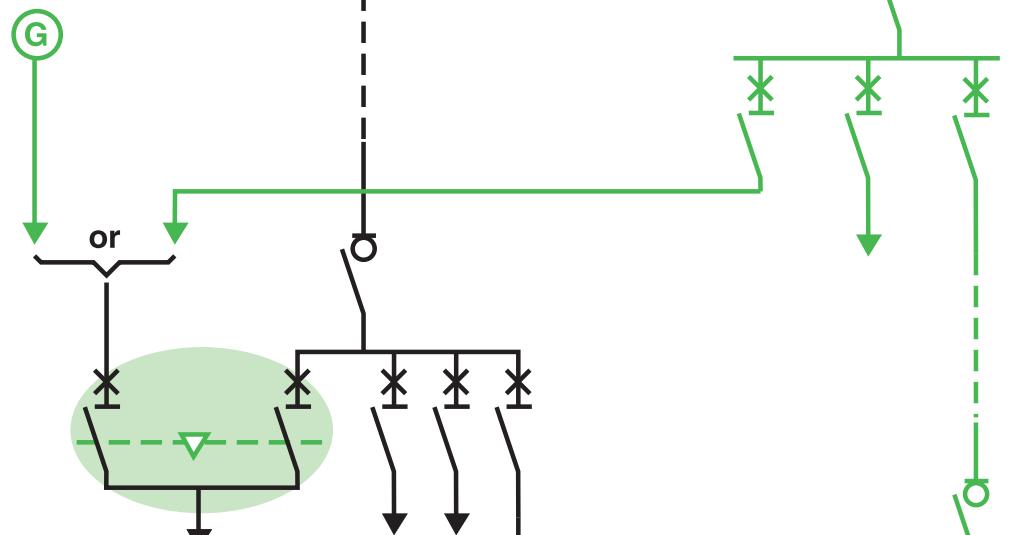


Loads




PB503346.eps




Currents
From 40 to 400 A.

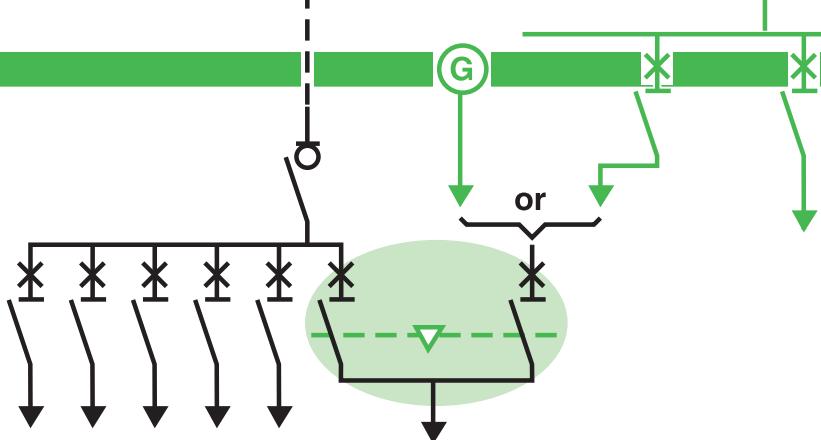

... in a wide range of applications

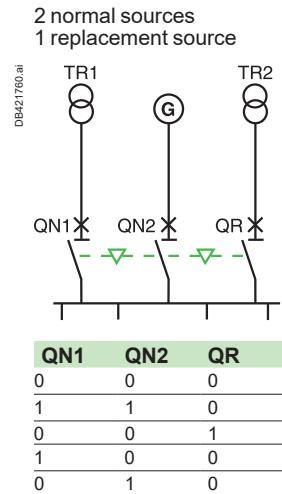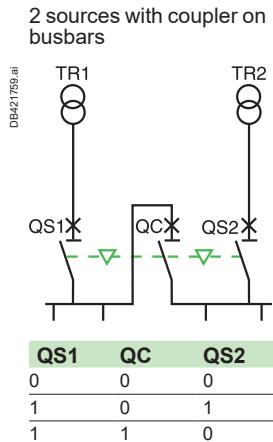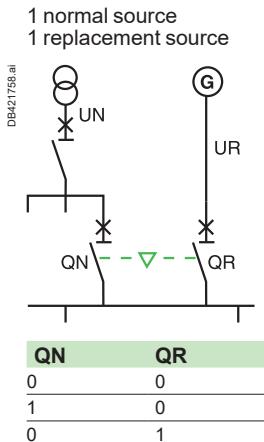



(1) possible by forcing operation.

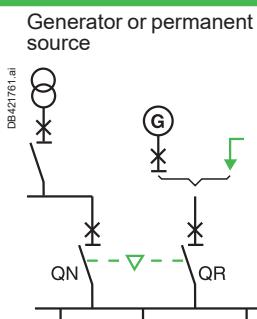

QN	QR
0	0
1	0
0	1

Typical applications:

- continuous production processes
- operating rooms
- computer rooms...

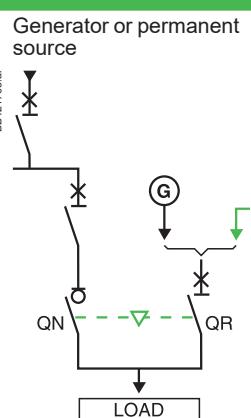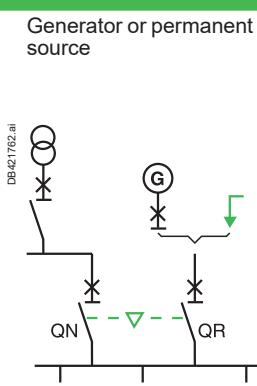

QN	QR
0	0
1	0
0	1

Typical applications:

- large electrical installations (e.g. airports)
- refrigeration units
- special electricity tariffs
- pumping stations...

Other informations

ComPact NSXm - NSX



> LVPED217032EN

ComPact INS/INV



> LVPED213024EN

ComPact NS



> LVPED211021EN

MasterPact MTZ



> LVPED216026EN

Functions and characteristics

Manual, Remote and Automatic Transfer Switch	A-2
Switching devices	
Class PC	A-4
TransferPact FXM100 to 630	
(complete source-changeover assembly).....	A-8
Class CB	A-12
TransferPact	
Mechanical interlocking.....	A-14
Electrical interlocking - IVE unit	A-20
TransferPact controllers	
Controller selection	A-22
Controller installation.....	A-23
BA controller.....	A-24
BA controller Operating sequences.....	A-25
UA controller	A-26
UA controller - Operating sequences, forced operation mode	A-27
UA controller - Operating sequences, special-tariff mode	A-28
UA controller - Operating sequences, test mode and automatic operation.....	A-29
UA/BA controller.....	A-30

A

Other chapters

Presentation.....	2
Dimensions.....	B-1
Electrical diagrams	C-1
Catalog numbers and order forms.....	D-1

Manual, Remote and Automatic Transfer Switch

Schneider Electric offers source change-over systems based on Compact and MasterPact devices. They are made of up to 3 circuit breakers or switch-disconnectors linked by an electrical interlocking system that may have different configurations. Moreover, a mechanical interlocking system must be added to protect against electrical malfunctions or incorrect manual operations. In addition, a controller can be used for automatically control the source transfer.


The following pages present the different solutions for mechanical and electrical interlocking and associated controllers.

A



Manual source-changeover system

(or MTSE: Manual Transfer Switching Equipment)

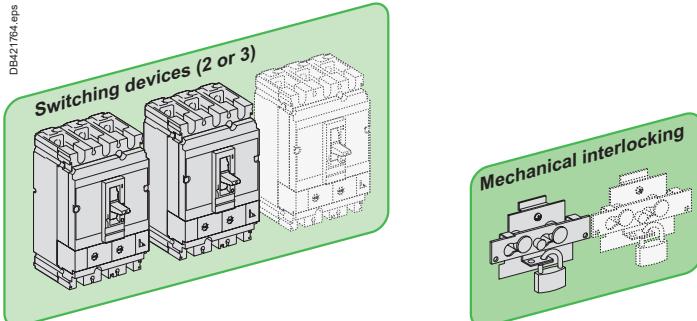




R/A

Remote-operated source-changeover system

(or RTSE: Remote Transfer Switching Equipment)

Automatic source-changeover system

(or ATSE: Automatic Transfer Switching Equipment)

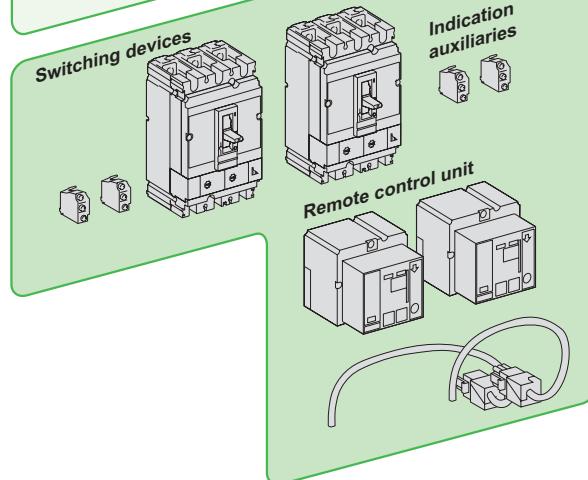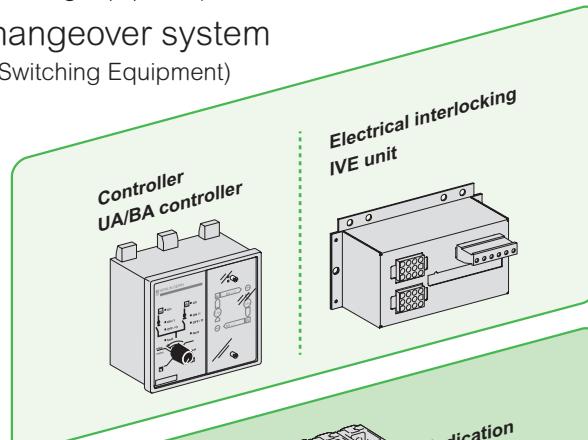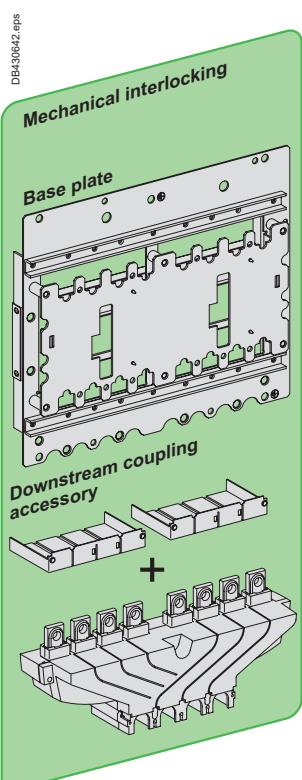

Manual, Remote and Automatic Transfer Switch

A

Switching devices

	Class PC	Class CB
ComPact INS/INV	A-4	-
ComPact NSX	A-5	A-12
ComPact NS	A-5	A-13
MasterPact MTZ1	A-5	A-13
MasterPact MTZ2/MTZ3	A-5	A-13
TransferPact FXM	A-6	A-6

Mechanical interlocking

Mechanical interlocks	A-14
Keylocks with captive keys	A-16
Cables or connecting rods	A-19

TransferPact Electrical interlocking

Electrical interlocking	
IVE unit + base plate	A-20
IVE unit, Operating sequences	A-21

TransferPact controller

With automatic controller	
Controller selection	A-22
Controller installation	A-23
BA controller	A-24
BA controller, Operating sequences	A-25
UA controller	A-26
UA controller, Operating sequences, Forced operation mode	A-27
UA controller, Operating sequences, Special-tariff mode	A-28
UA controller, Operating sequences, Test mode and automatic operation	A-29
UA/BA controller, Operating sequences	A-30

Informations

IEC 60947-6-1 applies to transfer switching equipment (TSE) to be used in power systems for transferring a load supply between a normal and an alternate source (other power supply or generator).

TSE is classified according to

- the method of controlling the transfer
- manually transfer switching equipment (MTSE)
- automatic transfer switching equipment (ATSE)
- their short circuit capability
- Class PC: TSE that is capable of making and withstanding, but not intended for breaking short-circuit currents.
Switch and switch-disconnectors are the most useful products used.
- Class CB: TSE that is capable of making, withstanding, it's intended for breaking short-circuit currents and is provided with over-current releases. Circuit breakers (air circuit breaker or moulded-case circuit breaker) are the most useful products used.

Functions and characteristics

Switching devices

Class PC

www.se.com

A

Range	ComPact INS	ComPact INS/INV
Types of devices	INS40 to INS80 INS100 to INS160	INS250 to INS630 INV100 to INV630
Mixing possibilities	All devices, not possible with a complete assembly source-changeover	All devices, not possible with a complete assembly source-changeover
Electrical characteristics		
Current rating	40 to 160 A	100 to 630 A
Insulating voltage U_i (V AC)	750	800
Rated operational voltage		
Positive break indication	■	■
Number of poles (N and R devices must have the same number of poles)	3, 4	3, 4
Operating temperature	-25 °C and +70 °C	-25 °C and +70 °C
Additional indication and control auxiliaries		
Indication contacts	OF	OF
Voltage releases	MX shunt MN undervoltage	
Voltage presence indicator	■	■
Voltage transformer		
Ammeter module	■	■
Insulation monitoring module		
Installation and connection		
Fixed front connected	■	■
Fixed rear connected	■	■
Withdrawable, plug-in or drawout		
Installation and connection accessories		
Downstream coupling accessory		■
Bare-cable connectors	■	■
Terminal extensions	■	■
Terminal shields and inter-phase barriers	■	■
Front panel escutcheons		■
Locking	by padlock by keylock	■

Range	ComPact NSX		ComPact NS		MasterPact	
Types of devices	NSX100 to NSX250		NSX400 to NSX630		NS630b to NS1600	
Mixing possibilities	all devices		all devices		all devices	
	NSX100NA to NSX250NA		NSX100NA to NSX630NA		NS630bNA to NS1600NA	
	fixed/fixed or plug-in/plug-in		fixed/fixed or plug-in/plug-in		fixed/fixed or plug-in/plug-in	
Electrical characteristics						
Current rating	15 to 250 A	15 to 630 A	250 to 1600 A	600 to 1600 A	800 to 6300 A	
Insulating voltage U_i (V AC)	750	750	750	1000	1000	
Rated operational voltage						
Positive break indication	■	■		■	■	
Number of poles (N and R devices must have the same number of poles)	3, 4	3, 4	3, 4	3, 4	3, 4	
Operating temperature	-25 °C to +70 °C (50 °C for 440 V - 60 Hz)		-25 °C to +70 °C (50 °C for 440 V - 60 Hz)		-25 °C to +70 °C	
Control characteristics						
Control voltage	AC	48 V - 50 Hz 110/130, 220/240, 380/440 V - 50/60 Hz	48 V - 50 Hz 110/130, 220/240, 380/440 V - 50/60 Hz		48 to 415 V - 50/60 Hz 440 V - 60 Hz	
	DC	24-250 V	24-250 V	24-250 V	24-250 V	24-250 V
Maximum consumption	AC	500 VA	500 VA	180 VA	180 VA	180 VA
	DC	500 W	500 W	180 W	180 W	180 W
Minimum switching time		800 ms	800 ms	800 ms	800 ms	800 ms
Protection and measurement						
Earth-leakage protection	by Vigi module	■	■			
	by control unit			■	■	
	by add-on VigiPact relay	■	■	■	■	
Current measurements			■	■	■	
Voltage, frequency, power measurements, etc.				■	■	
Additional indication and control auxiliaries						
Indication contacts		OF + SDE (+ SDV)	3 OF + SDE (+ SDV)	2 OF + SDE	2 OF + SDE	2 OF + SDE
Voltage releases	MX shunt	■	■	■	■	■
	MN undervoltage	■	■	■	■	■
Voltage presence indicator		■	■			
Voltage transformer		■	■			
Ammeter module		■	■			
Insulation monitoring module		■	■			
Installation and connection						
Fixed front connected				■	■	
Fixed rear connected		■ (long rear connections)	■ (long rear connections)	■ (vertical or horizontal)	■ (vertical or horizontal)	■ (vertical or horizontal)
Withdrawable, plug-in or drawout		■ (plug-in on base)	■ (plug-in on base)	■ (drawout)	■ (drawout)	■ (drawout)
Installation and connection accessories						
Downstream coupling accessory		■	■			
Bare-cable connectors		■	■	■		
Terminal extensions		■	■			
Terminal shields and inter-phase barriers			■			
Front panel escutcheons		■	■	■		
Locking	by padlock	■	■	■	■	
	by keylock	■	■	■	■	

Functions and characteristics Switching devices

www.se.com

Complete source changeover assembly

	TransferPact FXM100 to 250			TransferPact FXM320 to 630		
	Normal ON	OFF	Replacement ON	Normal ON	OFF	Replacement ON
Locking by padlocks	○	●	○	○	●	○
Locking by keylock	-	●	-	-	●	-
Door locking [1]	●	-	●	●	-	●
Door lock defeat [1]	● [2]	-	● [2]	● [2]	-	● [2]
Door locking device padlocked [1]	-	●	-	-	●	-
Lead-sealable handle	○	●	○	○	●	○

● Standard. ○ By simple modification of the standard rotary handle.

[1] With extended rotary control. [2] Using a special tool.

A



A

ComPact NSX and ComPact NS class PC and CB	NSX100 to 250	NSX400 to NSX630	NS630b to NS1600			
Number of poles	3, 4	3, 4	3, 4			
Rated current In (A)	100 to 250	400 to 630	630 to 1600			
Mechanical durability (O _N -C _R -O _R -C _N cycles)	20000 - 40000 - 50000	15000	8000			
Electrical durability at In (O _N -C _R -O _R -C _N cycles) for ≤ 440 V and 480 V NEMA [2]	10000 - 20000 - 30000	4000 - 6000	2000			
Electrical durability at In (O _N -C _R -O _R -C _N cycles) for U = 500 V to 690 V [2]	5000 - 7500 - 10000	2000 - 3000	1500			
MasterPact class PC and CB	MTZ1 06 to 10	MTZ1 12 to 16	MTZ2 08 to 16	MTZ2 20	MTZ2 25 to 40	MTZ3 40 to 63
Number of poles	3, 4	3, 4	3, 4	3, 4	3, 4	3, 4
Rated current In (A)	630 to 1600	1250 to 1600	800 to 1600	2000	2500 to 4000	4000 to 6300
Mechanical durability [1] (O _N -C _R -O _R -C _N cycles)	8000	8000	10000	10000	10000	5000
Electrical durability at In (O _N -C _R -O _R -C _N cycles) [1] for ≤ 440 V and 480 V NEMA [2]	6000	6000 MTZ1 16: 3000	10000	8000	5000	1500
Electrical durability at In (O _N -C _R -O _R -C _N cycles) [1] for U = 500 V to 690 V [2]	3000	2000 MTZ1 16: 1000	10000	6000	2500	1500

[1] Mechanical and electrical durability not applicable to MasterPact H3 and L versions.

[2] Electrical durability tests carried out with a power factor of 0.8 as per IEC 947-2.

Note:

ON: opening of N source

CR: closing of R source

OR: opening of R source

CN: closing of N source

TransferPact FXM100 to 630

(complete source-changeover assembly)

31141_Image.eps



A

Complete source-changeover assembly.

PB110856_60.eps



Coupling accessory.

FXM

Number of poles

Electrical characteristics as defined by IEC 60947-1 / 60947-6-1 and EN 60947-1 / 60947-6-1

Conventional thermal current (A)	I_{th}	at 60 °C
Conventional thermal current in enclosure	I_{the}	at 60 °C
Rated insulation level (V)	U_i	AC 50/60 Hz
Impulse-withstand voltage (kV)	U_{imp}	
Rated operational voltage (V)	U_e	AC 50/60 Hz DC
Rated operational voltage AC20 and DC20 (V)		AC 50/60 Hz
Rated operational current (A)	I_e	Electrical AC 50/60 Hz 220-240 V 380-415 V 440-480 V 500-525 V 660-690 V

Electrical DC

125 V (2P in series)
250 V (4P in series)

Rated duties

Uninterrupted duty

Intermittent duty

Short-circuit making capacity (kA peak)

I_{cm}Min. (switch-disconnector alone)
Max. (with upstream protection circuit breaker)

Short-time withstand current (A rms)

I_{cw}

1 s

3 s

20 s

30 s

Suitability for isolation

Durability (category A) (O - C-O cycles)

Mechanical

Electrical AC 50/60 Hz

440 V

500 V

690 V

Electrical DC

250 V

Positive contact indication

Visible break

Emergency-off switch-disconnector

Degree of pollution

Upstream protection

See the "Complementary technical information".

TransferPact FXM100 to 630

(complete source-changeover assembly)

FXM100		FXM160		FXM200		FXM250		FXM320		FXM400		FXM500		FXM630	
3-4		3-4		3-4		3-4		3-4		3-4		3-4		3-4	
100	160	200	250	320	400	500	630								
100	160	200	250	320	400	500	630								
750	750	750	750	750	750	750	750								
8	8	8	8	8	8	8	8								
690	690	690	690	690	690	690	690								
250	250	250	250	250	250	250	250								
750	750	750	750	750	750	750	750								
AC22A	AC23A														
100	100	160	160	200	200	250	250	320	320	400	400	500	500	630	630
100	100	160	160	200	200	250	250	320	320	400	400	500	500	630	630
100	100	160	160	200	200	250	250	320	320	400	400	500	500	630	630
100	100	160	160	200	200	250	250	320	320	400	400	500	500	630	630
100	100	160	160	200	200	250	250	320	320	400	400	500	500	630	630
DC22A	DC23A														
100	100	160	160	200	200	250	250	320	320	400	400	500	500	550	550
100	100	160	160	200	200	250	250	320	320	400	400	500	500	550	550
Class 120 - 60 %															
30	30	30	30	30	50	50	50	50	50	50	50	50	50	50	50
330	330	330	330	330	330	330	330	330	330	330	330	330	330	330	330
8500	8500	8500	8500	20000	20000	20000	20000								
4900	4900	4900	4900	11500	11500	11500	11500								
2200	2200	2200	2200	4900	4900	4900	4900								
1800	1800	1800	1800	4000	4000	4000	4000								
15000	15000	15000	15000	10000	10000	10000	10000								
AC22A	AC23A														
1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500
1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500
1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500
DC22A	DC23A	DC22A	DC23A	DC22A	DC23A	DC22A	DC23A	DC23A	DC23B	DC23A	DC23B	DC23A	DC23B	DC23A	DC23B
1500	1500	1500	1500	1500	1500	1500	1500	1000	-	1000	-	1000	-	1000	200
Class 120 - 60 %															
-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3
-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

A

TransferPact FXM100 to 630

(complete source-changeover assembly)

A

FXM	
Installation	
Fixed, front connection	
Fixed, rear connection	
On symmetrical rails	
On a backplate	
Connection	
By cables	To bare cable connectors
By cables with lugs	Directly to terminals To spreaders To vertical-connection adapters via cable-lug adapters
Flat-facing bars	Directly to terminals To spreaders
Edgewise bars	To vertical-connection adapters
Indication and measurement auxiliaries	
Auxiliary contacts	
Voltage-presence indicator	
Current-transformer module	
Ammeter module	
Control, locking and interlocking	
Control	Direct front rotary handle Extended front rotary handle Direct lateral rotary handle Extended lateral rotary handle
Interlocking	By keylock Mechanical
Complete source-changeover assembly	
Operating torque (Nm) (typical value for 3-4 poles with front handle)	
Installation and connection accessories	
Bare cable connectors	
Rear connectors	
Terminal extensions	
Spreaders	
One-piece spreader	
Terminal shrouds	
Terminal shields	
Interphase-barrier	
Front panel escutcheons	
Coupling accessories	
Tightening torque for electrical connections (Nm)	
Dimensions and weights	
Overall dimensions H x W x D (mm)	3 poles 4 poles
Approximate weight (kg)	3 poles 4 poles

TransferPact FXM100 to 630 (complete source-changeover assembly)

FXM100	FXM160	FXM200	FXM250	FXM320	FXM400	FXM500	FXM630
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
-	-	-	-	-	-	-	-
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
-	-	-	-	-	-	-	-
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
-	-	-	-	-	-	-	-
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
-	-	-	-	-	-	-	-
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
5 < Nm < 6.2	13.5 < Nm < 16.5						
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
-	-	-	-	-	-	-	-
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
15	15	15	15	50	50	50	50
136 x 295 x 131	205 x 395 x 155						
136 x 295 x 131	205 x 395 x 155						
6.4	6.4	6.4	6.4	13.5	13.5	13.5	13.5
6.4	6.4	6.4	6.4	13.5	13.5	13.5	13.5

A

Switching devices

Class CB

A

Range		ComPact NSX	
Types of devices		NSX100 to NSX250	NSX400 to NSX630
Mixing possibilities		all devices NSX100 to NSX250 N/H/L fixed/fixed or plug-in/plug-in	all devices NSX100 to NSX630 N/H/L fixed/fixed or plug-in/plug-in
Electrical characteristics			
Current rating		15 to 250 A	15 to 630 A
Insulating voltage U_i (V AC)		750	750
Rated operational voltage			
Positive break indication		■	■
Number of poles (N and R devices must have the same number of poles)		3, 4	3, 4
Operating temperature		-25 °C to +70 °C (50 °C for 440 V - 60 Hz)	
Motor mechanism			
Control voltage	AC	48 V - 50 Hz 110/130, 220/240, 380/440 V - 50/60 Hz	48 V - 50 Hz 110/130, 220/240, 380/440 V - 50/60 Hz
	DC	24-250 V	24-250 V
Maximum consumption	AC	500 VA	500 VA
	DC	500 W	500 W
Minimum switching time		800 ms	800 ms
Protection and measurement			
Earth-leakage protection	by Vigi module by control unit by add-on VigiPact relay	■ ■ ■	■ ■ ■
Current measurements			
Voltage, frequency, power measurements, etc.			
Additional indication and control auxiliaries			
Indication contacts		OF + SDE (+ SDV)	3 OF + SDE (+ SDV)
Voltage releases	MX shunt MN undervoltage	■ ■	■ ■
Voltage presence indicator		■	■
Voltage transformer		■	■
Ammeter module		■	■
Insulation monitoring module		■	■
Installation and connection			
Fixed front connected			
Fixed rear connected		■ (long rear connections)	■ (long rear connections)
Withdrawable, plug-in or drawout		■ (plug-in on base)	■ (plug-in on base)
Installation and connection accessories			
Downstream coupling accessory		■	■
Bare-cable connectors		■	■
Terminal extensions		■	■
Terminal shields and inter-phase barriers		■	■
Front panel escutcheons		■	■
Locking	by padlock by keylock	■ ■	■ ■
ComPact NSX			
		NSX100-250	NSX400 to NSX630
Rated current I_{N} (A)		100 to 250	400 to 630
Mechanical durability ($O_N-C_R-O_R-C_N$ cycles) [1]		20000 - 40000 - 50000	15000
Electrical durability at I_{N} ($O_N-C_R-O_R-C_N$ cycles) [1] for $\leq 440 \text{ V}$ and 480 V NEMA [2]		10000 - 20000 - 30000	4000 - 6000
Electrical durability at I_{N} ($O_N-C_R-O_R-C_N$ cycles) [1] for $U = 500 \text{ V}$ to 690 V [2]		5000 - 7500 - 10000	2000 - 3000

[1] Mechanical and electrical durability not applicable to MasterPact H3 and L1 versions, please refer to the MasterPact NT/NW catalog.

[2] Electrical durability tests carried out with a power factor of 0.8 as per IEC 947-2.

Note:

ON: opening of N source

CR: closing of R source

OR: opening of R source










CN: closing of N source

A

ComPact NS			MasterPact MTZ1			MasterPact MTZ2/MTZ3		
NS630b to NS1600 all devices NS630b to 1600 N/H/L fixed/fixed or plug-in/plug-in			MTZ1 06 to 16 all mixing possibilities (fixed, drawout or fixed + drawout) H1/H2/H3/L1			MTZ2 08 to 40 and MTZ3 40 to 63 all mixing possibilities (fixed, drawout or fixed + drawout) N1/H1/H2/H3/L1/H10 for MTZ2 H1/H2 for MTZ3		
250 to 1600 A 750			600 to 1600 A 1000			800 to 6300 A 1000		
3, 4			3, 4			3, 4		
-25 °C to +70 °C								
48 to 415 V - 50/60 Hz 440 V - 60 Hz			48 to 415 V - 50/60 Hz 440 V - 60 Hz			48 to 415 V - 50/60 Hz 440 V - 60 Hz		
24-250 V 180 VA			24-250 V 180 VA			24-250 V 180 VA		
180 W 800 ms			180 W 800 ms			180 W 800 ms		
2 OF + SDE			2 OF + SDE			2 OF + SDE		
ComPact NS			MasterPact MTZ1/MTZ2/MTZ3					
NS630b to NS1600		MTZ1 06 to 10	MTZ1 12 to 16	MTZ2 08 to 16	MTZ2 20	MTZ2 25 to 40	MTZ3 40 to 63	
630 to 1600		630 to 1600	1250 to 1600	800 to 1600	2000	2500 to 4000	4000 to 6300	
8000		8000	8000	10000	10000	10000	5000	
2000		6000	6000	10000	8000	5000	1500	
1500		3000	3000	10000	6000	2500	1500	














TransferPact

Mechanical interlocking

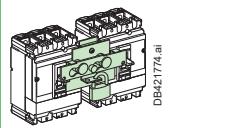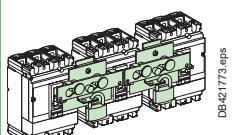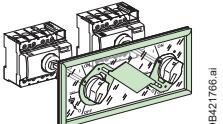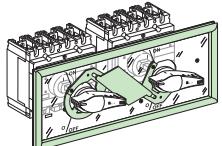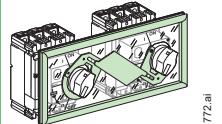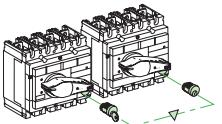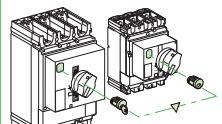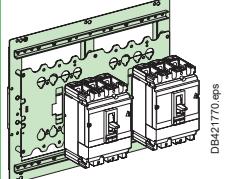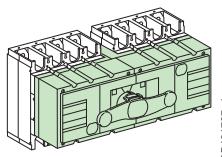Range	ComPact		ComPact
Models	INS40 to INS80 INS100 to INS160	INS250 to INS630 INV250 to INV630	NSX100 to NSX250 NSX400 to NSX630
Current rating (A)	40 to 160	100 to 630	100 to 630
Type of device	Class PC	Class PC	Class PC and Class CB
Interlocking by toggles			 DB421774.ai  DB421773.eps
M			
Interlocking by rotary handles	 DB421766.ai	 DB421769.ai	 DB421772.ai
M			
Interlocking by keylocks with captive keys		 DB421768.eps	 DB421771.ai
M			
Interlocking by a base plate			 DB421770.eps
A			
Range	TransferPact FXM complete source - changeover assembly		
M		 DB421767.ai	

TransferPact

Mechanical interlocking

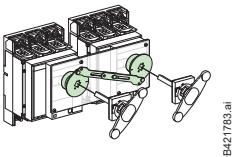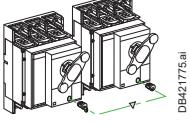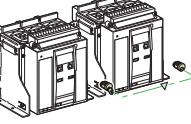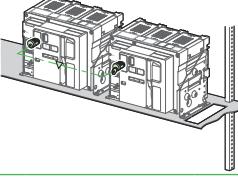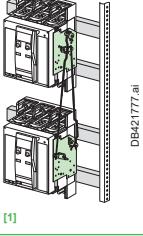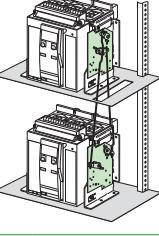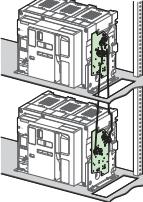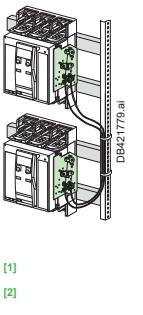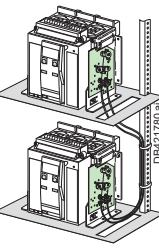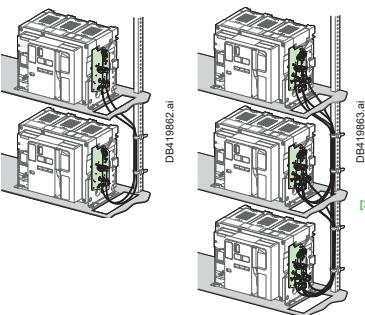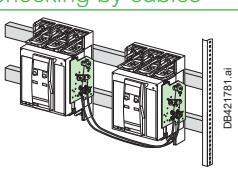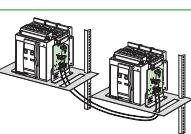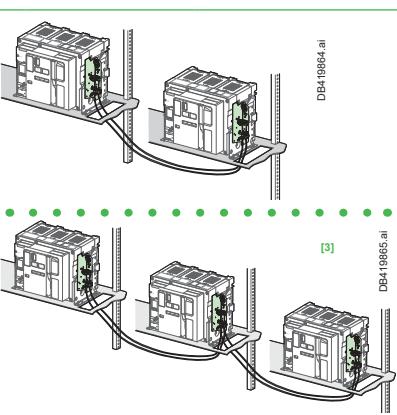Range	ComPact	MasterPact	
Models	NS630b to NS1600	MTZ1 06 to 16	MTZ2 08 to 40 and MTZ3 40 to 63
Current rating (A)	630b to 1600	630 to 1600	800 to 6300
Type of device	Class PC and Class CB	Class PC and Class CB	Class PC and Class CB
Interlocking by extended rotary handles	 M		
Interlocking via device keylocks by captive keys	 M		
Mechanical interlocking using connecting rods	 MA [1]		
Mechanical interlocking by cables	 MA [1] [2]		 [3]
Mechanical interlocking by cables	 MA		 [3]

[1] Implemented with NS630b to NS1600 electrically-operated devices only.


[2] For source-changeover systems using cables, always respect the installation conditions specified on.

[3] Not compatible with automatic controller.


Note: for other cases, please consult us.

TransferPact

Mechanical interlocking

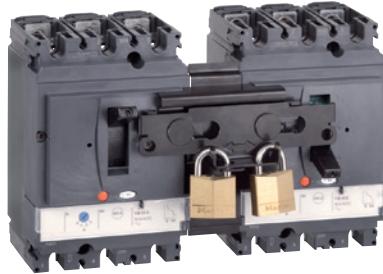

Interlocking of two or three toggle-controlled devices.

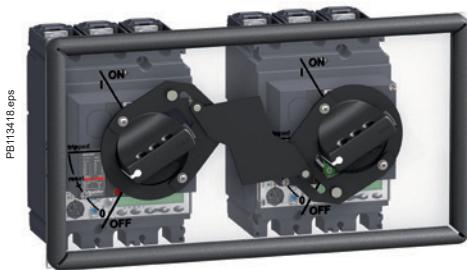

Interlocking of two devices by rotary handles.



Interlocking with keylocks.



Source-changeover.

Interlocking of two or three toggle-controlled devices

Interlocking system

Two devices can be interlocked using this system. Two identical interlocking systems can be used to interlock three devices installed side by side.

Authorized positions:

- one device closed (ON), the others open (OFF)
- all devices open (OFF).

The system is locked using one or two padlocks (Ø5 to 8 mm).

This system can be expanded to more than three devices.

There are two interlocking-system models:

- one for ComPact INS/INV
- one for ComPact NSX100 to NSX250
- one for ComPact NSX400 to NSX630.

Combinations of Normal and Replacement devices

All toggle-controlled fixed or plug-in ComPact NSX100 to NSX630 circuit breakers and switch-disconnectors of the same frame size can be interlocked. The devices must be either all fixed or all plug-in versions.

Interlocking of two devices by rotary handles

Interlocking system

Interlocking involves padlocking the rotary handles on two devices which may be either circuit breakers or switch-disconnectors.

Authorized positions:

- one device closed (ON), the other open (OFF)
- both devices open (OFF).

The system is locked using up to three padlocks (Ø5 to 8 mm).

There are two interlocking-system models:

- one for ComPact INS/INV
- one for ComPact NSX100 to NSX250
- one for ComPact NSX400 to NSX630.

Combinations of Normal and Replacement devices

All rotary-handle fixed or plug-in ComPact NSX100 to NSX630 circuit breakers and switch-disconnectors of the same frame size can be interlocked. The devices must be either all fixed or all plug-in versions.

Interlocking of devices by keylocks (captive keys)

Interlocking using keylocks is very simple and makes it possible to interlock two or more devices that are physically distant or that have very different characteristics, for example medium-voltage and low-voltage devices or a ComPact NSX100 to NSX630 switch-disconnector and circuit breaker.

Interlocking system

Each device is equipped with an identical keylock and the key is captive on the closed (ON) device. A single key is available for all devices. It is necessary to first open (OFF position) the device with the key before the key can be withdrawn and used to close another device.

A system of wall-mounted captive key boxes makes a large number of combinations possible between many devices.

Combinations of Normal and Replacement devices

All rotary-handle ComPact NSX100 to NSX630 circuit breakers and switch-disconnectors can be interlocked between each other or with any other device equipped with the same type of keylock.

TransferPact FXM (complete manual source-changeover assembly)

These assemblies provide an easy way to implement source changeover functions with:

- a single 3-position rotary handle that controls the two switch-disconnectors (Normal source ON, OFF, Replacement source ON)
- a smaller size, taking up less room in the switchboard.

A complete source changeover assembly can be ordered with a single catalog number.

TransferPact

Mechanical interlocking

A

Interlocking of two devices by base plate

Interlocking system

A base plate designed for two ComPact NSX devices can be installed horizontally or vertically on a mounting rail. Interlocking is carried out on the base plate by a mechanism located behind the devices. In this way, access to the device controls and trip units is not blocked.

Combinations of Normal and Replacement devices

All rotary-handle and toggle-controlled ComPact NSX100 to NSX630 circuit breakers and switch-disconnectors can be interlocked. Devices must be either all fixed or all plug-in versions, with or without earth-leakage protection or measurement modules. An adaptation kit is required to interlock:

- two plug-in devices
- a ComPact NSX100 to NSX250 with an NSX400 to NSX630.

Connection to the downstream installation can be made easier using a coupling accessory.

Downstream coupling accessory

This accessory simplifies connection to bars and cables with lugs.

It may be used to couple two switch-disconnectors and circuit breakers of the same size, ComPact INS/INV100 to 630 and ComPact NSX100 to 630.

Pitch between outgoing terminals:

- ComPact INS250 and INV100 to 250: 35 mm
- ComPact INS/INV320 to INS/INV630: 45 mm
- ComPact NSX100 to NSX250: 35 mm
- ComPact NSX400 to NSX630: 45 mm.


For ComPact NSX circuit breakers, the downstream coupling accessory can be used only with **fixed versions**.

Connection and insulation accessories


The coupling accessory can be fitted with the same connection and insulation accessories as the circuit breakers and switch-disconnectors.

Possible uses	Downstream coupling	
	Possible mounting	Outgoing pitch (mm)
Manual source-changeover systems		
INS250 (100 to 250 A) with rotary handle	■	35
NSX100 to NSX250 with rotary handle	■	35
NSX100 to NSX250 on base plate with toggle control	■	35
INS400 to INS630 (320 to 630 A) with rotary handle	■	45
NSX400 to NSX630 with rotary handle	■	45
NSX400 to NSX630 on base plate with toggle control	■	45
TransferPact FXM (complete source-changeover assembly)		
FXM100 to 250	■	35
FXM320 to 630	■	45

Note: for usage of PowerTag NSX on NSX mounted on interlocking plate, please consult us.

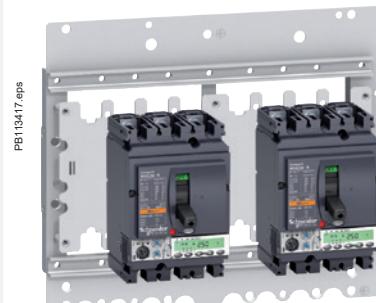

Interlocking on a base plate.

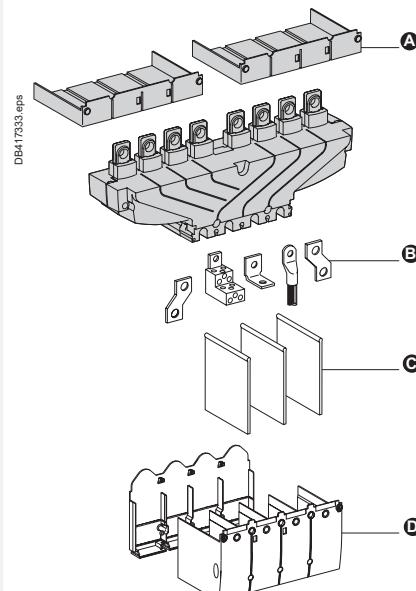

A Short terminal shields

B Terminals

C Interphase barriers

D Long terminal shields


TransferPact

Mechanical interlocking

For implementing the mechanical interlocking, two different possibilities are offered:

- interlocking with rods
- interlocking with cables.

A

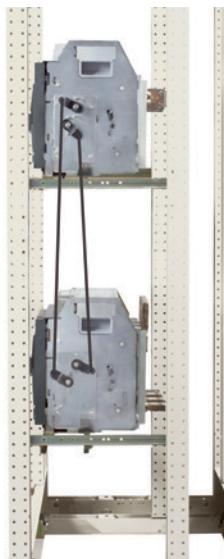

Interlocking of two MasterPact MTZ1, MTZ2/
MTZ3 circuit breakers
using connecting rods.

Interlocking with rods

Interlocking of two ComPact NS630b to 1600 devices using connecting rods

Both devices must be installed one above the other.

For ComPact NS, only associations between similar type devices are allowed (2 fixed or 2 drawout devices).

Installation

This function requires:

- an adaptation fixture on the right side of each circuit breaker or switch-disconnector
- a set of connecting rods with no-slip adjustments.

The adaptation fixtures, connecting rods and circuit breakers or switch-disconnectors are supplied separately, ready for assembly.

The maximum vertical distance between the fixing plates is 900 mm.

Possible combinations of "S1" and "S2" source circuit breakers

Combinations are possible between ComPact NS devices and between ComPact NS devices with MasterPact MTZ1 devices (either 2 fixed or 2 withdrawable/drawout devices).

Interlocking of two MasterPact MTZ using connecting rods

Both devices must be installed one above the other.

For MasterPact MTZ1 only associations between similar type devices are allowed (2 fixed or 2 drawout devices).

For MasterPact MTZ2 and MTZ3, all mixed associations between fixed type and drawout type devices are possible.

		Source 2							
		Fixed			Drawout				
Source 1		NS630b to NS1600	MTZ1	MTZ2	MTZ3	NS630b to NS1600	MTZ1	MTZ2	MTZ3
		Fixed							
NS630b to NS1600		○	○						
MTZ1		○	○						
MTZ2			○	○			○	○	
MTZ3			○	○			○	○	
Drawout									
NS630b to NS1600					○	○			
MTZ1					○	○			
MTZ2			○	○			○	○	
MTZ3			○	○			○	○	

Installation

This function requires:

- an adaptation fixture on the right side of each circuit breaker or switch-disconnector
- a set of connecting rods with no-slip adjustments
- a mechanical operation counter CDM (mandatory).

The adaptation fixtures, connecting rods, circuit breakers and switch-disconnectors are supplied separately, ready for assembly.

The maximum vertical distance between the fixing plates is 900 mm.

TransferPact

Mechanical interlocking

Interlocking with cables

Interlocking of two ComPact NS630b to 1600 devices using cables

For cable interlocking, the circuit breakers may be mounted one above the other or side-by-side.

The interlocked devices may be fixed or drawout, three-pole or four-pole, and have different ratings and sizes.

Installation

This function requires:

- an adaptation fixture on the right side of each device
- a set of cables with no-slip adjustments.

The maximum distance between the fixing plates (vertical or horizontal) is 2000 mm.

Possible combinations of "S1" and "S2" source circuit breakers

All mixed associations between ComPact NS 630b to 1600 and MasterPact MTZ1 or MTZ2 or MTZ3 fixed type and drawout type devices are possible.

Interlocking of two or three MasterPact MTZ using cables

For cable interlocking, the circuit breakers can be installed either one above the other or side-by-side. All mixed associations between MasterPact MTZ1, MTZ2, MTZ3 fixed type and drawout type devices are possible.

Note: mechanical interlocking for 3 devices is only possible with MTZ2 and MTZ3.

Interlocking between two MasterPact MTZ1, MTZ2, MTZ3 devices

This function requires:

- an adaptation fixture on the right side of each device
- a set of cables without slip adjustments
- a mechanical operation counter CDM (mandatory).

The maximum distance between the fixing plates (vertical or horizontal) is 2000 mm.

Interlocking between three MasterPact MTZ2, MTZ3 devices

This function requires:

- a specific adaptation fixture installed on the right side of each device
- two sets of cables without slip adjustments
- a mechanical operation counter CDM (mandatory).

The maximum distance between the fixing plates (vertical or horizontal) is 1000 mm.

Installation

The adaptation fixtures, sets of cables and circuit breakers or switch-disconnectors are supplied separately, ready for assembly.

Installation conditions for cable interlocking systems:

- cable length: 2.5 m
- cable bending radius: greater than 100 mm
- maximum number of curves: 3.

Note: for cable length higher than 2.5 m please consult us before ordering the circuit breakers for a customized solution.

Choice criteria

In applications where the continuity of service is critical^[1] (data centers, airports, hospitals, marine, oil&gas, process industry, etc.), mechanical interlocking by rods and drawout devices are strongly recommended.

Mechanical interlocking by rods is preferred as less energy is consumed by friction, so it has less effect on the circuit breaker closing energy.


In terms of breaker mounting type, the drawout version is preferred as :

- it provides mechanical isolation of the circuit breaker from possible external stress on the terminals by having a flexible connection at cluster level
- it allows simple and total access for periodic maintenance
- it allows quick replacement of the device if necessary.


When not possible, cable interlocking or fixed versions can be used, but the installation rules detailed in the 2 sections below must be strictly respected and mainly:

- the busbars or the cables used for power connection must apply no stress on the circuit breaker terminals.

Their weight must be supported by the switchboard frame.

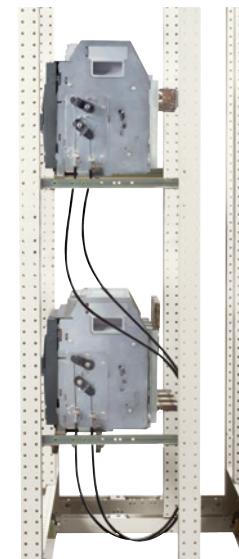

Interlocking of two MasterPact circuit breakers using cables.

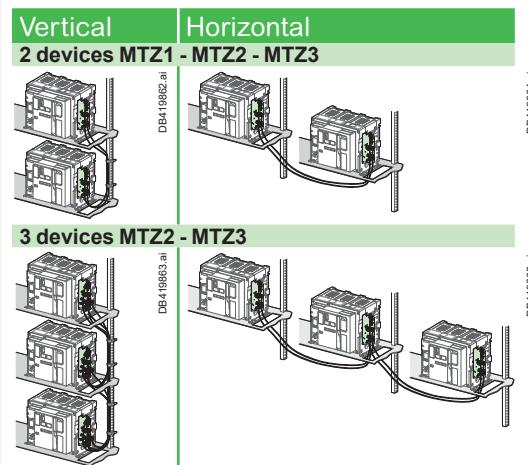

[1] For more details please contact your local support.

Note: for more details on installation rules, please also refer to "MasterPact MTZ User Guide".

TransferPact

Electrical interlocking - IVE unit

Electrical interlocking is used with a mechanical interlocking system. Moreover, the relays controlling the closing order to the "N" and "R" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

A

Electrical interlocking is carried out by an electrical control device.

For ComPact NSX up to 630 A, electrical interlocking is implemented by the IVE unit integrating control circuits and an external terminal block in accordance with the [page C-4](#) of the chapter "Electric diagrams" of this catalog. The integrated control circuits implement the time delays required for correct source transfer.

For ComPact NS630b to NS1600 and MasterPact, this function can be implemented in one of two ways:

- using the IVE unit
- by an electrician based on the diagrams in accordance with the [pages C-8 to C-13](#) of the chapter "Electric diagrams" of this catalog.

Characteristics of the IVE unit




IVE unit.

PB19174.eps

- External connection terminal block:
- inputs: circuit breaker control signals
- outputs: status of the SDE contacts on the "N" and "R" source circuit breakers.
- 2 connectors for the two "N" and "R" source circuit breakers:
- inputs:
 - status of the OF contacts on each circuit breaker (ON or OFF)
 - status of the SDE contacts on the "N" and "R" source circuit breakers
- outputs: power supply for operating mechanisms.
- Control voltage:
 - 24 to 250 V DC
 - 48 to 415 V 50/60 Hz - 440 V 60 Hz.

The IVE unit control voltage must be same as that of the circuit breaker operating mechanisms.

IVE unit

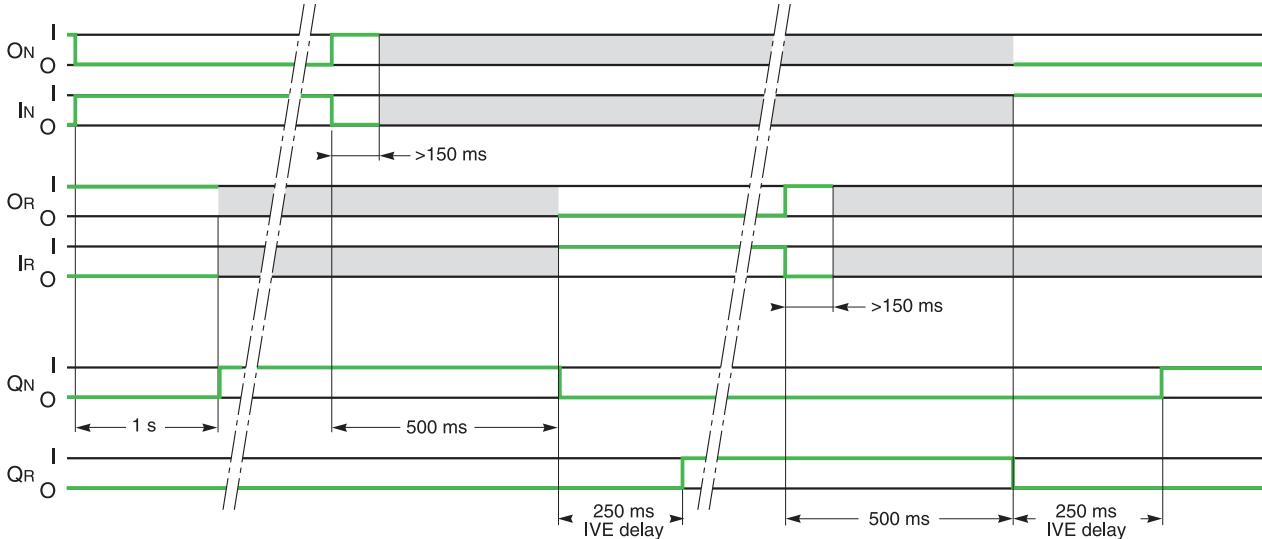

Symbols

QN: "Normal" ComPact circuit breaker equipped for remote operation (motor mechanism)

QR: "Replacement" ComPact circuit breaker equipped for remote operation (motor mechanism)

ON: Circuit breaker QN opening order

OR: Circuit breaker QR opening order

Key

O: OFF (circuit open)

I: ON (circuit closed)

: either ON or OFF.

IN: Circuit breaker QN closing order

IR: Circuit breaker QR closing order

L1: Faulty "Normal" indication LED

L2: Faulty "Replacement" indication LED

Note: following all trips (overload, short-circuit, earth-leakage fault, voluntary trip), a manual reset on the front of the motor mechanism is required.

TransferPact

Electrical interlocking - IVE unit

A

Necessary equipment

For ComPact NSX100 to NSX630, each circuit breaker must be equipped with:

- a motor mechanism
- an OF contact
- an SDE contact.

The components are supplied ready for assembly and the circuit breakers prewired. The prewiring must not be modified.


For ComPact NS630b to NS1600, each circuit breaker must be equipped with:

- a motor mechanism
- an available OF contact
- a CE connected-position contact (carriage switch) on withdrawable circuit breakers
- an SDE contact.

For MasterPact MTZ, each circuit breaker must be equipped with:


- a remote-operation system made up of:
 - MCH gear motor
 - MX or MN opening release
 - XF closing release
 - PF "ready to close" contact
- CDM mechanical operation counter (mandatory)
- an available OF contact
- one to three CE connected-position contacts (carriage switches) on drawout circuit breakers (depending on the installation).

DB42306.ai

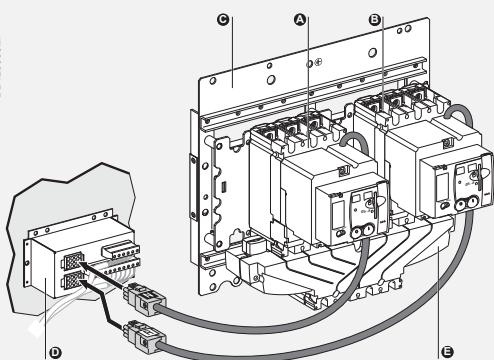

ComPact NSX

DB423007.ai

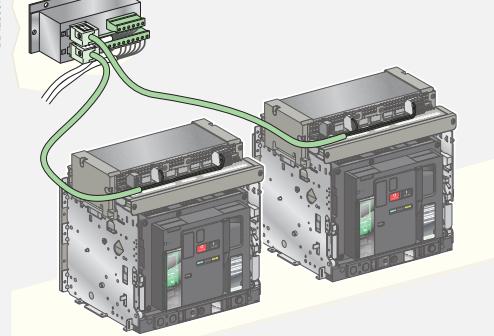

MasterPact MTZ

- A** Circuit breaker QS1 equipped with a motor mechanism and auxiliary contacts, connected to the N source
- B** Circuit breaker QS2 equipped with a motor mechanism and auxiliary contacts, connected to the R source
- C** Base plate with mechanical interlocking
- D** Electrical interlocking unit IVE
- E** Coupling accessory (downstream connection)

TransferPact controllers

Controller selection

By combining a remote-operated source-changeover system with an integrated BA or UA automatic controller, it is possible to automatically control source transfer according to user-selected sequences.

These controllers can be used on source-changeover systems comprising 2 circuit breakers.

For source-changeover systems comprising 3 circuit breakers, the automatic control diagram must be prepared by the installer as a complement to diagrams provided in the "electrical diagrams" section of this catalog.

A



BA controller.



UA controller.

Controller	BA	UA
Compatible circuit breakers	All ComPact NS, ComPact NSX and MasterPact circuit breakers	
4-position switch		
Automatic operation	●	●
Forced operation on "Normal" source	●	●
Forced operation on "Replacement" source	●	●
Stop (both "Normal" and "Replacement" sources off)	●	●
Automatic operation		
Monitoring of the "Normal" source and automatic transfer	●	●
Generator set startup control		●
Delayed shutdown (adjustable) of generator set		●
Load shedding and reconnection of non-priority circuits		●
Transfer to the "Replacement" source if one of the phases of the "Normal" phase is absent		●
Test		
By opening the P25M circuit breaker supplying the controller	●	
By pressing the test button on the front of the controller		●
Indications		
Circuit breaker status indication on the front of the controller: on, off, fault trip	●	●
Automatic mode indicating contact	●	●
Other functions		
Selection of type of "Normal" source: single-phase or three-phase (for example, 220 V single-phase or 220 V three-phase)	●	
Voluntary transfer to "Replacement" source (e.g. energy management commands)	●	●
During peak-tariff periods (energy management commands) forced operation on "Normal" source if "Replacement" source not operational		●
Additional contact (not part of controller). Transfer to "Replacement" source only if contact is closed (e.g. used to test the frequency of UR).	●	●
Setting of maximum startup time for the replacement source		●
Power supply		
Control voltages [1]	110 V 220 to 240 V 50/60 Hz 380 to 415 V 50/60 Hz and 440 V 60 Hz	● ● ●
Operating thresholds		
Undervoltage	0.35 Un ≤ voltage ≤ 0.7 Un	● ●
Phase failure	0.5 Un ≤ voltage ≤ 0.7 Un	● ●
Voltage presence	voltage ≥ 0.85 Un	● ●
IP degree of protection (EN 60529) and IK degree of protection against external mechanical impacts (EN 50102)		
Front	IP40	● ●
Side	IP30	● ●
Connectors	IP20	● ●
Front	IK07	● ●
Characteristics of output contacts (dry, volt-free contacts)		
Rated thermal current (A)	8	
Minimum load	10 mA at 12 V	
Output contacts:	Position of the Auto/Stop switch Load shedding and reconnection order Generator set start order.	● ● ●
Utilisation category (IEC 947-5-1)	AC AC12 AC13 AC14 AC15	DC DC12 DC13
Operational current (A)	24 V 48 V 110 V 220/240 V 250 V 380/415 V 440 V 660/690 V	8 7 5 5 8 7 5 5 8 6 4 4 8 6 4 3 - - - - 5 - - - 4 - - - - - - -

[1] The controller is powered by the ACP control plate.
The same voltage must be used for the ACP plate, the IVE unit and the circuit breaker operating mechanisms.
If this voltage is the same as the source voltage, then the "Normal" and "Replacement" sources can be used directly for the power supply.
If not, an isolation transformer must be used.

Functions and characteristics

TransferPact controllers

Controller installation

A

TransferPact ACP control plate

The control plate provides in a single unit:

- protection for the BA or UA controller with two highly limiting P25M circuit breakers (infinite breaking capacity) for power drawn from the AC source
- control of circuit breaker ON and OFF functions via two relay contactors
- connection of the circuit breakers to the BA or UA controller via a built-in terminal block.

Control voltages

- 110 V 50/60 Hz.
- 220 to 240 V 50/60 Hz.
- 380 to 415 V 50/60 Hz and 440 V 60 Hz.

The same voltage must be used for the TransferPact ACP control plate, the controller and the circuit breaker operating mechanisms.

Installation


Connection between the TransferPact ACP control plate and the IVE unit may use:

- wiring done by the installer
- prefabricated wiring (optional).


Installation of the BA and UA controllers

The BA and UA controllers may be installed in one of two manners:

- directly mounted on the TransferPact ACP control plate
- mounted on the front panel of the switchboard
- if the length of the connection between the controller and the control plate (ACP) is less than or equal to 1 m, the connecting cable ref. 29368 can be ordered as an optional extra. Cables longer than 1 m, but not longer than 2 m will be the responsibility of the installer.

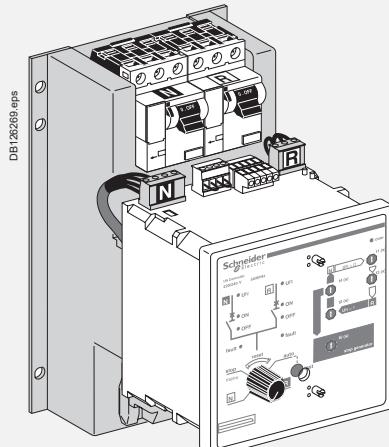

Mounting on the TransferPact ACP control plate.

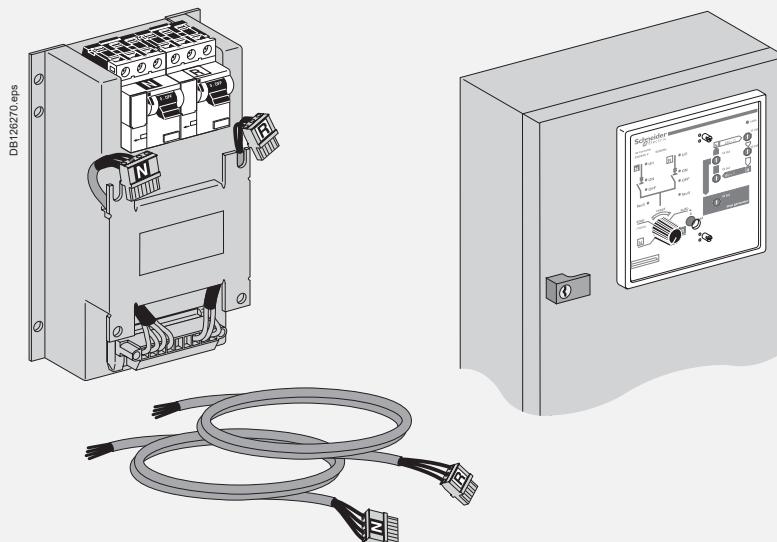

Mounting on the front panel of the switchboard.



TransferPact ACP control plate.


TransferPact controllers

BA controller

The BA controller is used to create simple source-changeover systems that switch from one source to another depending on the presence of voltage U_N on the "Normal" source.

It is generally used to manage two permanent sources and can control ComPact NS, ComPact NSX and MasterPact MTZ circuit breakers and switch-disconnectors.

A

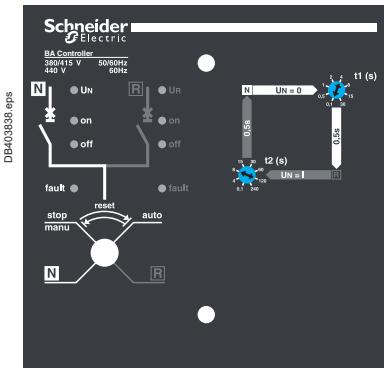

Front of the BA controller.

Operating modes

A four-position switch may be used to select:

- automatic operation
- forced operation on the "Normal" source
- forced operation on the "Replacement" source
- stop (both "Normal" and "Replacement" sources off).

Setting the time delays

Time delays are set on the front of the controller.

t₁. delay between detection that the "Normal" source has failed and the transmission of the order to open the "Normal" source circuit breaker (adjustable from 0.1 to 30 seconds).

t₂. delay between detection that the "Normal" source has returned and the transmission of the order to open the "Replacement" source circuit breaker (adjustable from 0.1 to 240 seconds).

Circuit breaker commands and status indications

The status of the circuit breakers is indicated on the front of the controller.

- ON, OFF, fault.

A built-in terminal block may be used to connect the following input/output signals:

- inputs:
 - voluntary order to transfer to source R (e.g. for special tariffs, etc.)
 - additional control contact (not part of the controller). Transfer to the "Replacement" source takes place only if the contact is closed (e.g. used to test the frequency of UR, etc.)
- outputs:
 - indication of operation in automatic or stop mode via changeover contacts.

Test

It is possible to test the operation of the BA controller by turning OFF (opening) the P25M circuit breaker for the "Normal" source and thus simulating a failure of voltage U_N .


Functions and characteristics

TransferPact controllers


BA controller

Operating sequences

Switch set to Auto (automatic operation and special-tariff mode)

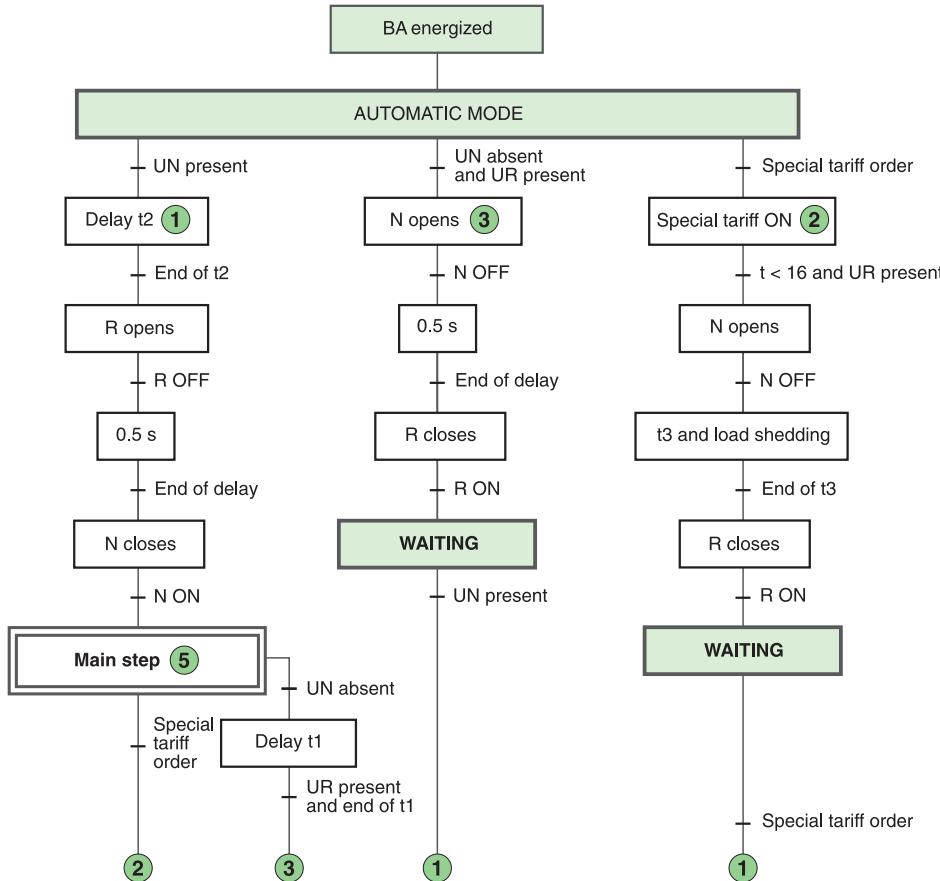


Switch set to the "N" position (forced operation on the "Normal" source)

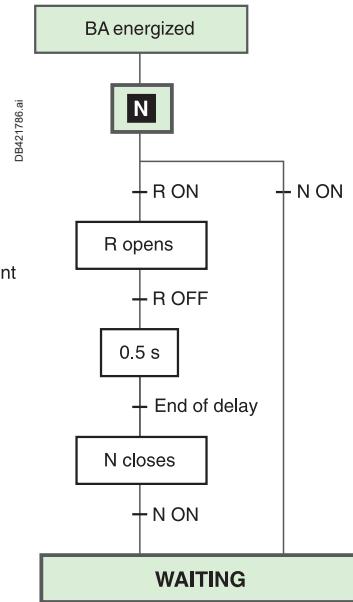


A

Switch set to the "R" position (forced operation on the "Replacement" source)

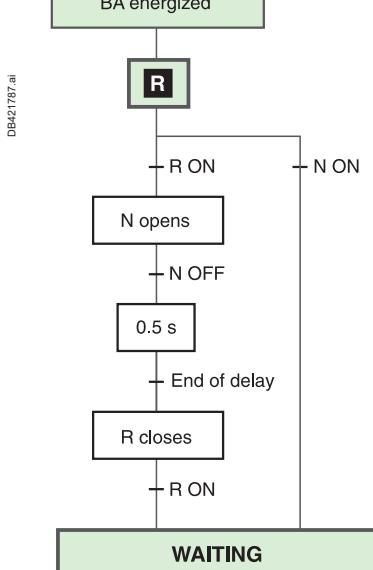

Switch set to the "Stop" position

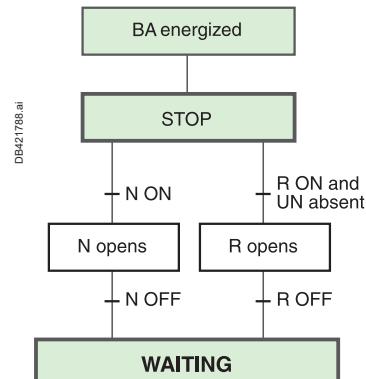

Key

- UN: "Normal" source voltage
- UR: "Replacement" source voltage
- N: "Normal" source circuit breaker
- R: "Replacement" source circuit breaker

① The number sends to the indicated step when the condition is true.

WAITING The system exits this mode when the operating mode is modified or when an external event occurs (e.g. failure or return of UN).

TransferPact controllers


UA controller

The UA controller is used to create a source-changeover system integrating the following automatic functions:

- transfer from one source to another depending on the presence of voltage UN on the “Normal” source
- startup of an engine generator set
- shedding and reconnection of non-priority circuits
- transfer to the “Replacement” source if one of the phases on the “Normal” source fails.

The UA controller can control ComPact NS, ComPact NSX and MasterPact MTZ devices.

A

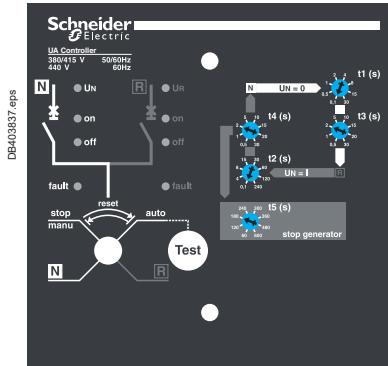

Front of the UA controller.

Operating modes

A four-position switch may be used to select:

- automatic operation
- forced operation on the “Normal” source
- forced operation on the “Replacement” source
- stop (both “Normal” and “Replacement” sources off, then manual operation).

Setting the time delays

Time delays are set on the front of the controller.

t1. delay between detection that the “Normal” source has failed and the transmission of the order to open the “Normal” source circuit breaker (adjustable from 0.1 to 30 seconds).

t2. delay between detection that the “Normal” source has returned and the transmission of the order to open the “Replacement” source circuit breaker (adjustable from 0.1 to 240 seconds).

t3. delay following opening of QN with load shedding and before closing of QR (adjustable from 0.5 to 30 seconds).

t4. delay following opening of QR with load reconnection and before closing of QN (adjustable from 0.5 to 30 seconds).

t5. delay for confirmation that UN is present before shutting down the engine generator set (adjustable from 60 to 600 seconds).

t6. delay before startup of the engine generator set (120 or 180 seconds).

Commands and indications

Circuit breaker status indications on the front of the controller:

- ON, OFF, fault.

A built-in terminal block may be used to connect the following input/output signals:

- inputs:
 - voluntary order to transfer to source R (e.g. for special tariffs, etc.)
 - additional control contact (not part of the controller). Transfer to the “Replacement” source takes place only if the contact is closed (e.g. used to test the frequency of UR, etc.)
- outputs:
 - control of an engine generator set (ON / OFF)
 - shedding of non-priority circuits
 - indication of operation in automatic mode via changeover contacts.

Distribution-system settings

Three switches are used to:

- select the type of “Normal” source, whether single-phase or three-phase (e.g. 240 V single-phase or 240 V three-phase)
- select whether to remain (or not) on the “Normal” source if the “Replacement” source is not operational during operation on special tariffs
- select the maximum permissible startup time for the engine generator set during operation on special tariffs (120 or 180 seconds).

Test


A pushbutton on the front of the controller may be used to test transfer from the “Normal” source to the “Replacement” source, then the return to the “Normal” source. The test lasts approximately three minutes.

COM communications option

Using the internal bus protocol, this option may be used to remote the following information:

- circuit breaker status (ON, OFF, fault trip)
- presence of the “Normal” and “Replacement” voltages
- presence of an order for forced operation (e.g. special tariffs)
- settings and configuration information
- status of non-priority circuits (loads shed or not)
- position of the switch (stop, auto, forced operation on the “Normal” source, forced operation on the “Replacement” source).

Functions and characteristics
TransferPact controllers
UA controller
Operating sequences, forced operation mode

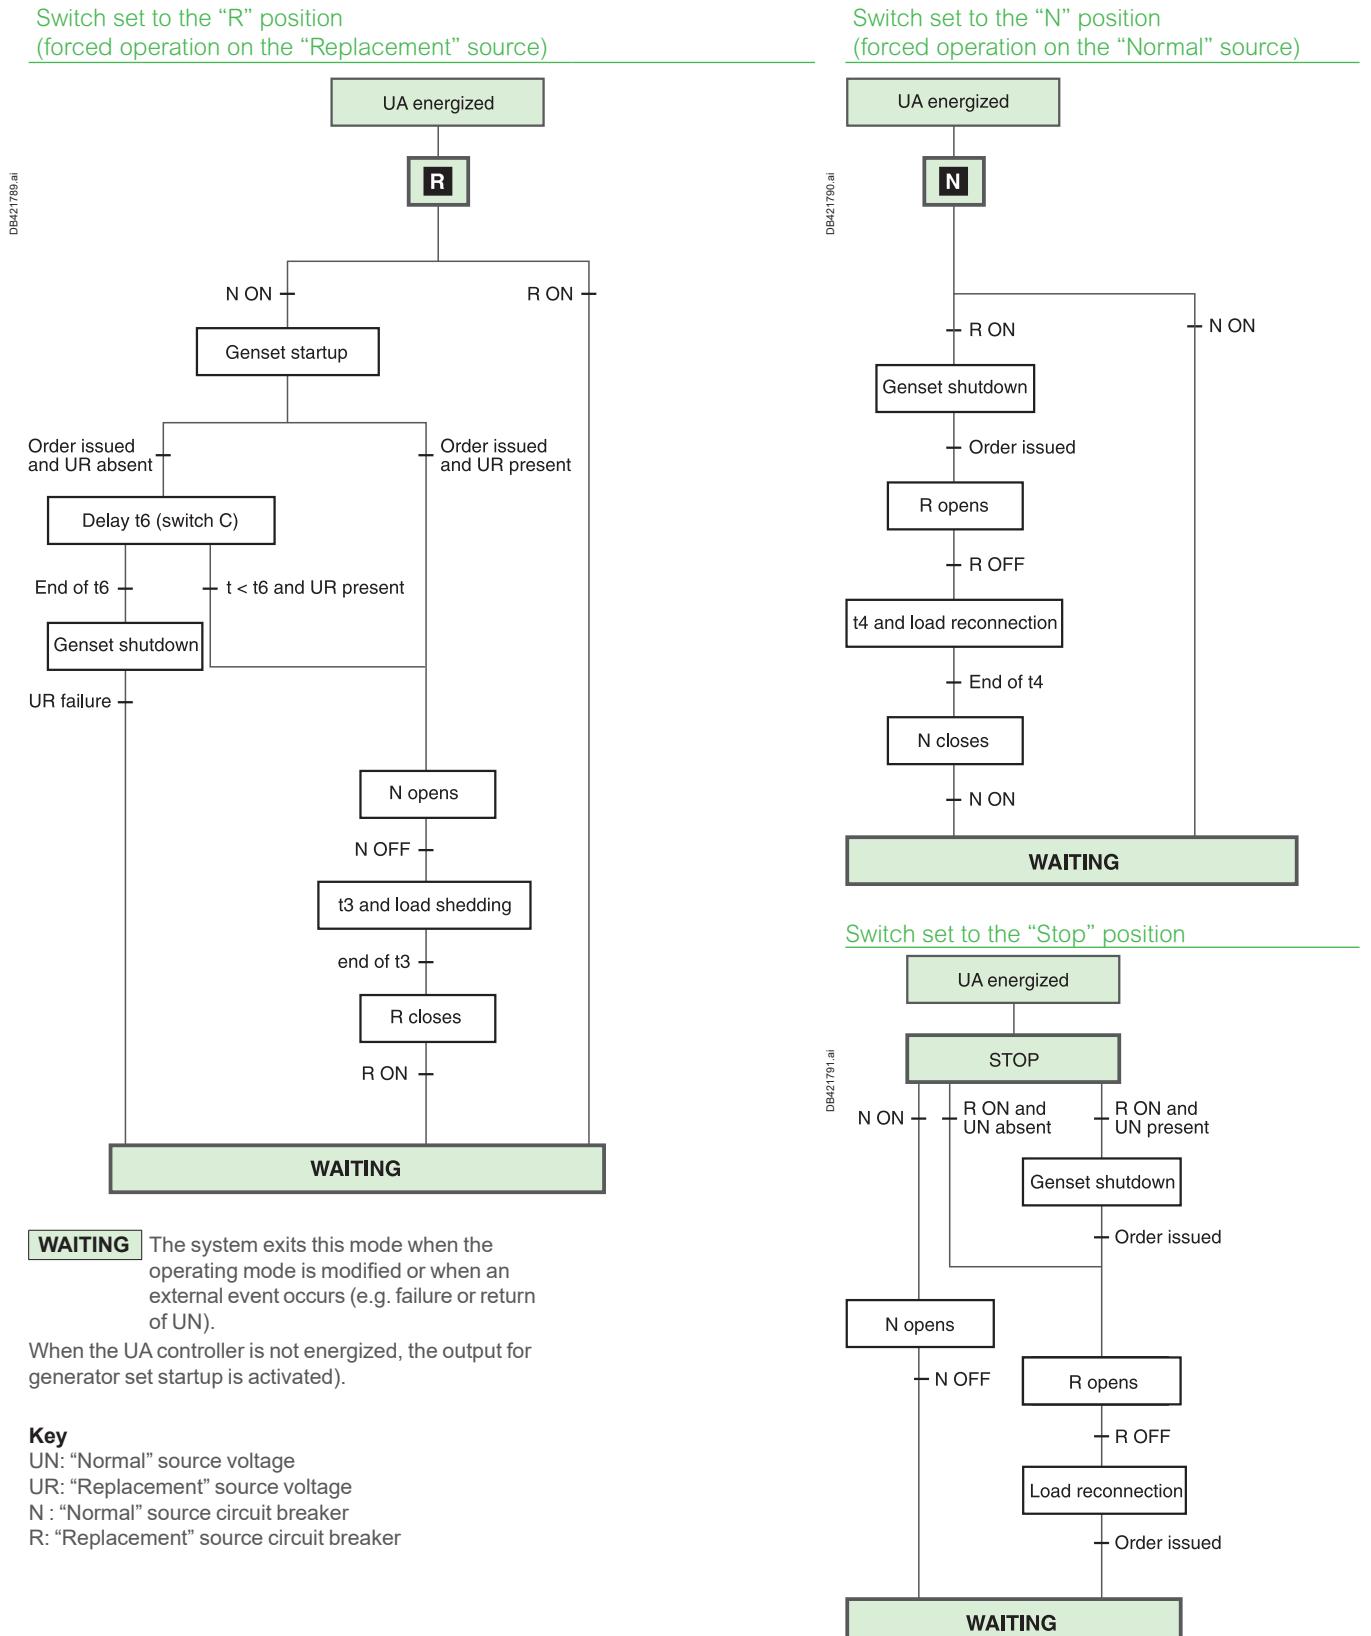

TransferPact controllers

UA controller


Operating sequences, special-tariff mode

Switch set to the "Auto" position (special-tariff mode)

WAITING The system exits this mode when the operating mode is modified or when an external event occurs (e.g. failure or return of UN).

When the UA controller is not energized, the output for generator set startup is activated.

DB421792.ai

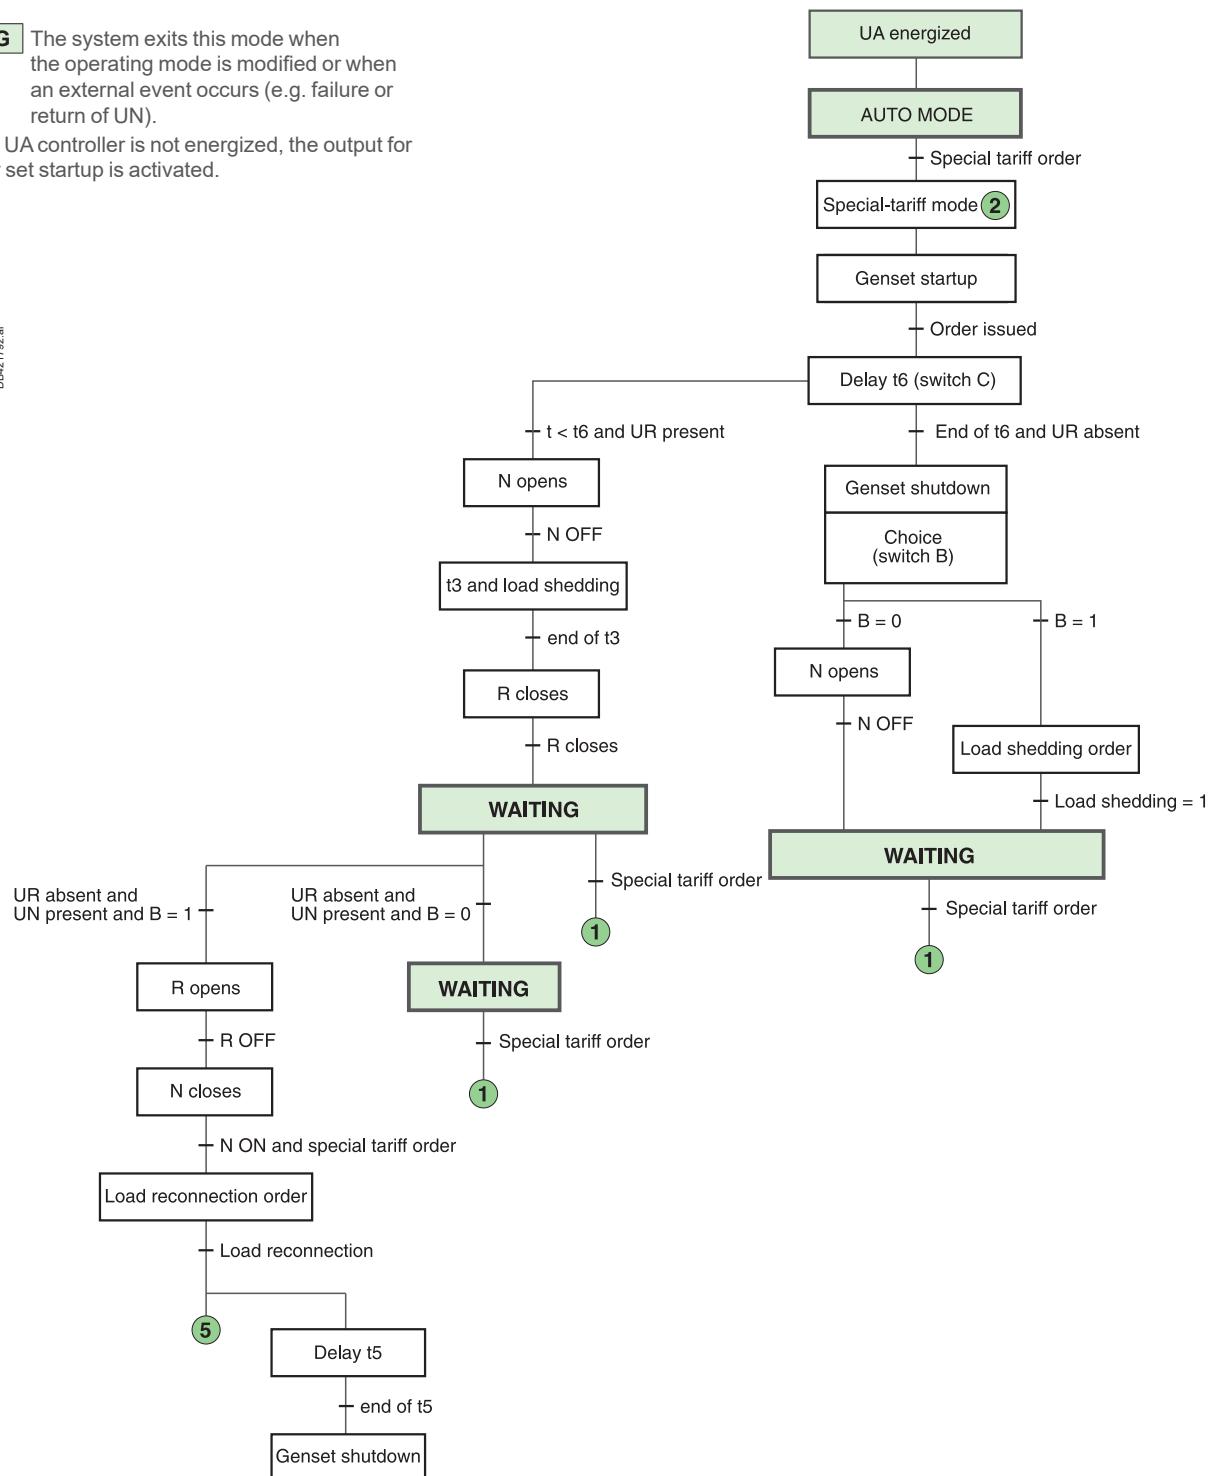

Key

UN: "Normal" source voltage

UR: "Replacement" source voltage

N: "Normal" source circuit breaker

R: "Replacement" source circuit breaker

B: Penalties accepted (N ON), i.e. B = 1


① The number sends to the indicated step when the condition is true.

Operating sequences, test mode and automatic operation

Switch set to the “Auto” position (automatic operation and test mode).

DB421793.ai

A

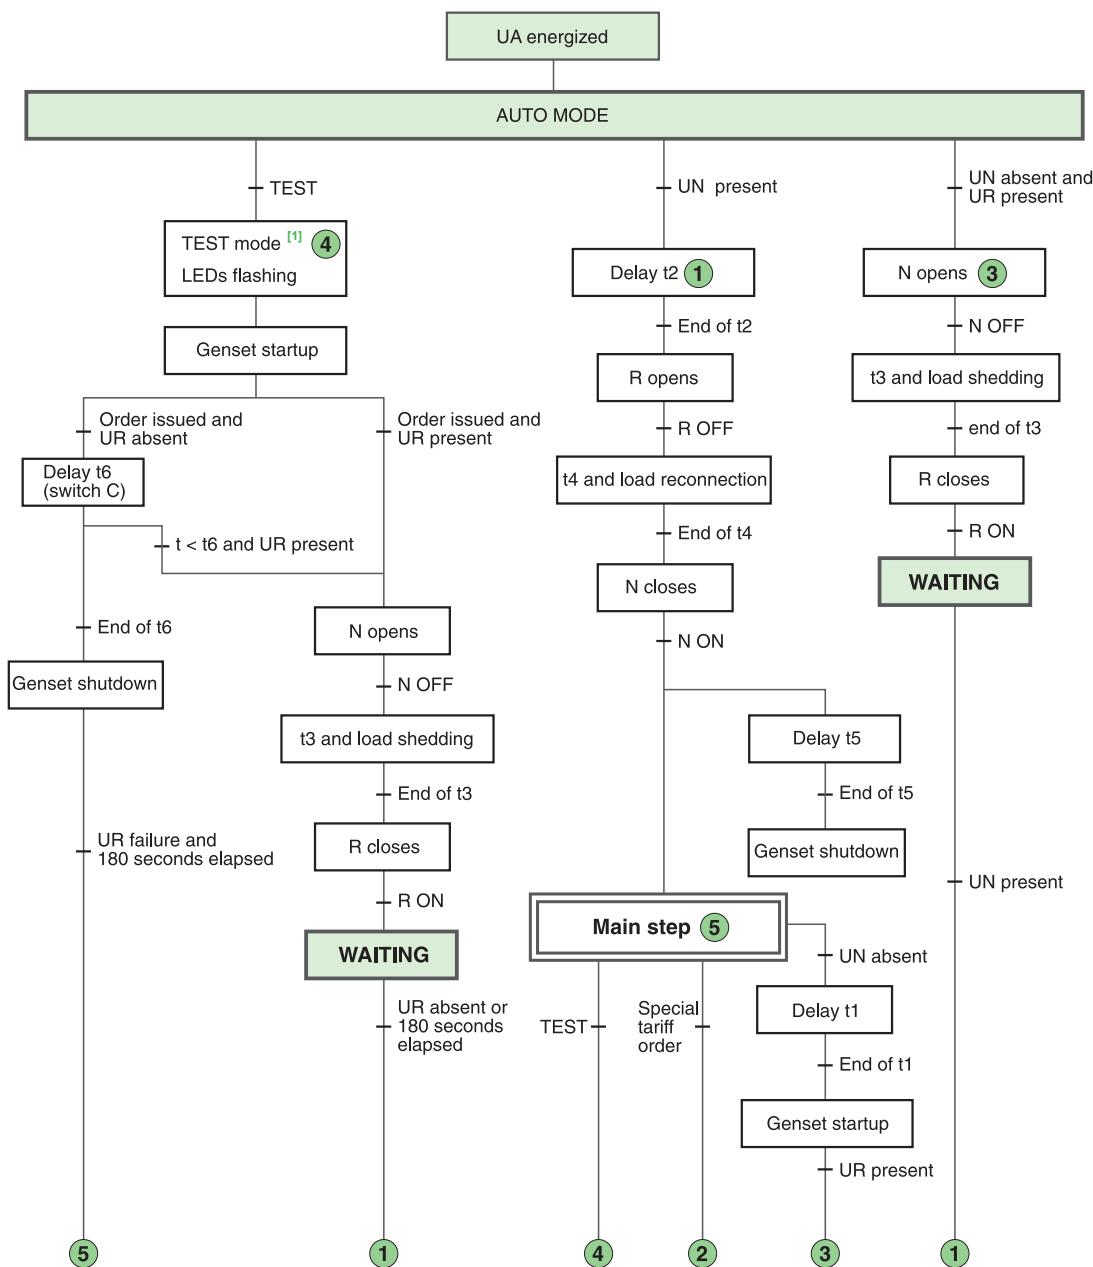

WAITING The system exits this mode when the operating mode is modified or when an external event occurs (e.g. failure or return of UN).

When the UA controller is not energized, the output for generator set startup is activated.

Key

UN: “Normal” source voltage

UR: “Replacement” source voltage

N: “Normal” source circuit breaker

R: “Replacement” source circuit breaker

B: Penalties accepted (N ON), i.e. B = 1


[1] The test lasts 180 seconds.

(1) The number sends to the indicated step when the condition is true.

TransferPact controllers

UA/BA controller

BA controller

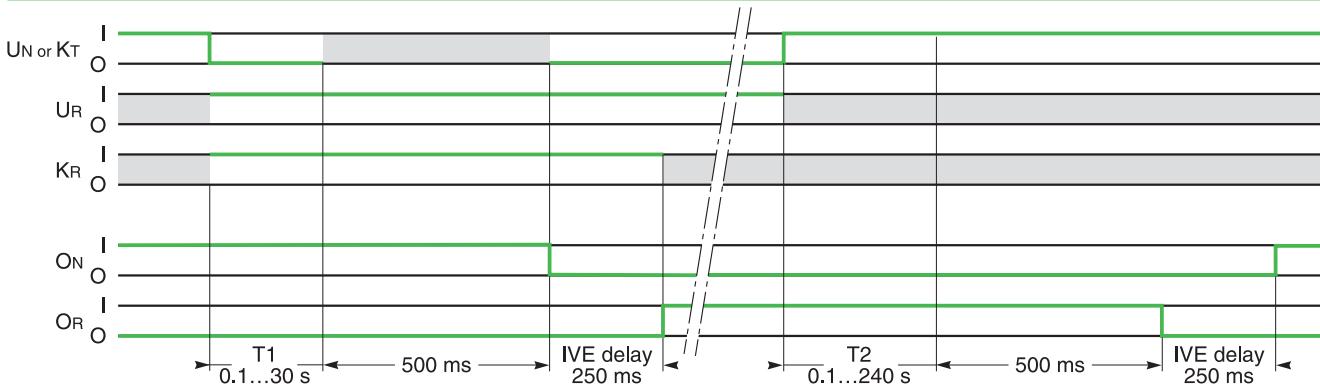


Inputs

UN: "Normal" source voltage
 UR: "Replacement" source voltage
 KT: order for forced-operation on R
 KR: additional check before transfer

Outputs

QN: "Normal" source circuit breaker
 QR: "Replacement" source circuit breaker

UA controller

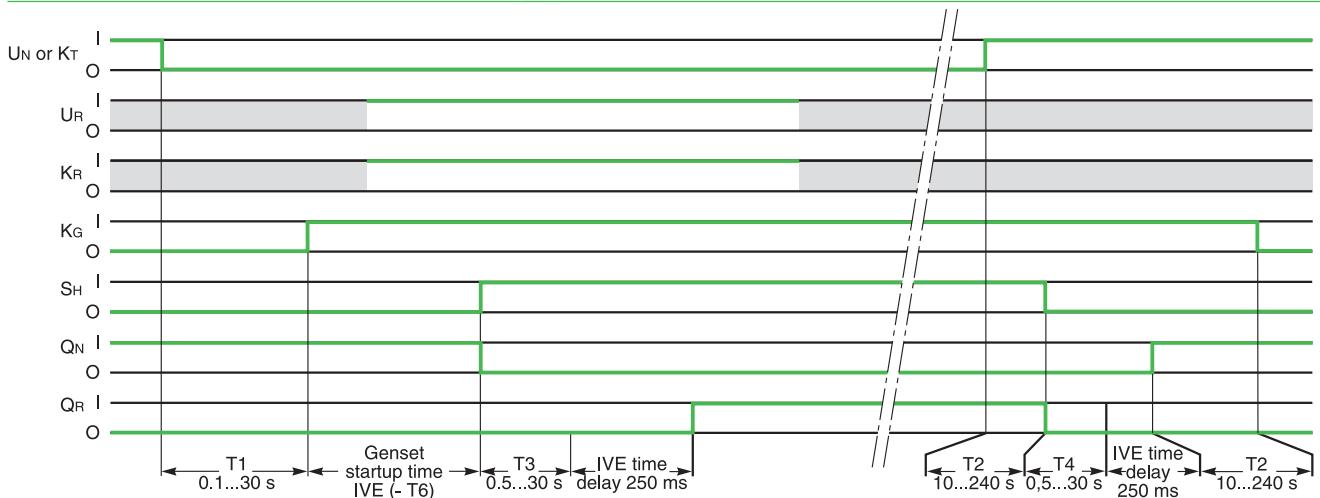

Inputs

UN: "Normal" source voltage
 UR: "Replacement" source voltage
 KT: order for forced-operation on R
 KR: additional check before transfer

Outputs

KG: order to the genset
 SH: load-shedding order
 QN: "Normal" source circuit breaker
 QR: "Replacement" source circuit breaker

Key

O: OFF (circuit open)
 I: ON (circuit closed)
 ■: either ON or OFF.

Important

If UR is not ON when the transfer order is issued (KT or UN), the sequence is not carried out. If KR status is not ON when the transfer order is issued (KT or UN), the transfer sequence is carried out later when KR status becomes I.

Dimensions of the TransferPact Switch Equipment

Manual source-changeover systems	
ComPact INS/INV	B-2
TransferPact FXM	B-3
ComPact NSX	B-4
ComPact NSX - Interlocking on a base plate	B-6
Downstream coupling accessory	B-10
Source-changeover systems	
Mechanical interlocking using connecting rods	B-12
Mechanical interlocking using connecting cables	B-14
TransferPact	
IVE unit, UA/BA controllers	B-19

B

Other chapters

Presentation	2
Functions and characteristics	A-1
Electrical diagrams	C-1
Catalog numbers and order forms.....	D-1

Manual source-changeover systems



ComPact INS/INV

Class PC


Interlocking of direct rotary handles

(ComPact INS/INV250 - 100 to 250 A / ComPact INS/INV320/400/500/630)

Dimensions

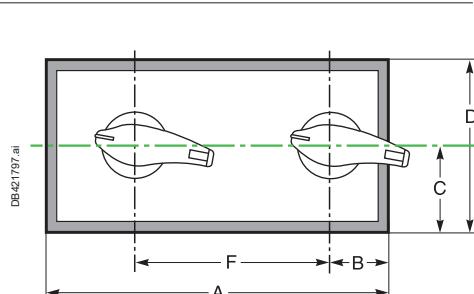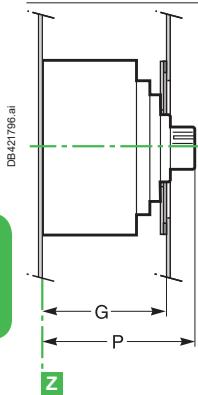

Front-panel cutout

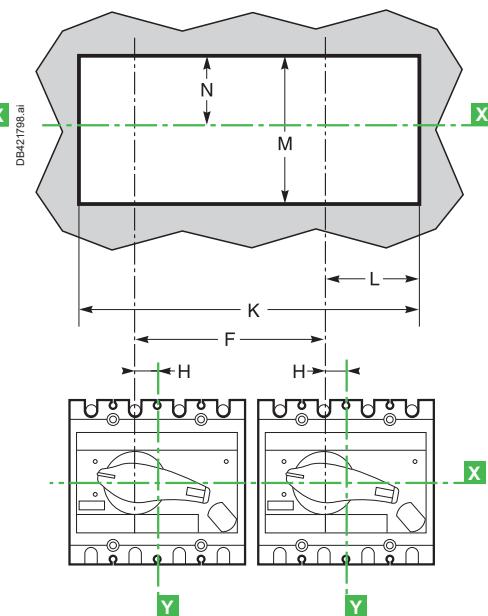

Dimensions (mm)



Type	A	B	C	D	F	G	H	K	L	M	N	P
INS/INV250 - 100 to 250 A	325	90	87.5	175	156	106	17.5	295	75.5	150	75	131
INS/INV320/400/500/630	416	115	100	200	210	130	22.5	386	100	175	74.5	160.4

Note: X and Y are the symmetry planes for a 3-pole device.


Interlocking of extended rotary handles

(ComPact INS40/63/80/100/125/160 / ComPact INS/INV250 - 100 to 250 A / ComPact INS/INV320/400/500/630)

Dimensions

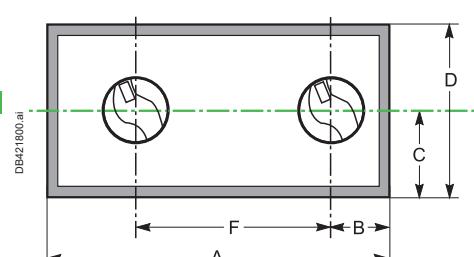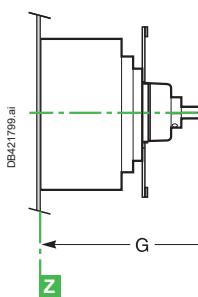

Front-panel cutout

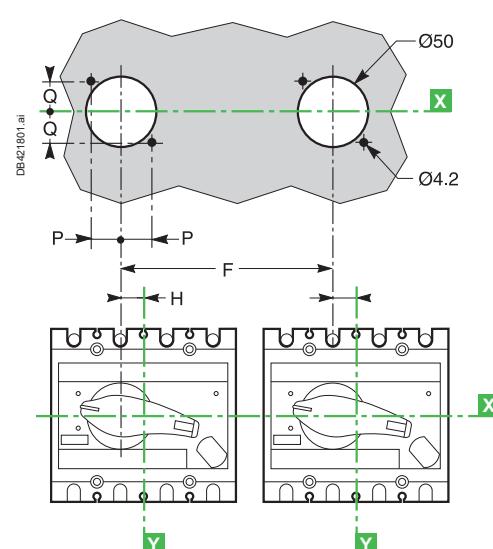

Dimensions (mm)

Type	A	B	C	D	F	G min	G max	H	P	Q
INS40/63/80	325	90	87.5	175	156	155	396	0	25.5	25.5
INS100/125/160	325	90	87.5	175	156	200	441	0	25.5	25.5
INS/INV250 - 100 to 250 A	325	90	87.5	175	156	185	600	17.5	25.5	25.5
INS320/400/500/630	416	115	100	200	210	204	600	22.5	30.8	30.8

Dimensions of the TransferPact Switch Equipment


Manual source-changeover systems

TransferPact FXM

Class PC


Complete manual source-changeover assembly

TransferPact FXM with direct rotary handle

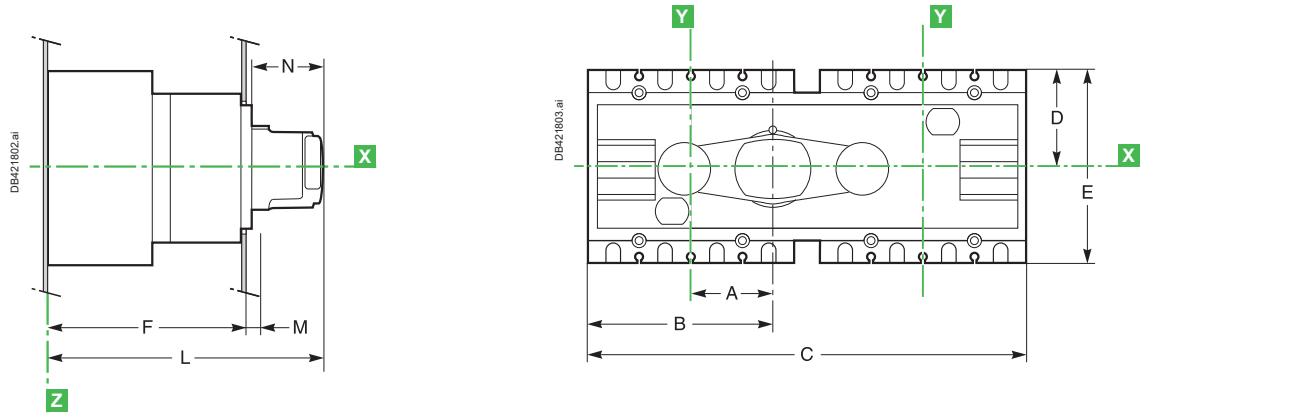

B


Front-panel cutout

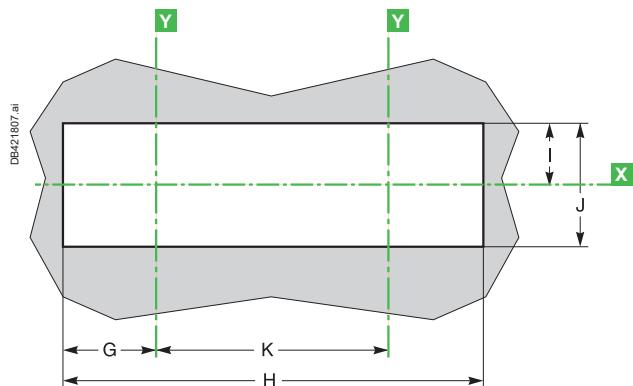

Dimensions (mm)

Type	A	B	C	D	E	F	G	H	I	J	K	L	M	N
FXM 100 to 250 A	60.4	130.4	296	68	136	131	61.8	279.3	42	84	156	186.5	5.5	50
FXM 320 to 630 A	82.5	175	395	102.5	205	155	87	383.7	64	128	210	213	8	50

TransferPact FXM with extended handle



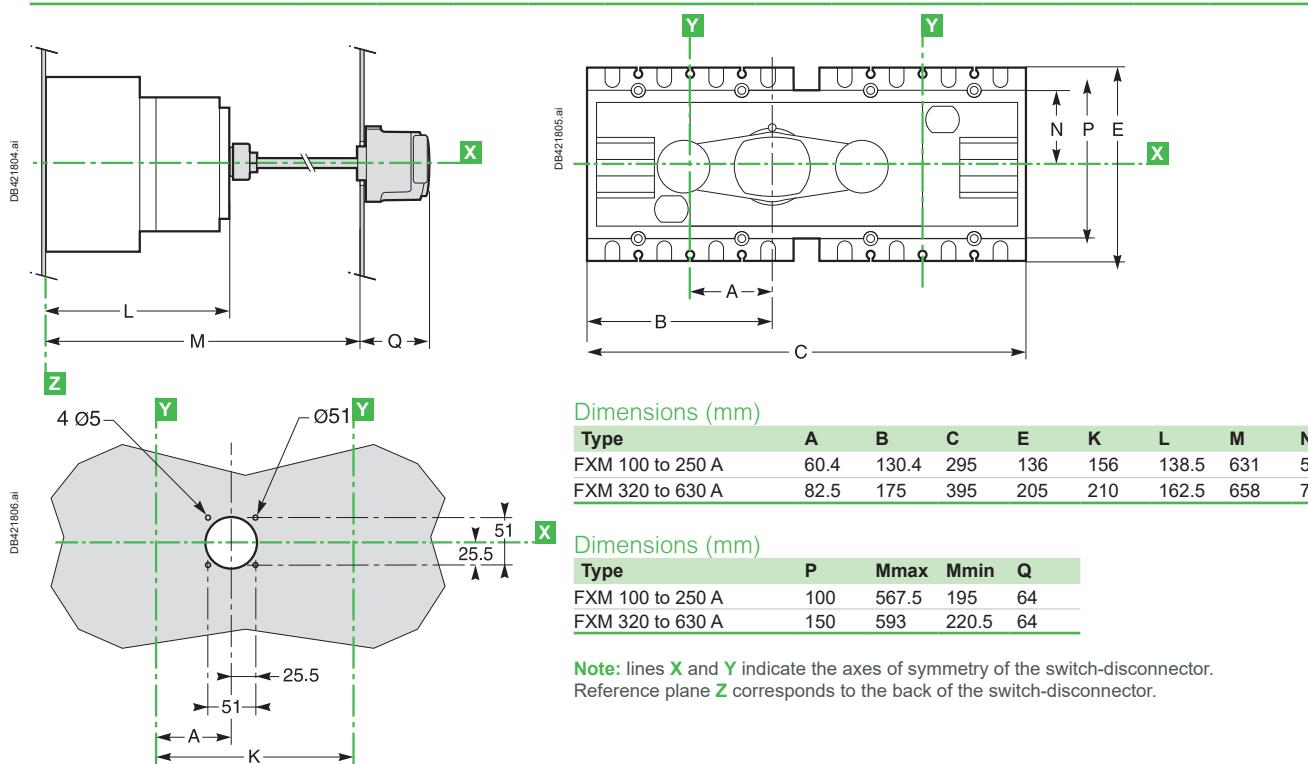


Manual source-changeover systems**ComPact NSX**

Class PC and CB

Interlocking of direct rotary handles




(ComPact NSX100 to NSX630 and ComPact NSX100 NA to NSX630 NA)

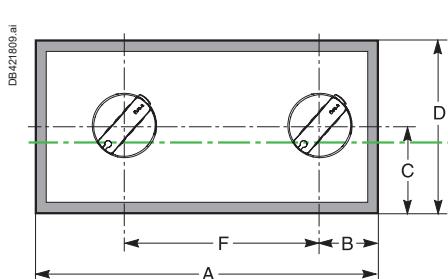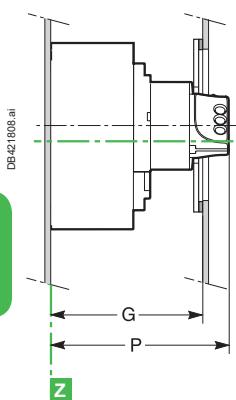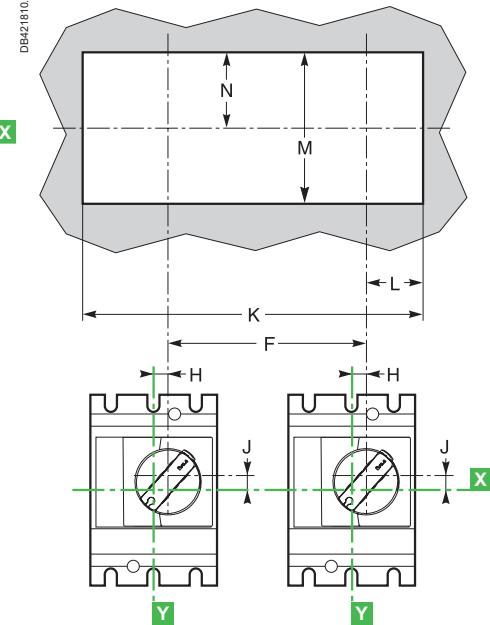Dimensions**Front-panel cutout****Dimensions (mm)**

	A	B	C	D	F	G	H	J	K	L	M	N	P
NSX100/160/250 and NA	325	90	87.5	175	156	133	9.25	9	295	75.5	150	75	155
NSX400/630 and NA	416	115	100	200	210	157	5	24.6	386	100	175	74.5	179

Interlocking of extended rotary handles

(ComPact NSX100 to NSX630 and ComPact NSX100 NA to NSX630 NA)

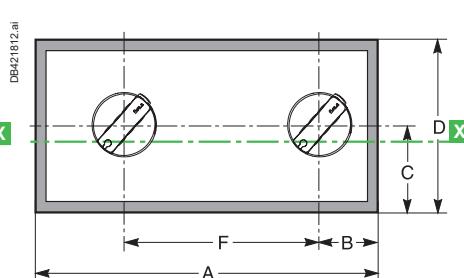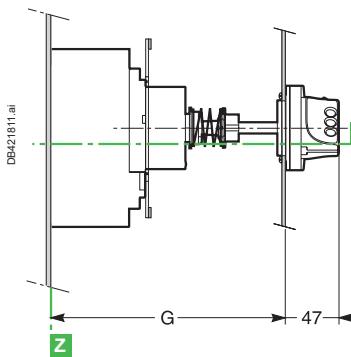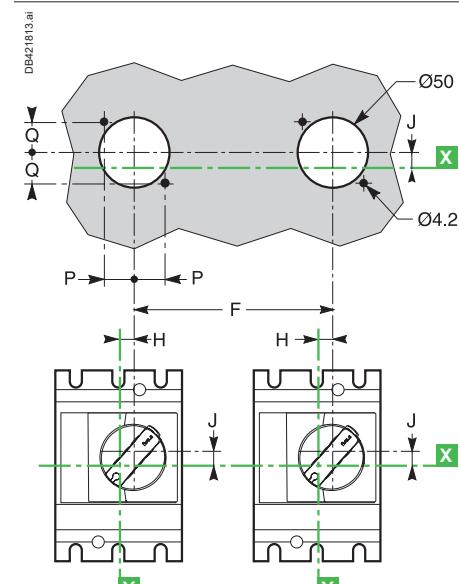Dimensions**Front-panel cutout****Dimensions (mm)**

Type	A	B	C	D	F	G min	G max	H	J	P	Q
NSX100/160/250 and NA	325	90	87.5	175	156	171	600	9.25	9	25.5	25.5
NSX400/630 and NA	416	115	100	200	210	195	600	5	24.6	30.8	30.8

Dimensions of the TransferPact Switch Equipment

Manual source-changeover systems


ComPact NSX

Class PC and CB


Interlocking of toggles

(ComPact NSX100 to NSX630 and ComPact NSX100 NA to NSX630 NA)


Dimensions

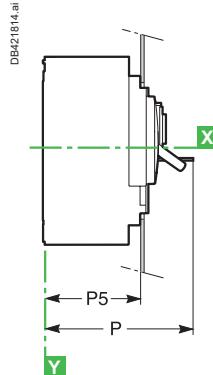

3 poles

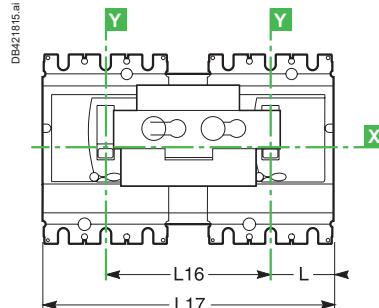


4 poles

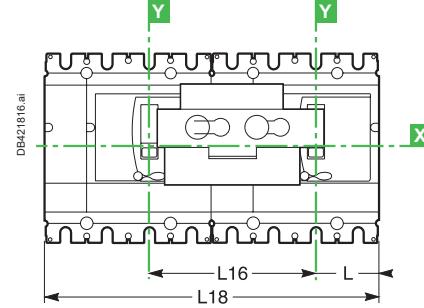


B

Front-panel cutout

3 poles on left

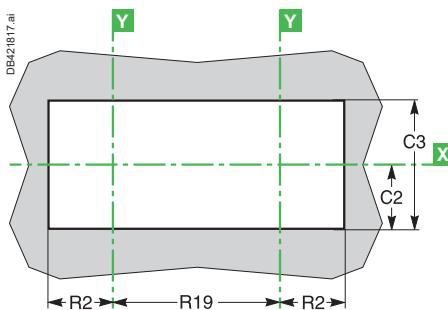

4 poles on left

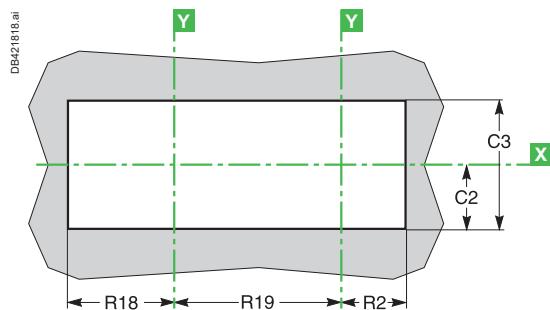

Dimensions (mm)

Type	C2	C3	L	L16	L17	L18	R2	R18	R19	P5	P
NSX100/160/250 and NA	54	108	52.5	140	245	280	54	89	140	83	120
NSX400/630 and NA	92.5	182	70	185	325	370	71.5	116.5	185	107	150

Dimensions of the TransferPact Switch Equipment

Manual source-changeover systems


ComPact NSX - Interlocking on a base plate

www.se.com


Class PC and CB

ComPact NSX100 to NSX250 and ComPact NSX100 NA to NSX250 NA


Dimensions, 3 or 4 poles

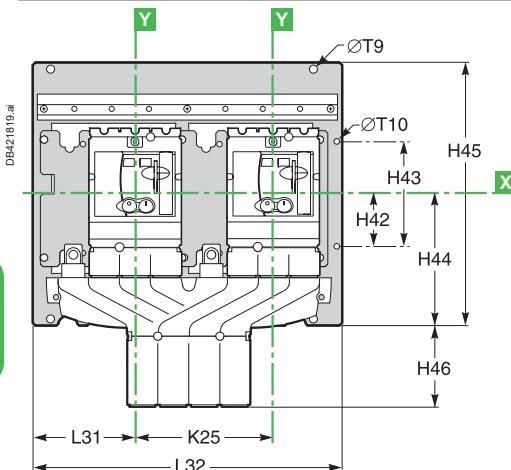

Fixed device

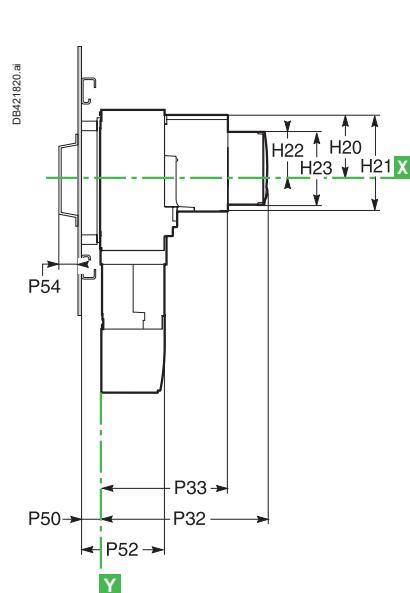


Withdrawable device

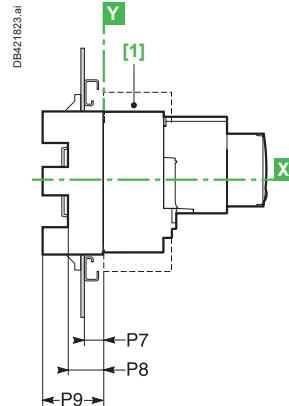


[1] Short terminal shields are mandatory.

Vertical mounting

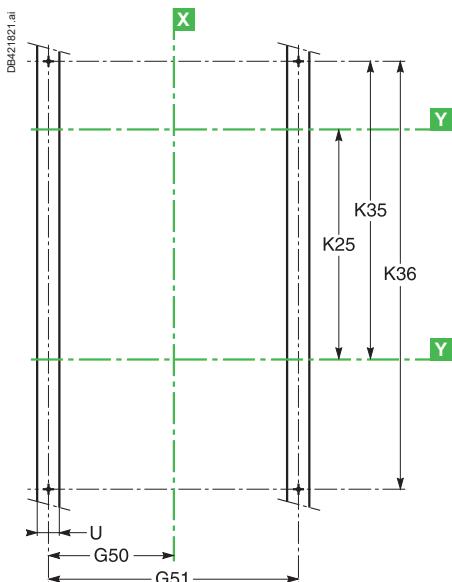

Horizontal mounting

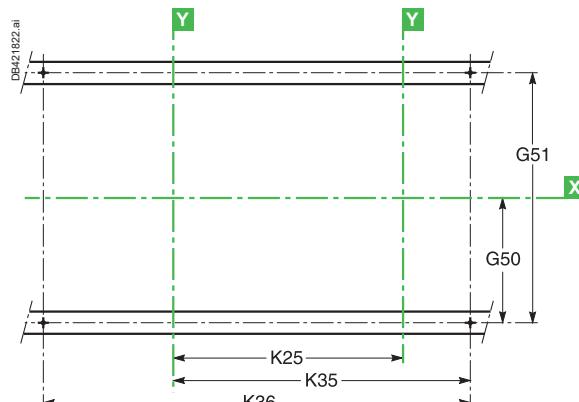

Dimensions (mm)

Type	G50	G51	H20	H21	H22	H23	H42	H43	H44	H45	H46	K25	K35	K36
NSX100/160/250 and NA	137.5	285	62.5	97	45.5	73	60	120	144.5	300	37	156	210.5	300
NSX400/630 and NA	180	360	100	152	83	123	60	120	189	378	77	210	282.5	400

Dimensions (mm)

Type	L31	L32	P7	P8	P9	P32	P33	P50	P52	P54	ØT9	ØT10	U
NSX100/160/250 and NA	110.5	354	25	45	75	182	143	25	99.5	21	9	6	≤ 32
NSX400/630 and NA	150.5	466	25	45	100	256	215	25	123	21	9	6	≤ 32

Note: coupling accessory: only for changeover systems using fixed versions of ComPact NSX circuit breakers.


Dimensions of the TransferPact Switch Equipment
Manual source-changeover systems
ComPact NSX - Interlocking on a base plate

Class PC and CB


ComPact NSX400 to NSX630 and ComPact NSX400 NA to NSX630 NA

Dimensions, 3 or 4 poles

Fixed device

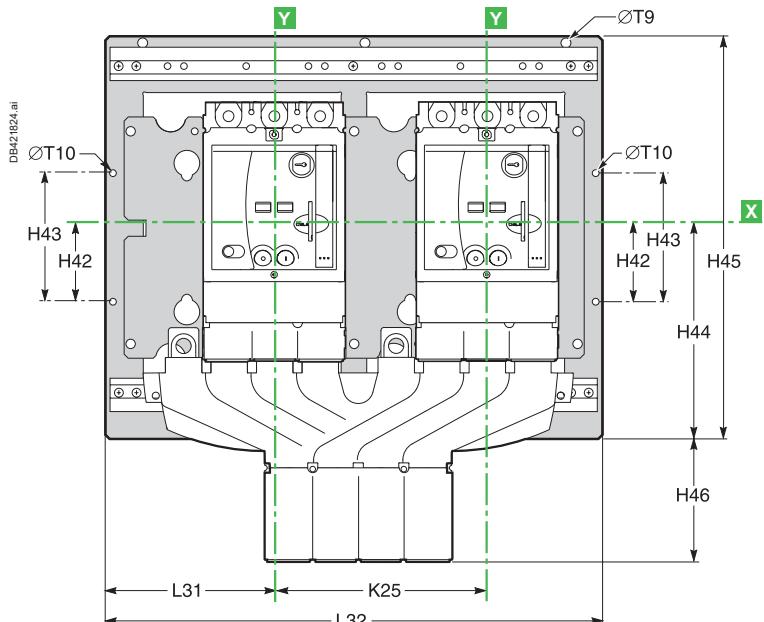


Note: coupling accessory: only for changeover systems using fixed versions of ComPact NSX circuit breakers.

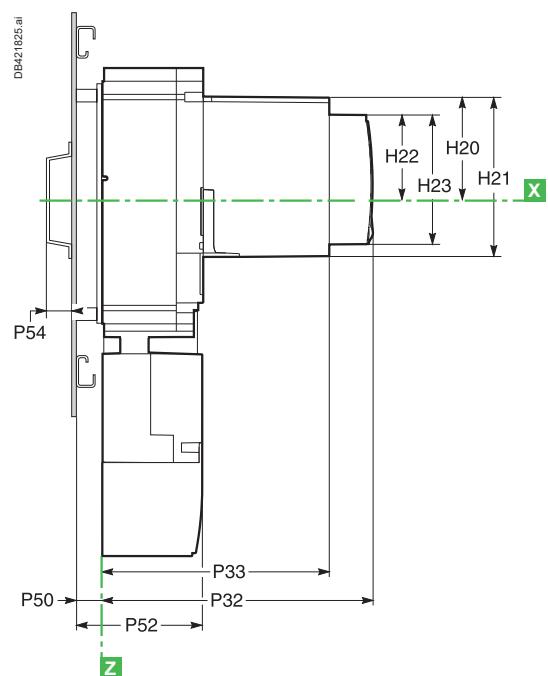


B


Vertical mounting

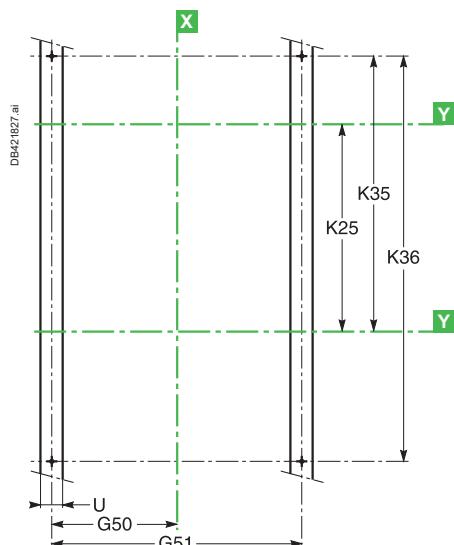

Horizontal mounting

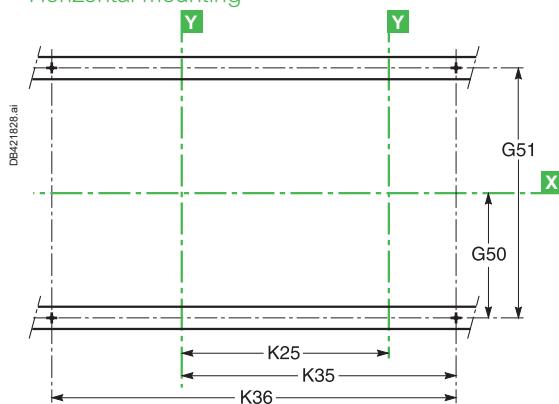

Withdrawable device

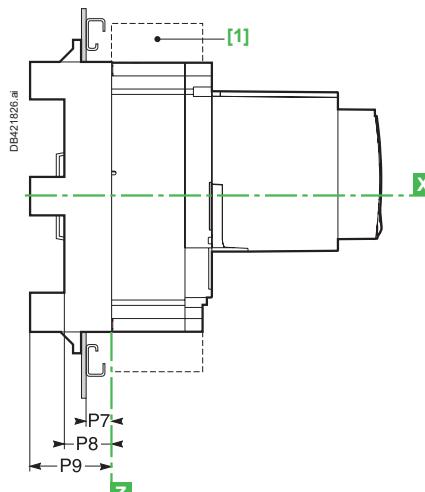

[1] Short terminal shields are mandatory.


Note: for dimensions see page B-6.

Dimensions of the TransferPact Switch Equipment
Manual source-changeover systems
ComPact NSX - Interlocking on a base plate


www.se.com

Class PC and CB

“Normal” and “Replacement” source devices: NSX100 to NSX250

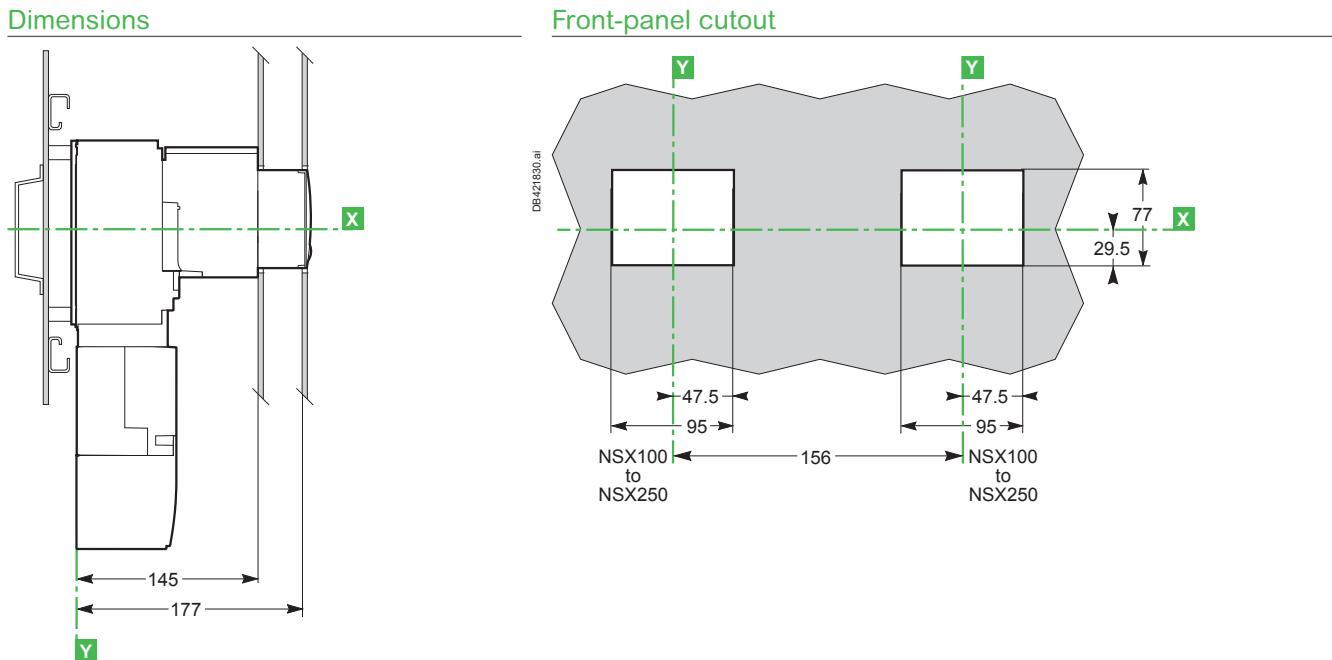

“Normal” and “Replacement” source devices: NSX400 to NSX630

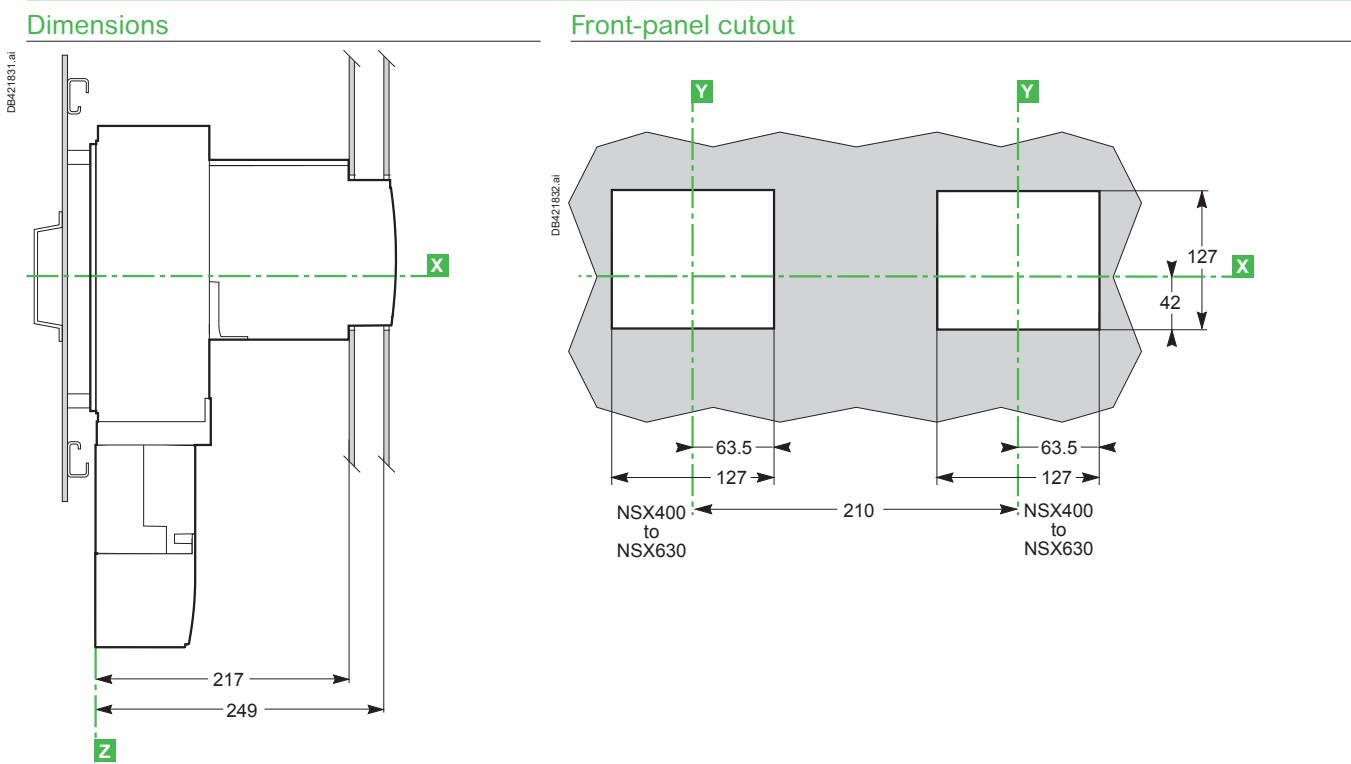


Note for ComPact NSX: For dimensions with the accessories (IP40 escutcheons and Vigi escutcheon protection collars), see Catalog ComPact.

Dimensions of the TransferPact Switch Equipment
Manual source-changeover systems
ComPact NSX - Interlocking on a base plate


Class PC and CB

NSX400 to NSX630 as the “Normal” device, NSX100 to NSX250 as the “Replacement” device

Dimensions

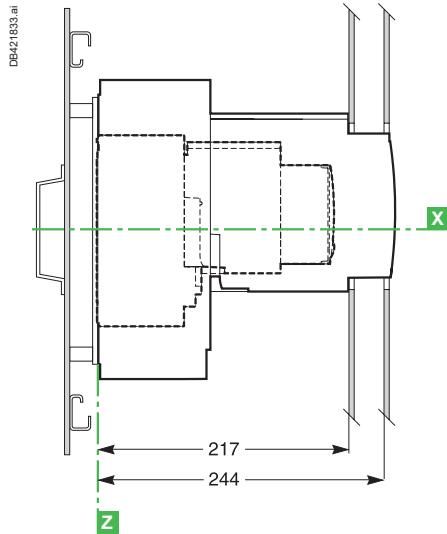

Front-panel cutout

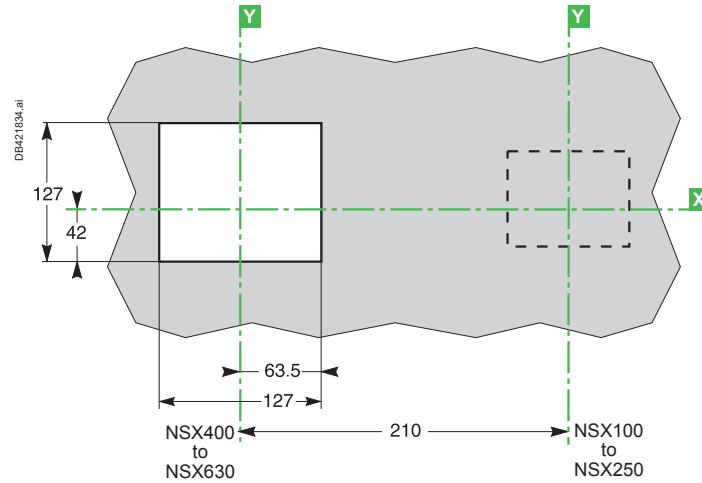

B


Downstream coupling accessory

Class PC and CB


Downstream coupling accessory

ComPact NSX100 to NSX630, ComPact NSX100 NA to NSX630 NA and ComPact INS/INV [1]


Dimensions for ComPact NSX

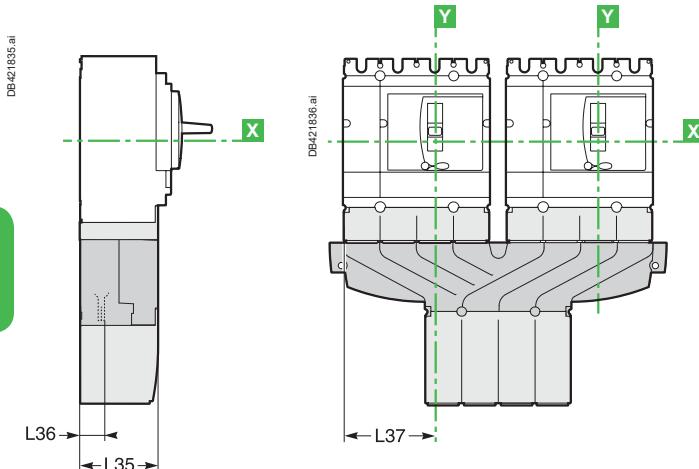


Dimensions for ComPact INS/INV

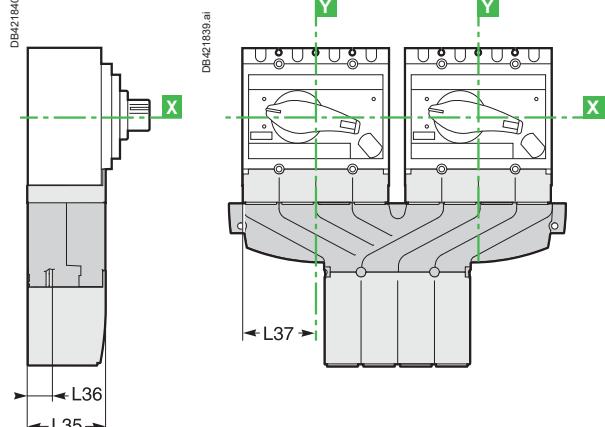

Dimensions

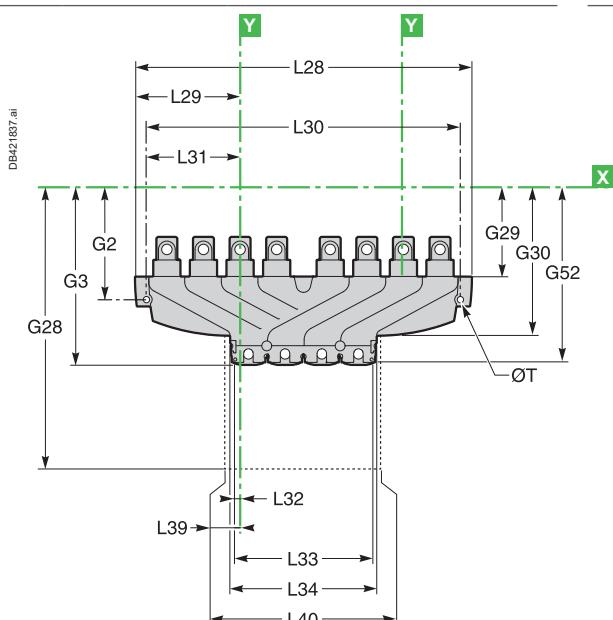

Connection

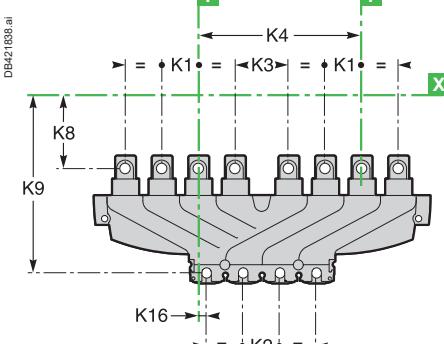

Dimensions (mm)

Type	G2	G3	G28	G29	G30	G52	K1	K2	K3	K4	K8	K9	K16
NSX100/160/250 and NA	118	181.5	244.5	96	152.5	178	35	35	51	156	70	170	8
NSX400/630 and NA	165.9	264.7	337.5	143.5	220.5	264.7	45	45	75	210	113.5	250.7	15
INS250 - 100 to 250 A	105.5	169	232	83.5	140	165.5	35	35	51	156	57.5	157.5	25.5
INS320/400/500/630	141	240.7	313	119	195.6	240	45	45	75	210	88.5	225.7	37.5

Dimensions (mm)

Type	L28	L29	L30	L31	L32	L33	L34	L35	L36	L37	L39	L40	ØT
NSX100/160/250 and NA	320	99.5	300	89.5	4.73	130.5	139.5	74.5	19.5	87.5	9.5	140	6
NSX400/630 and NA	425	130	400	117.5	5.15	175.3	184.7	98.5	26	115	9.85	184.7	6
INS250 - 100 to 250 A	320	83	300	72	12.8	130.5	139.5	74.5	21.5	70	8.5	140	6
INS320/400/500/630	425	107.5	400	95	17.35	175.3	184.7	98.5	26	92.5	12.65	184.7	6

[1] coupling accessory: only for changeover systems using fixed versions of ComPact NSX circuit breakers.


Dimensions of the TransferPact Switch Equipment
Manual source-changeover systems
ComPact NS - Interlocking on a base plate

Class PC and CB


Interlocking of extended rotary handles

ComPact NS630b to 1600 and ComPact NS630b NA to NS1600 NA

Dimensions

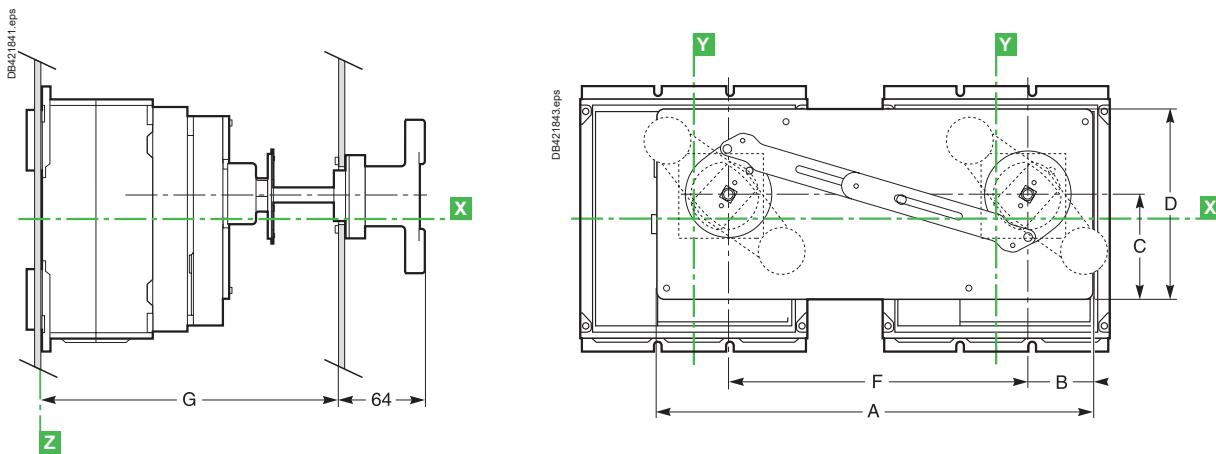

Front-panel cutout

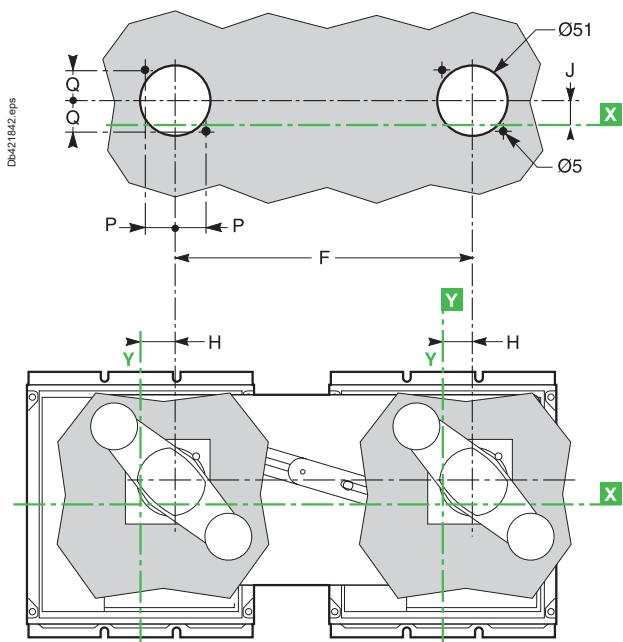

Dimensions (mm)

Type	A	B	C	D	F	G min	G max	H	J	P	Q	R
NS630b/800/1000/1200/1600	411	63.5	98	175	280	218	605	25	24	25.5	25.5	64

Source-changeover systems


Mechanical interlocking using connecting rods

ComPact NS and MasterPact MTZ1


Class PC and CB

ComPact NS630b to NS1600 and ComPact NS630b NA to NS1600 NA
devices one above the other

Fixed devices

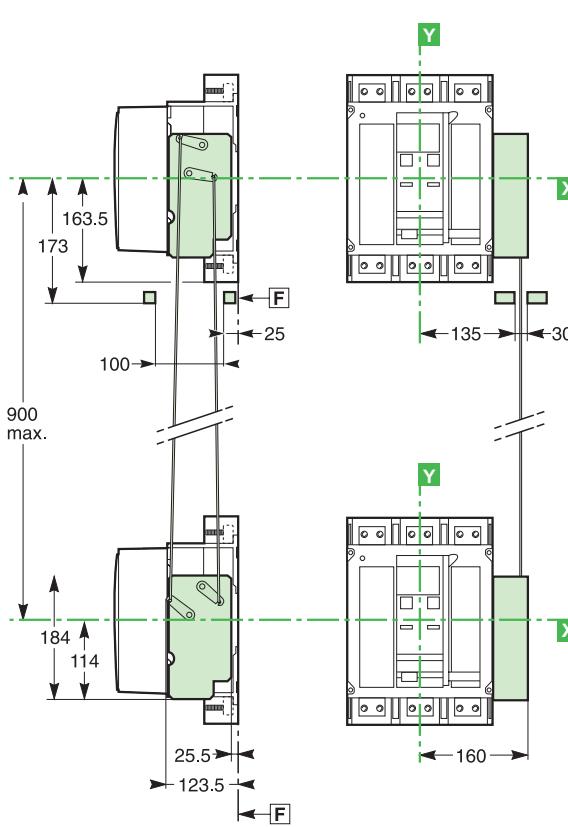


Withdrawable devices

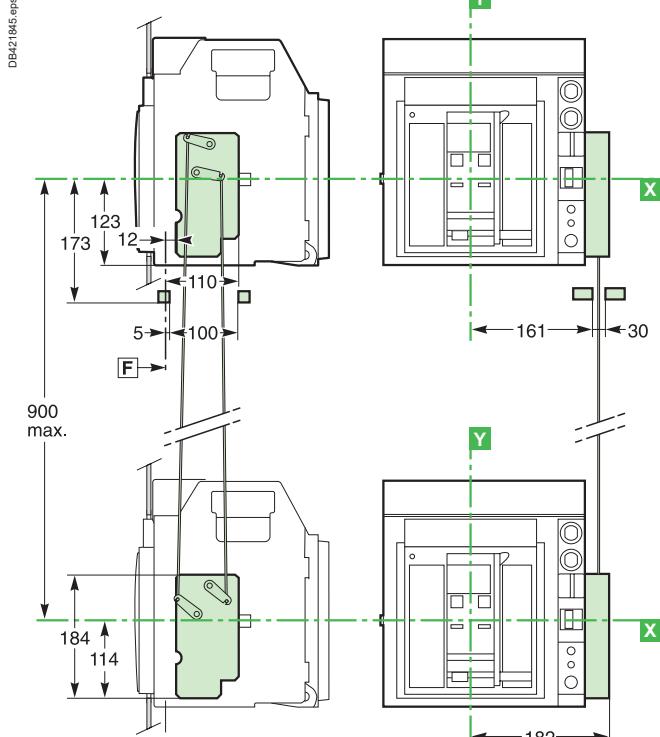


Two MasterPact MTZ1 devices (switch-disconnectors or circuit breakers)
one above the other

Fixed devices

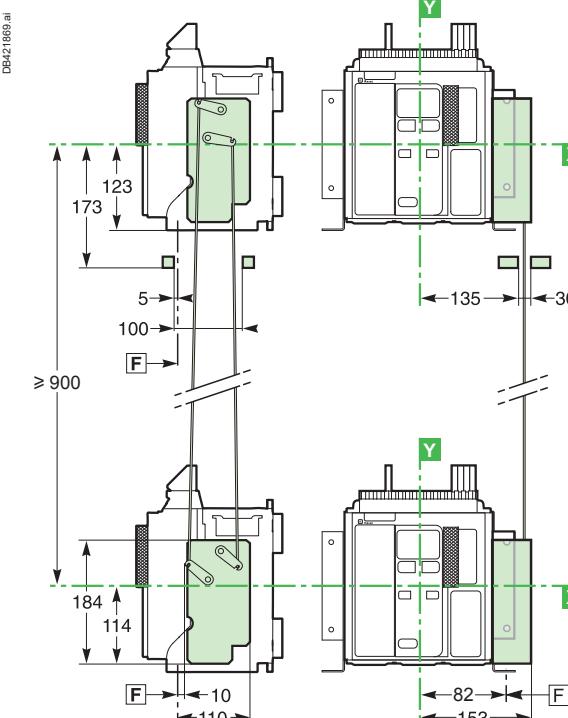




Withdrawable devices

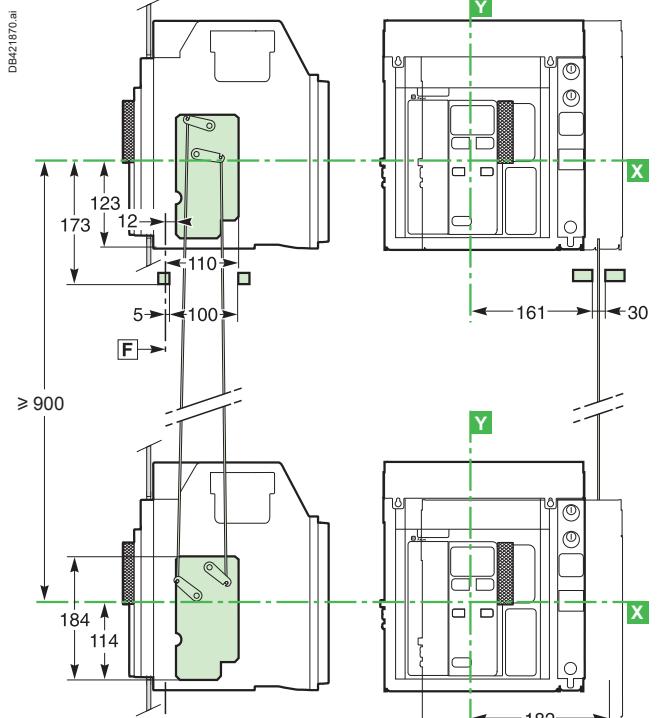

Dimensions of the TransferPact Switch Equipment
Source-changeover systems
Mechanical interlocking using connecting rods
MasterPact MTZ2/MTZ3

Class PC and CB

**Two MasterPact MTZ2/MTZ3 devices (switch-disconnectors or circuit breakers)
one above the other**

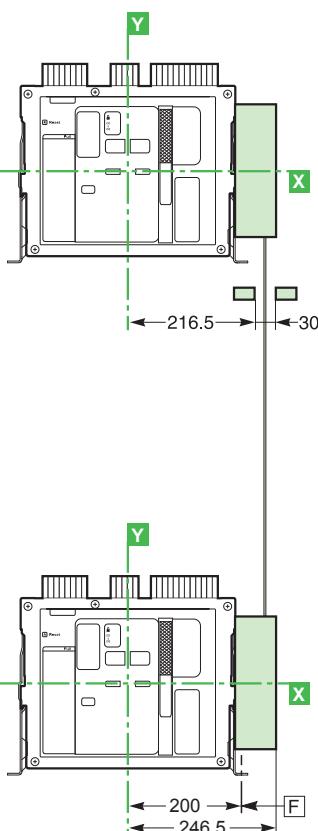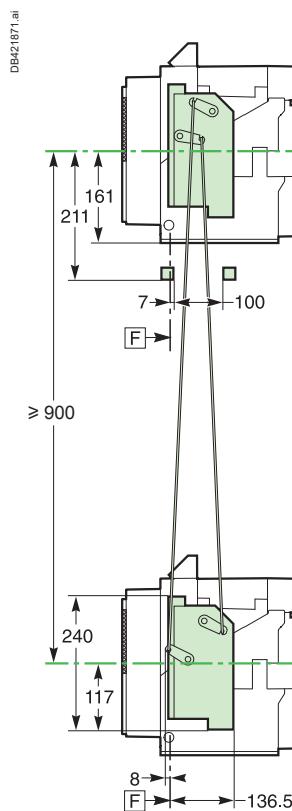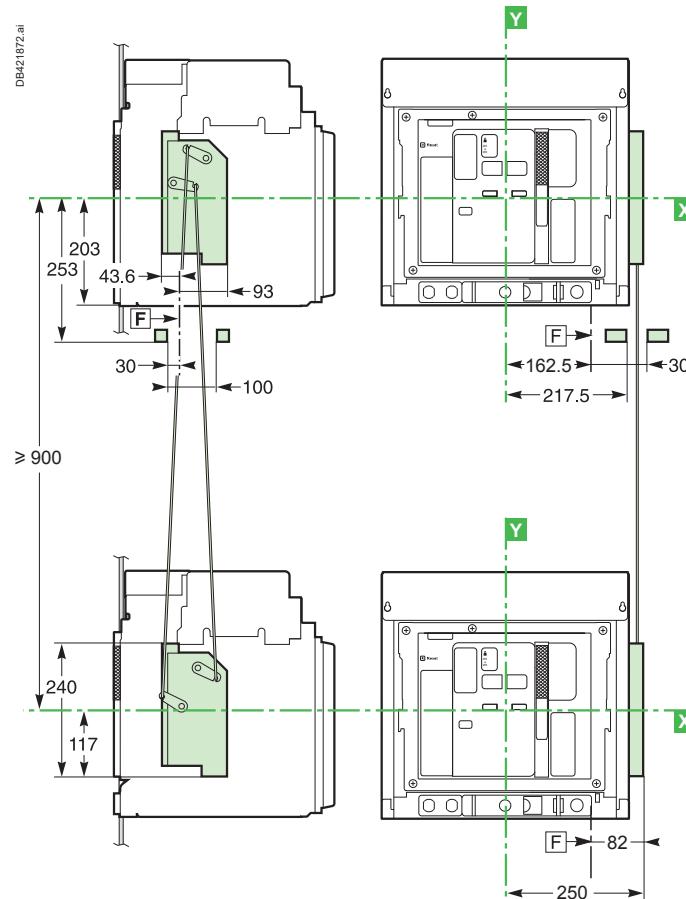Fixed devices**Withdrawable devices**

Source-changeover systems


Mechanical interlocking using connecting cables

ComPact NS and MasterPact MTZ1/MTZ2/MTZ3


Class PC and CB

ComPact NS630b to NS1600 and ComPact NS630b NA to NS1600 NA devices side-by-side

Fixed devices

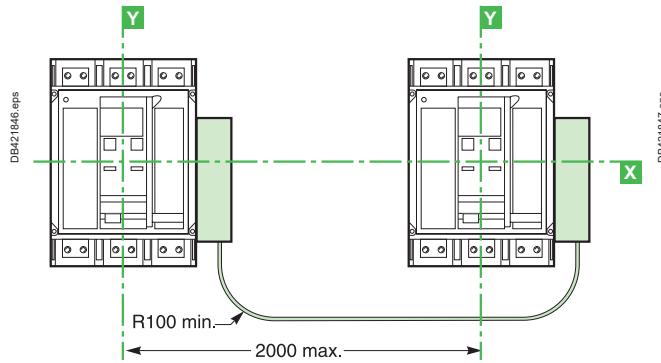


Withdrawable devices

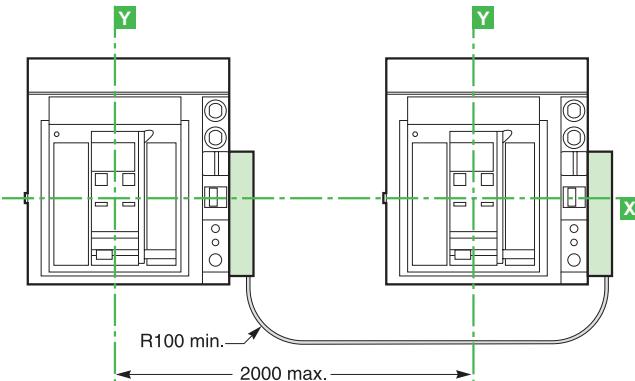


B

Two MasterPact MTZ1 devices (switch-disconnectors or circuit breakers) side-by-side

Fixed devices

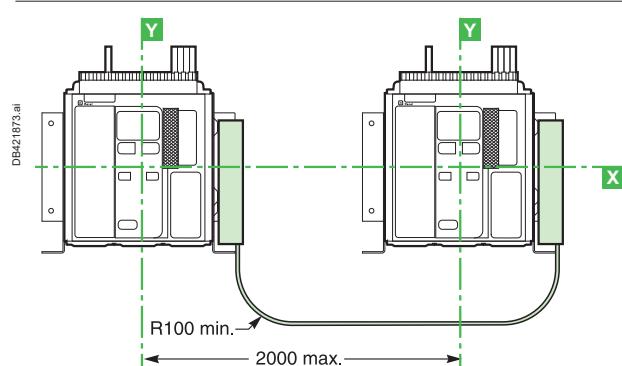


Drawout devices

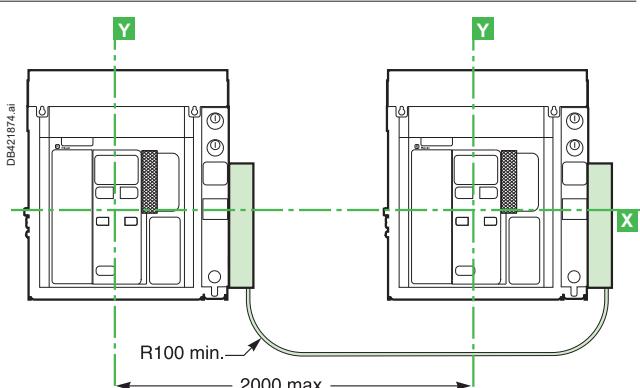


Combination of two MasterPact MTZ1 and MTZ2/MTZ3 devices (switch-disconnectors or circuit breakers) side-by-side

Fixed devices

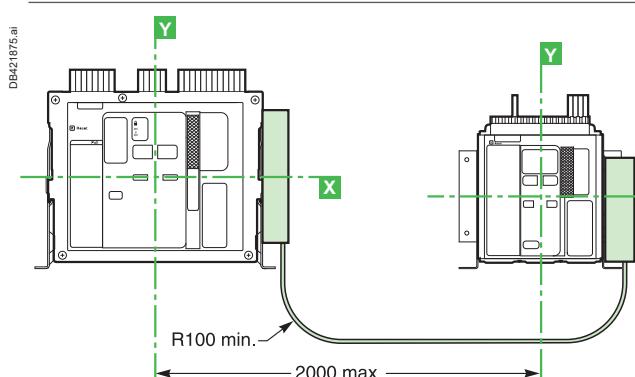

Drawout devices

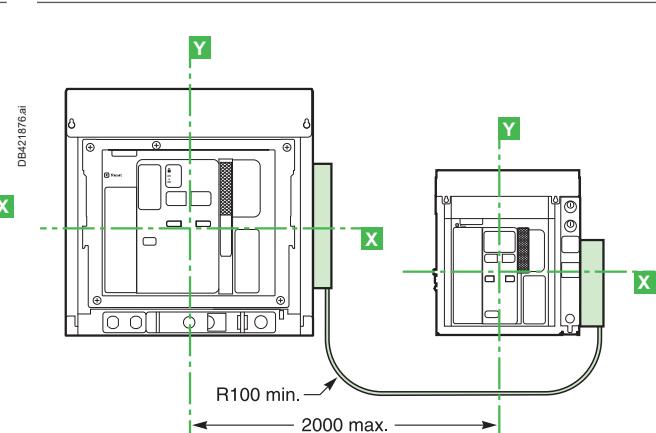


Dimensions of the TransferPact Switch Equipment
Source-changeover systems
Mechanical interlocking using connecting cables
ComPact NS and MasterPact MTZ1


Class PC and CB

Two ComPact NS630b to NS1600 and ComPact NS630b NA to NS1600 NA devices one above the other

Fixed devices

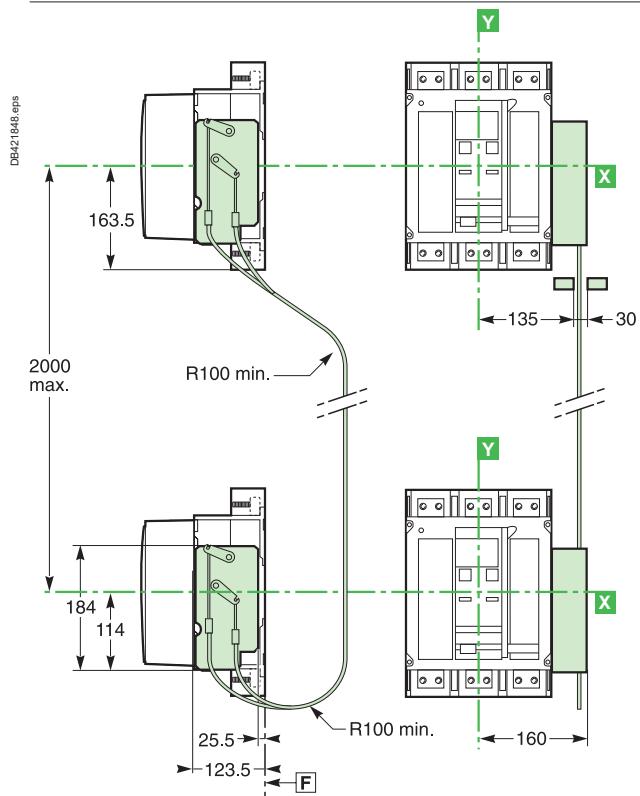


Withdrawable devices

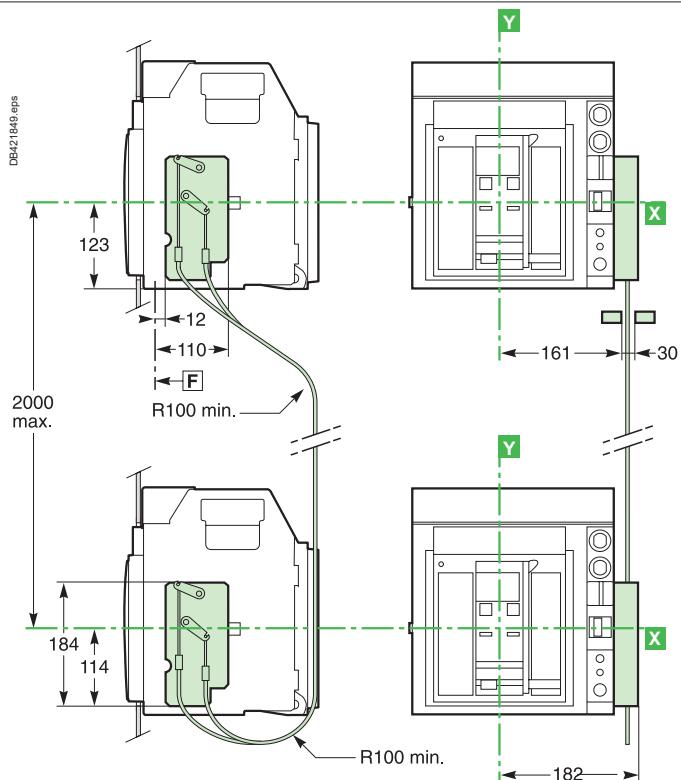


Two MasterPact MTZ1 devices (switch-disconnectors or circuit breakers) one above the other

Fixed devices

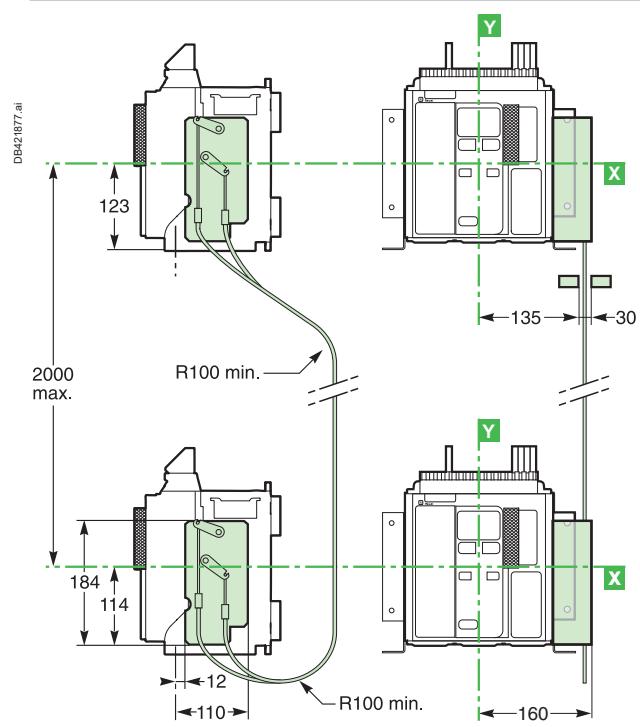

Drawout devices

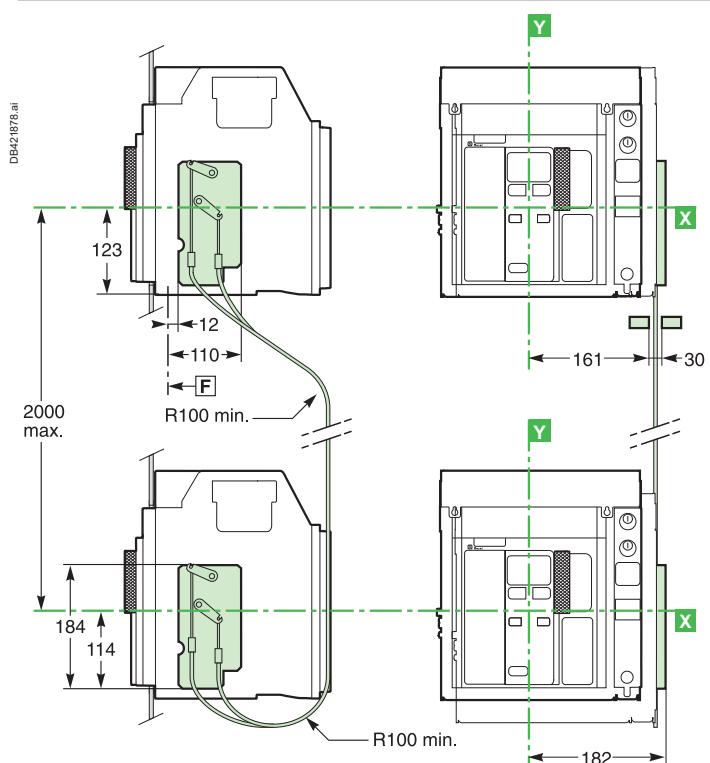

Source-changeover systems

Mechanical interlocking using connecting cables


MasterPact MTZ

Class PC and CB

Two MasterPact MTZ2/MTZ3 devices (switch-disconnectors or circuit breakers)
one above the other

Fixed devices


Drawout devices

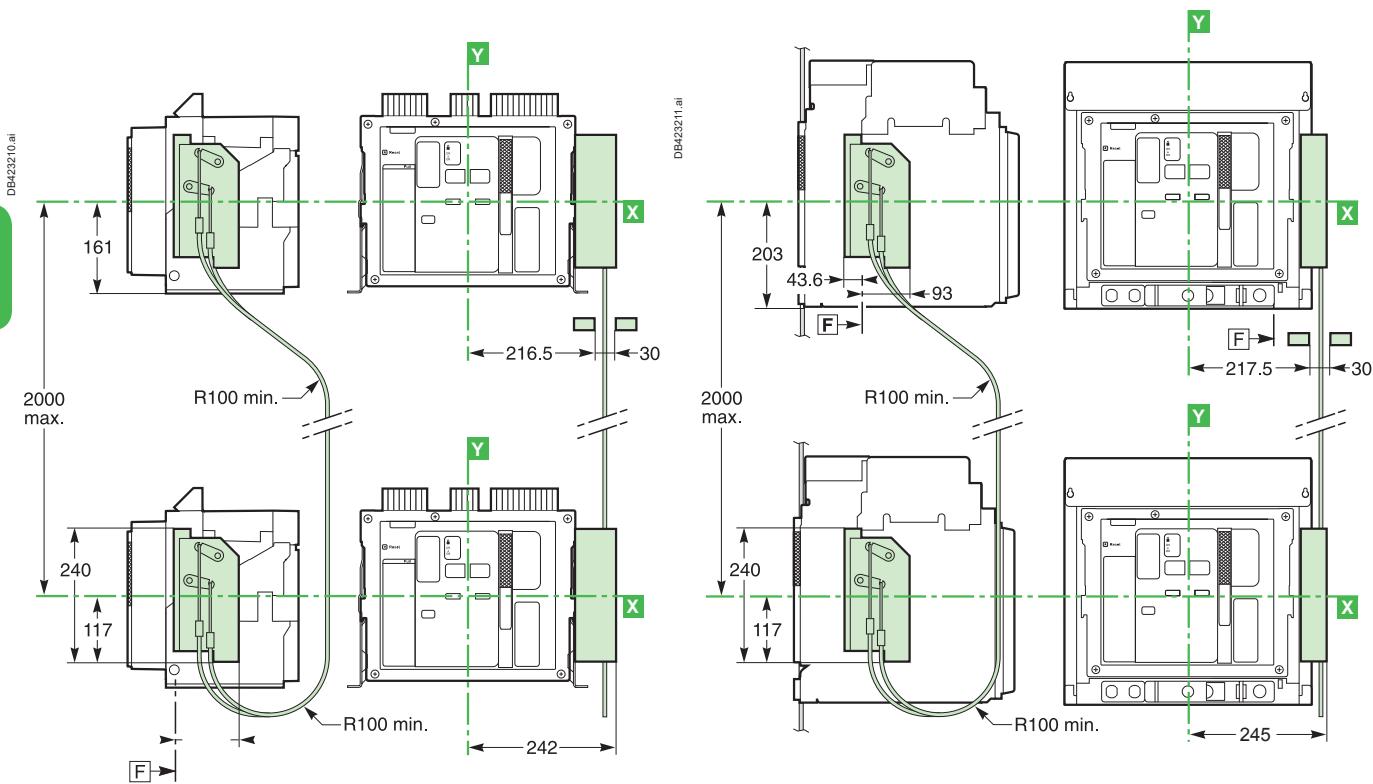

Two MasterPact MTZ1 and MTZ2/MTZ3 devices (switch-disconnectors or circuit breakers)
one above the other

Fixed devices



Drawout devices

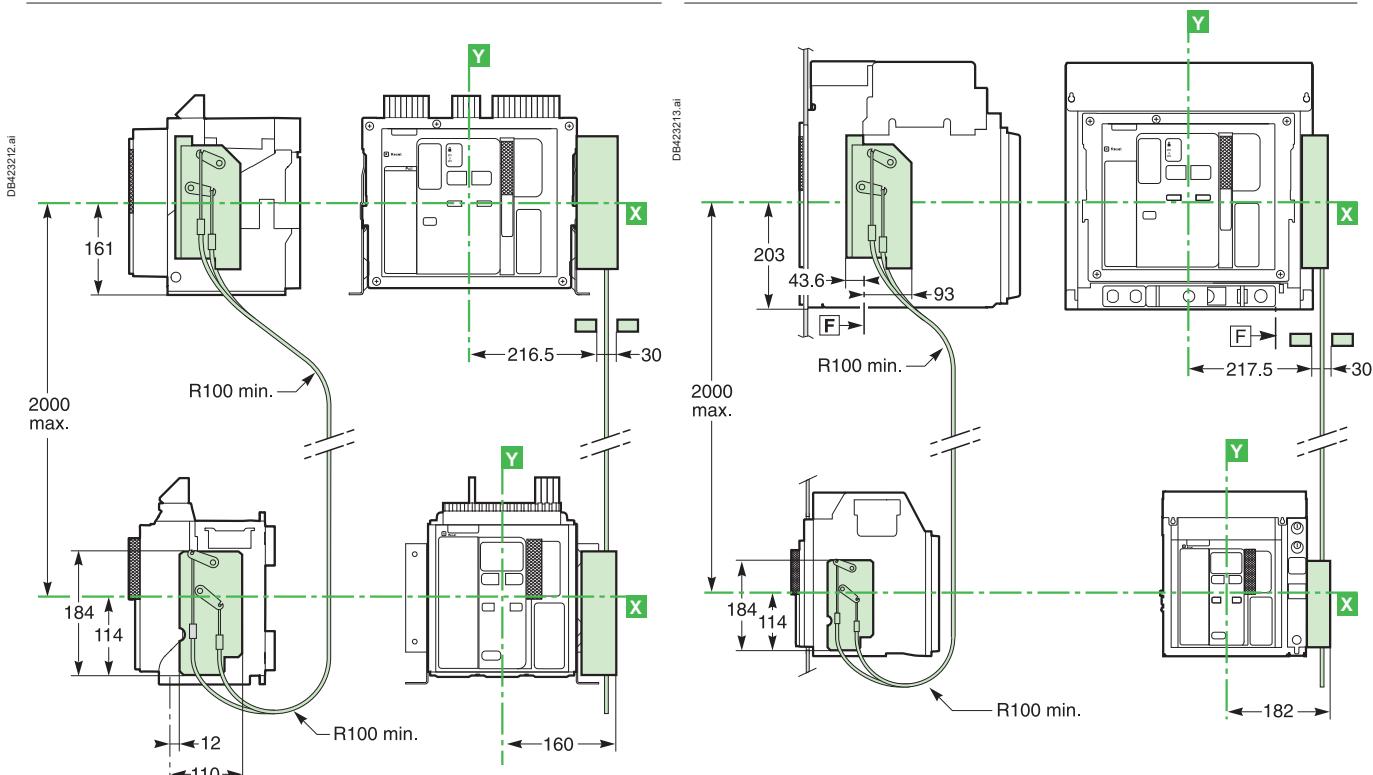



Source-changeover systems

Mechanical interlocking using connecting cables

Class PC and CB

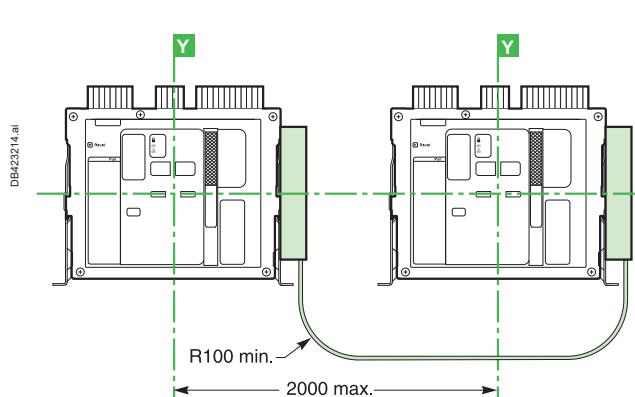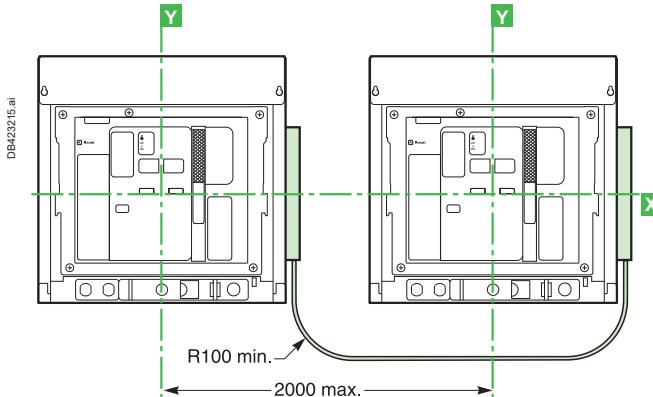MasterPact MTZ2/MTZ3**Two MasterPact MTZ2/MTZ3 devices side-by-side****Fixed devices****Drawout devices**

B

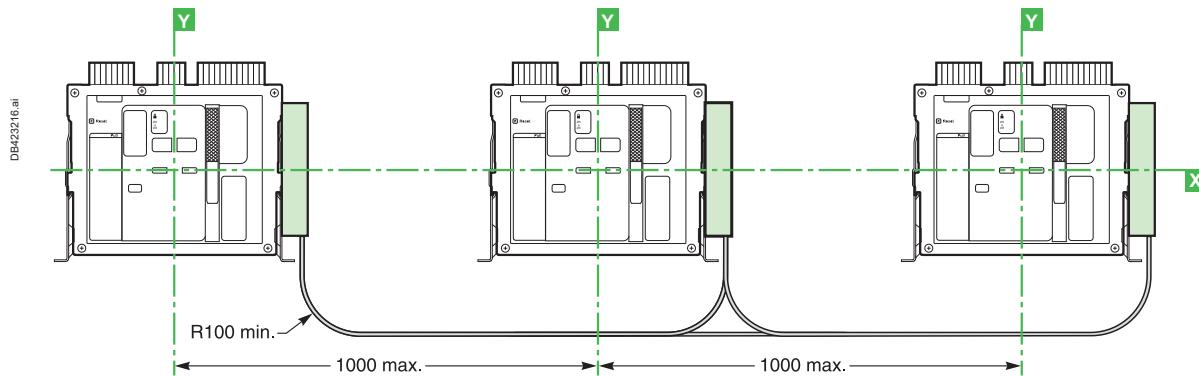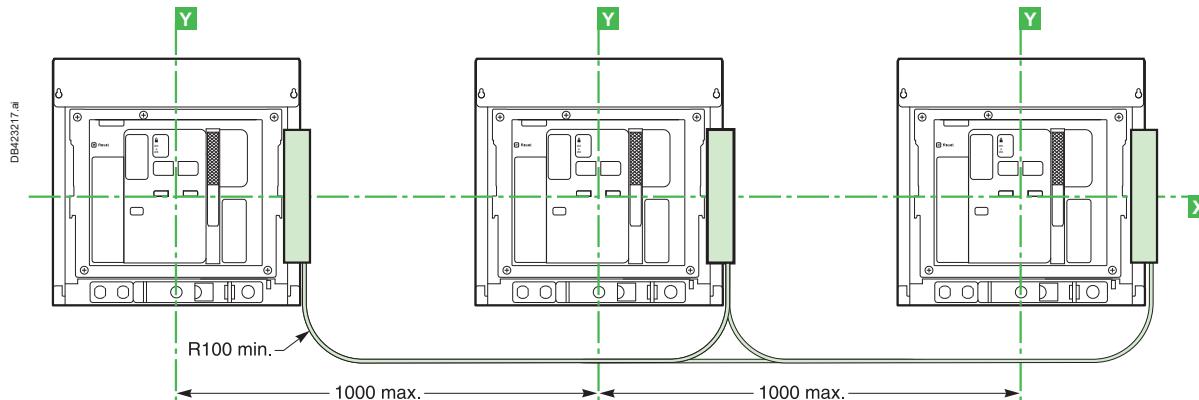Three MasterPact MTZ2/MTZ3 devices (switch-disconnectors or circuit breakers) side-by-side**Fixed devices****Drawout devices**

Source-changeover systems


Mechanical interlocking using connecting cables

MasterPact MTZ2/MTZ3


Class PC and CB

Three MasterPact MTZ2/MTZ3 devices (switch-disconnectors or circuit breakers)
one above the other

Fixed devices




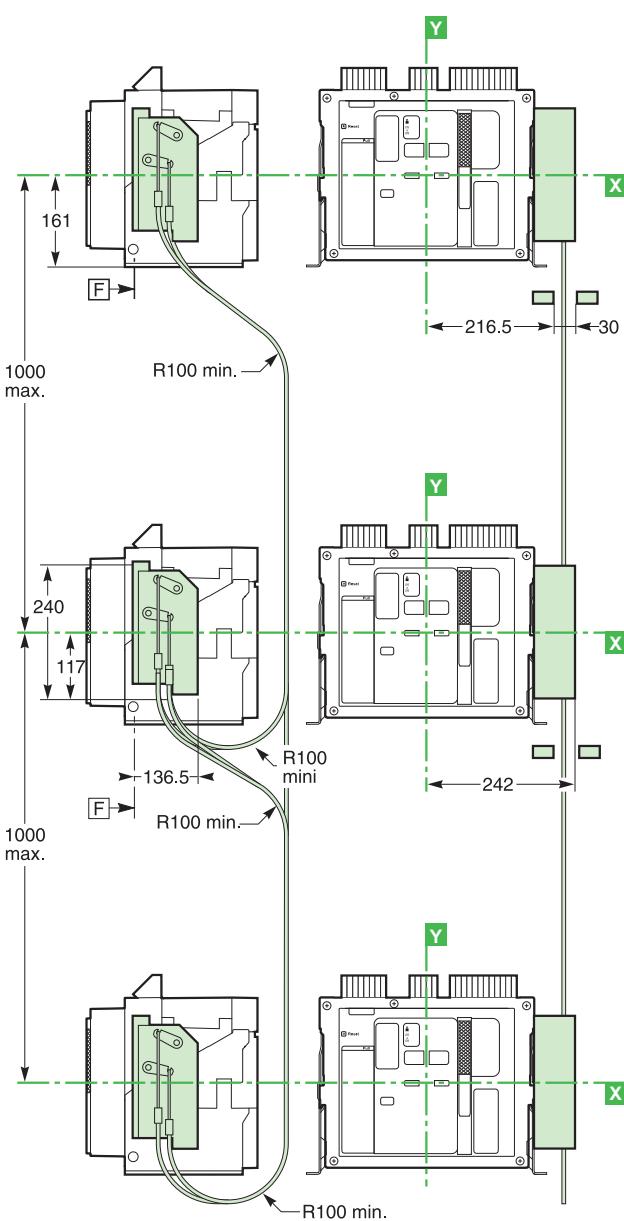


Drawout devices

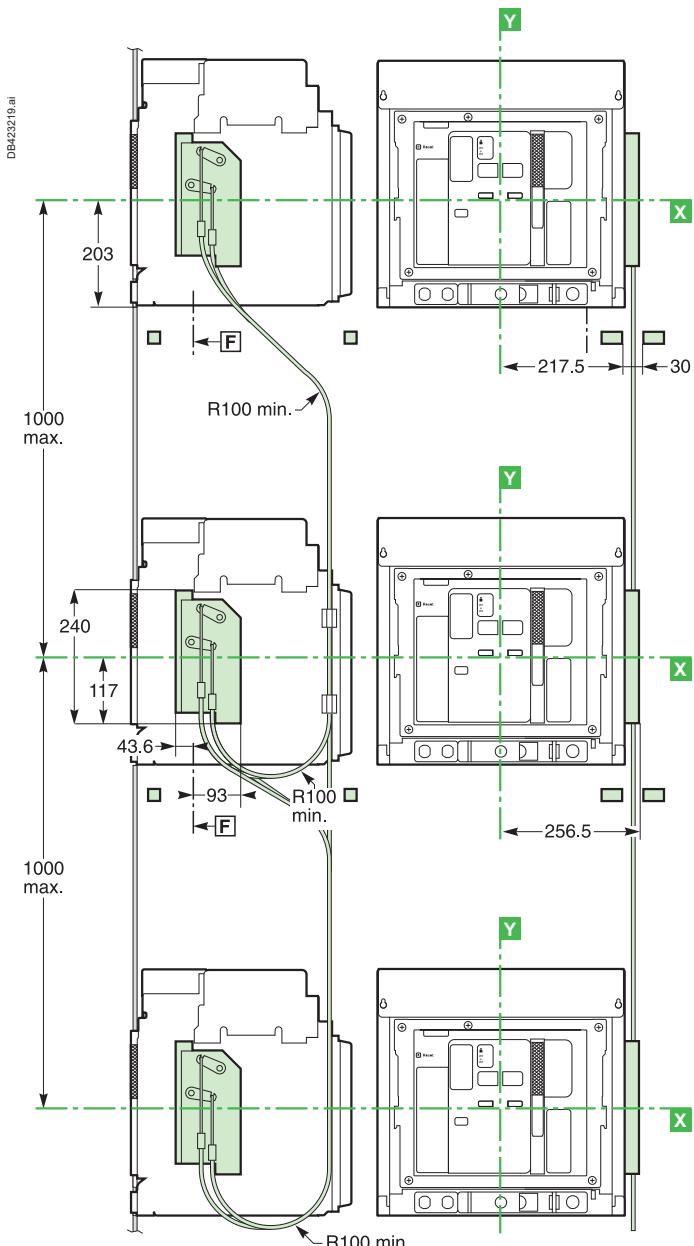

TransferPact

IVE unit, UA/BA controllers

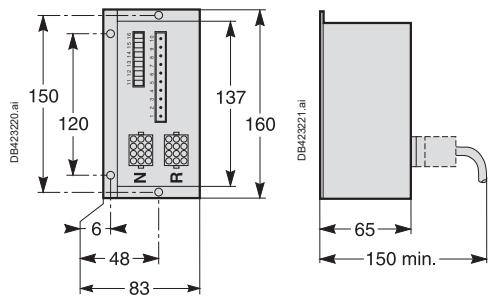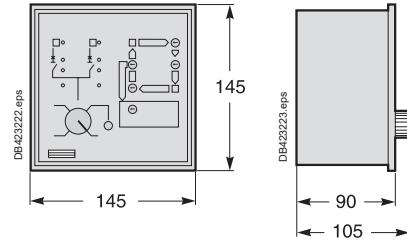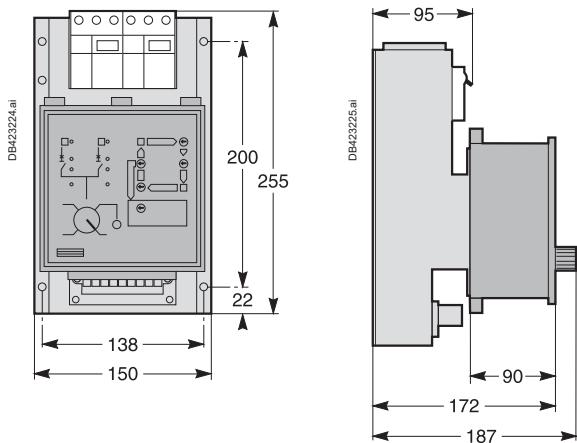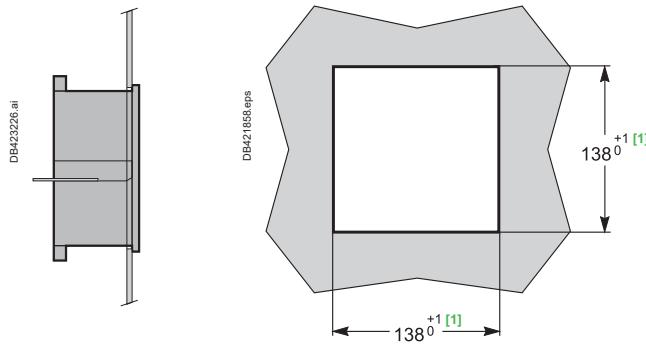IVE unit**UA/BA controllers****ACP control plate and UA/BA controllers****Door cutout for UA/BA controllers**

[1] Cutout according to DIN 43700 standard.

B

B

Electrical diagrams


Standard configurations	C-2
Remote-operated source-changeover systems	
2 ComPact NSX100/630, NS630b/1600	
or MasterPact MTZ1/MTZ2/MTZ3 devices	C-4
2 ComPact NSX100/630 devices	C-5
2 ComPact NS630b/1600 devices	C-8
2 MasterPact MTZ1 or MTZ2/MTZ3 devices	C-11
Source-changeover systems with UA controllers	
2 ComPact NSX100/630, NS630b/1600	
or MasterPact MTZ1/MTZ2/MTZ3 devices	C-16
Controller settings	C-17
Source-changeover systems with BA controllers	
2 ComPact NSX100/630, NS630b/1600	
or MasterPact MTZ1/MTZ2/MTZ3 devices	C-18
Remote-operated source-changeover systems	
3 MasterPact MTZ2/MTZ3 devices.....	C-19

C





Other chapters

Presentation	2
Functions and characteristics	A-1
Dimensions	B-1
Catalog numbers and order forms	D-1

Standard configurations

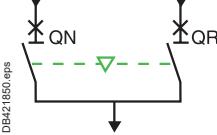ComPact NS, MasterPact MTZ1 and MTZ2/MTZ3		Possible combinations	Typical electrical diagrams	Diagram no.	Page								
Types of mechanical interlocking 2 devices		<table border="1"> <thead> <tr> <th>QN</th> <th>QR</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>0</td> </tr> <tr> <td>0</td> <td>1</td> </tr> </tbody> </table>	QN	QR	0	0	1	0	0	1	ComPact NSX100 to 630: <ul style="list-style-type: none"> ■ electrical interlocking without emergency power off (EPO) auxiliaries: <input type="checkbox"/> with EPO by MN 51201177 C-5 <input type="checkbox"/> with EPO by MX 51201178 C-6 <input type="checkbox"/> with EPO by MX 51201179 C-7 ComPact NS630b to 1600: <ul style="list-style-type: none"> ■ electrical interlocking with lockout after fault: <input type="checkbox"/> permanent replacement source (with IVE) 51201183 C-8 <input type="checkbox"/> with emergency off by shunt release MX (with IVE) 51201184 C-9 <input type="checkbox"/> with emergency off by undervoltage release MN (with IVE) 51201185 C-10 MasterPact MTZ1 and MTZ2/3: <ul style="list-style-type: none"> ■ electrical interlocking with lockout after fault: <input type="checkbox"/> permanent replacement source (with IVE) C-11 <input type="checkbox"/> with EPO by MX (with IVE) C-12 <input type="checkbox"/> with EPO by MN (with IVE) C-13 ■ automatic control with lockout after fault: <input type="checkbox"/> permanent replacement source (with IVE) C-14 <input type="checkbox"/> engine generator set (with IVE) C-15 		
QN	QR												
0	0												
1	0												
0	1												
	DB421850.eps												

C

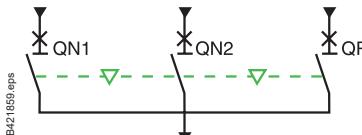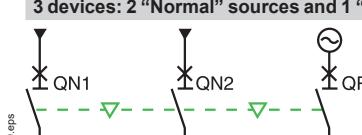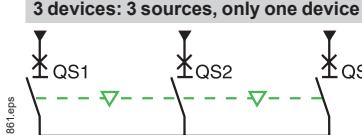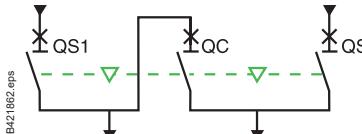MasterPact MTZ2/MTZ3 only																									
Types of mechanical interlocking 3 devices: 2 "Normal" sources and 1 "Replacement" source	Possible combinations	Typical electrical diagrams																							
 DB421859.eps	<table border="1"> <thead> <tr> <th>QN1</th> <th>QN2</th> <th>QR</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> </tr> </tbody> </table>	QN1	QN2	QR	0	0	0	1	1	0	0	0	1	<ul style="list-style-type: none"> ■ electrical interlocking: □ without lockout after fault □ with lockout after fault <p style="text-align: right;">C-19 C-20</p>											
QN1	QN2	QR																							
0	0	0																							
1	1	0																							
0	0	1																							
 DB421860.eps	<table border="1"> <thead> <tr> <th>QN1</th> <th>QN2</th> <th>QR</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> </tr> </tbody> </table>	QN1	QN2	QR	0	0	0	1	0	0	0	0	1	1	1	0	0	1	0	<ul style="list-style-type: none"> ■ automatic control with engine generator set: □ without lockout after fault (with MN) □ with lockout after fault (with MN) <p style="text-align: right;">C-21 C-22</p>					
QN1	QN2	QR																							
0	0	0																							
1	0	0																							
0	0	1																							
1	1	0																							
0	1	0																							
 DB421861.eps	<table border="1"> <thead> <tr> <th>QS1</th> <th>QS2</th> <th>QS3</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> </tr> </tbody> </table>	QS1	QS2	QS3	0	0	0	1	0	0	0	1	0	0	0	1	<ul style="list-style-type: none"> ■ electrical interlocking: □ without lockout after fault □ with lockout after fault <p style="text-align: right;">C-23 C-24</p>								
QS1	QS2	QS3																							
0	0	0																							
1	0	0																							
0	1	0																							
0	0	1																							
 DB421862.eps	<table border="1"> <thead> <tr> <th>QS1</th> <th>QC</th> <th>QS2</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>[1]</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>[1]</td> </tr> </tbody> </table> <p style="text-align: center;">[1] possible by forcing operation</p>	QS1	QC	QS2	0	0	0	1	0	1	1	1	0	0	1	1	1	0	0	[1]	0	0	1	[1]	<ul style="list-style-type: none"> ■ electrical interlocking: □ without lockout after fault □ with lockout after fault ■ automatic control with lockout after fault <p style="text-align: right;">C-25 C-26 C-27</p>
QS1	QC	QS2																							
0	0	0																							
1	0	1																							
1	1	0																							
0	1	1																							
1	0	0	[1]																						
0	0	1	[1]																						

"Lockout after fault" option. This option makes it necessary to manually reset the device following fault tripping.

Remote-operated source-changeover systems


2 ComPact NSX100/630, NS630b/1600

or MasterPact MTZ1/MTZ2/MTZ3 devices

Electrical interlocking by the IVE unit

Independent order to Normal/Replacement source


DB421863.eps

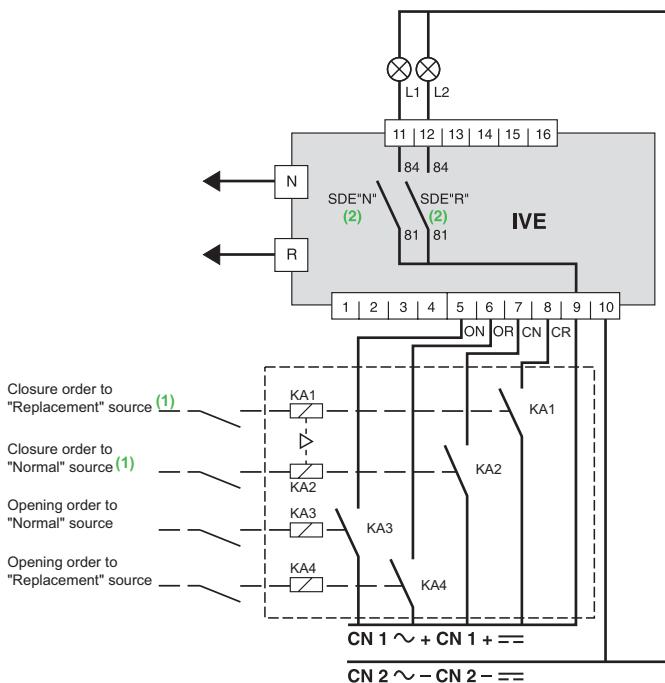

Controlling each circuit breaker independently.

Simultaneous order to Normal/Replacement source

DB421864.eps

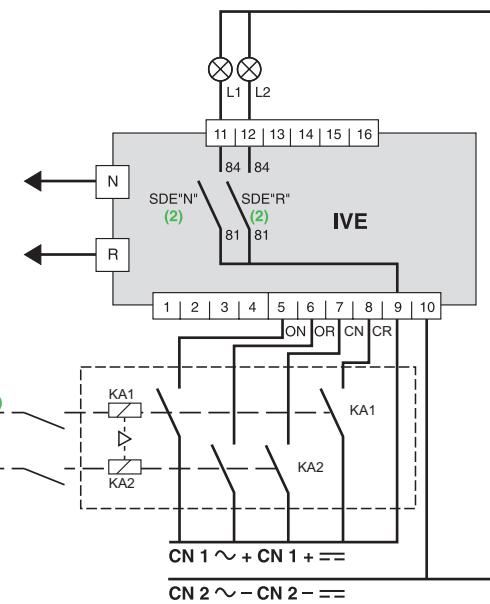

Control of two circuit breakers by "common" transfer order.

[1] See section "IMPORTANT" here after.

[2] Operating diagram: the SDE "fault-trip" signals are transmitted to the IVE unit. The SDE auxiliary contacts are mounted in the circuit breakers.

IMPORTANT

The relays controlling the closing order to the "Normal" and "Replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

It is recommended to use **Tesys K** relays from Schneider Electric reference LC2-K06010●●. These relays are mechanically and electrically interlocked.

Legends


ON	"Normal" source opening order
OR	"Replacement" source opening order
CN	"Normal" source closing order
CR	"Replacement" source closing order
KA1	auxiliary relay
KA2	auxiliary relay
KA3	auxiliary relay
KA4	auxiliary relay
L1	"Normal" source "fault-trip" signal
L2	"Replacement" source "fault-trip" signal
N	"Normal" source auxiliary wiring connector
R	"Replacement" source auxiliary wiring connector

Note: diagram shown with circuits de-energized, circuit breakers open and relays in normal position.

Remote-operated source-changeover systems

2 ComPact NSX100/630 devices

Diagram no. 51201177

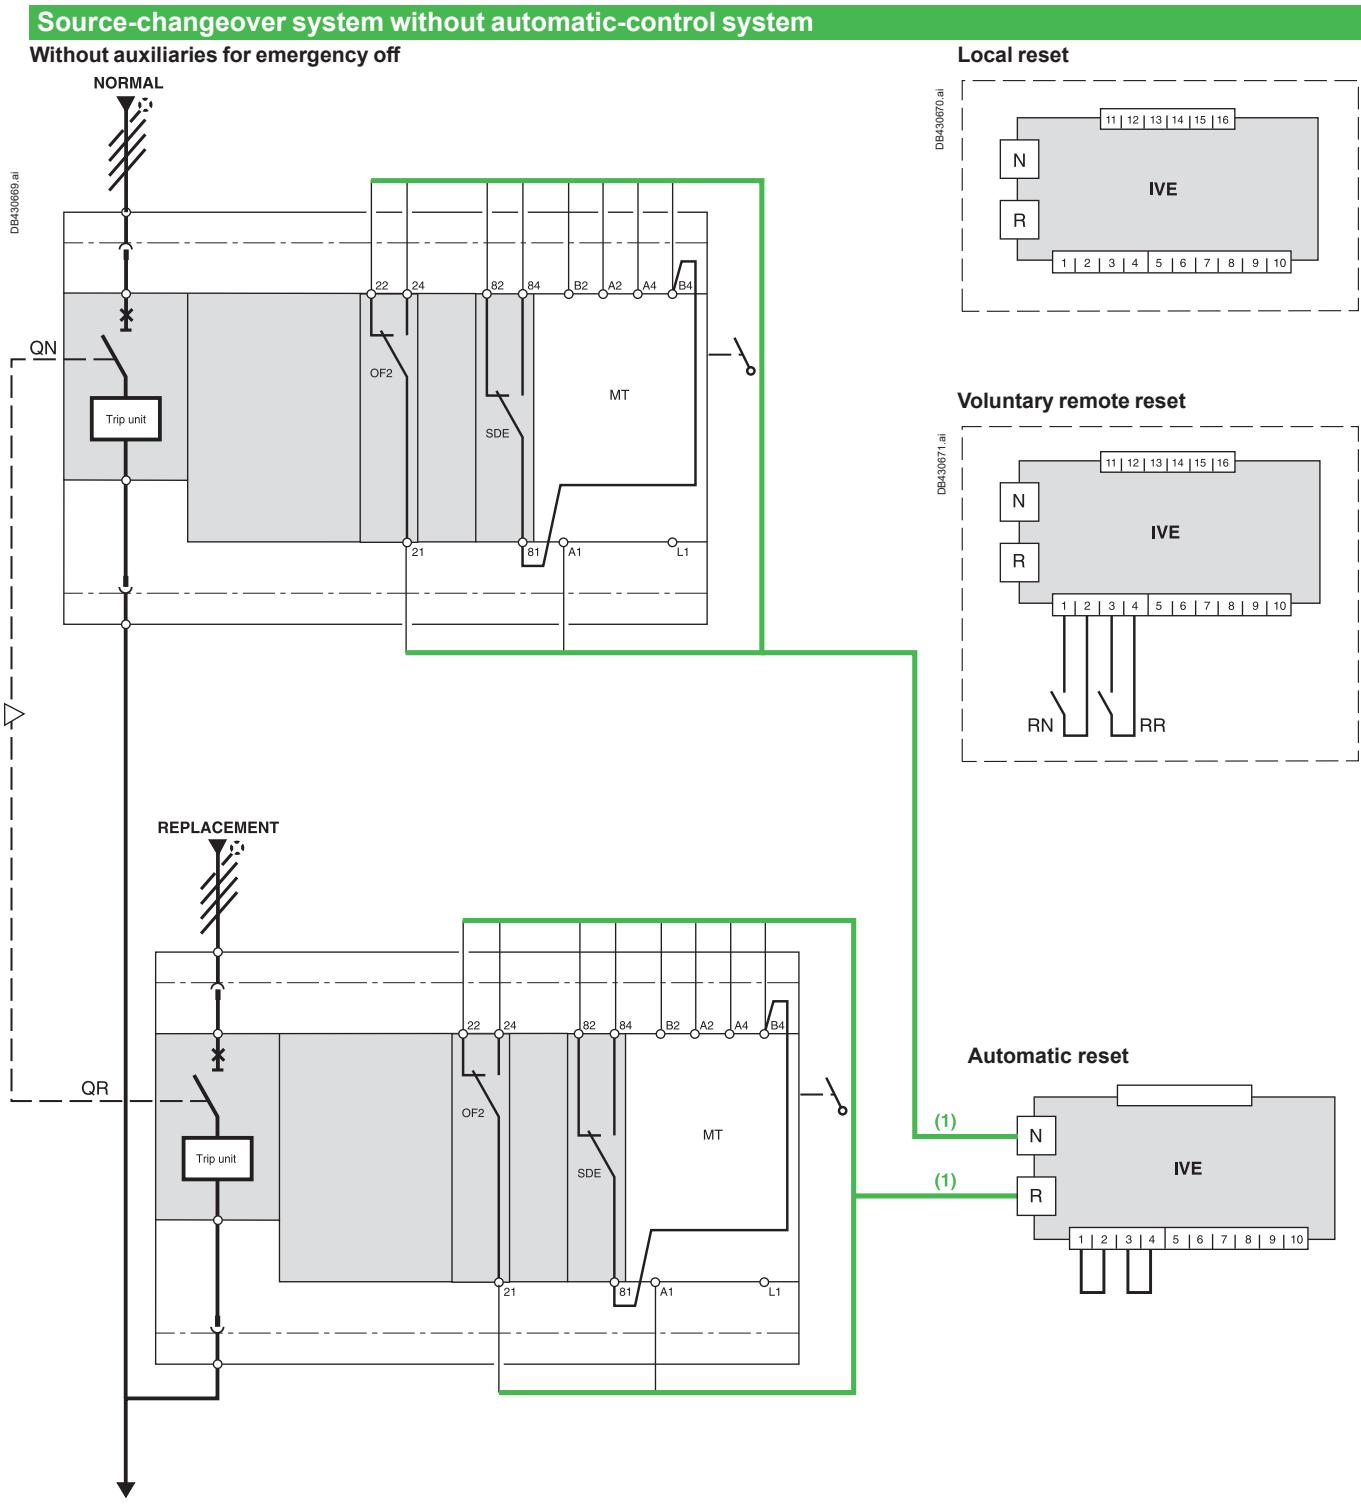**Legends**

- QN "Normal" source ComPact NSX equipped with motor mechanism
- QR "Replacement" source ComPact NSX equipped with motor mechanism
- SDE "fault-trip" indication contact
- IVE electrical interlocking and terminal block unit
- MT motor mechanism
- OF2 breaker ON/OFF indication contact
- RN reset order for breaker QN
- RR reset order for breaker QR

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note: diagram shown with circuits de-energized, circuit breakers open and relays in normal position.


Remote-operated source-changeover systems

2 ComPact NSX100/630 devices

Diagram no. 51201178

Source-changeover system without automatic-control system

With emergency off by MN release and automatic reset

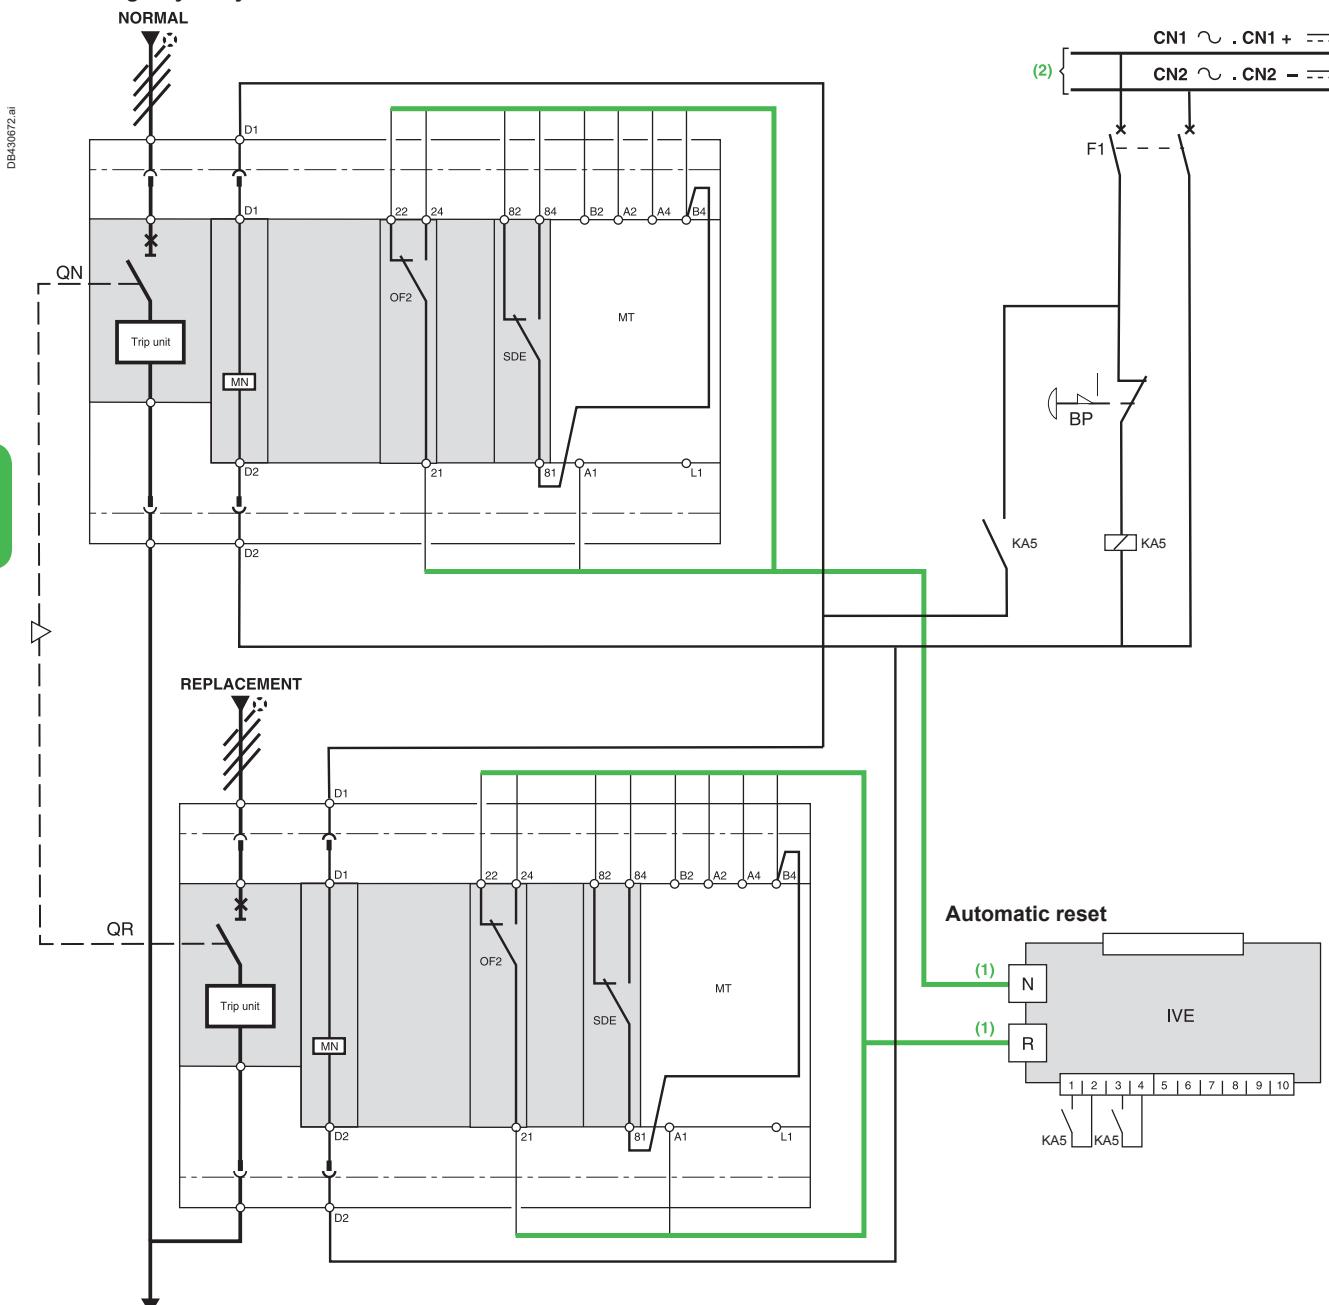

Legends

- QN "Normal" source ComPact NSX equipped with motormechanism
- QR "Replacement" source ComPact NSX equipped with motor mechanism
- MN undervoltage release
- OF2 breaker ON/OFF indication contact
- SDE "fault-trip" indication contact
- MT motor mechanism
- IVE electrical interlocking and terminal block unit
- BP emergency off button with latching
- KA5 auxiliary relay
- F1 auxiliary power supply circuit breaker

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note: after a fault trip, the breaker must be reset manually by pressing its reset button.
Diagram shown with circuits de-energized, circuit breakers open and relays in normal position.


Remote-operated source-changeover systems

2 ComPact NSX100/630 devices

Diagram no. 51201179

Source-changeover system without automatic-control system

With emergency off by MX release and automatic reset

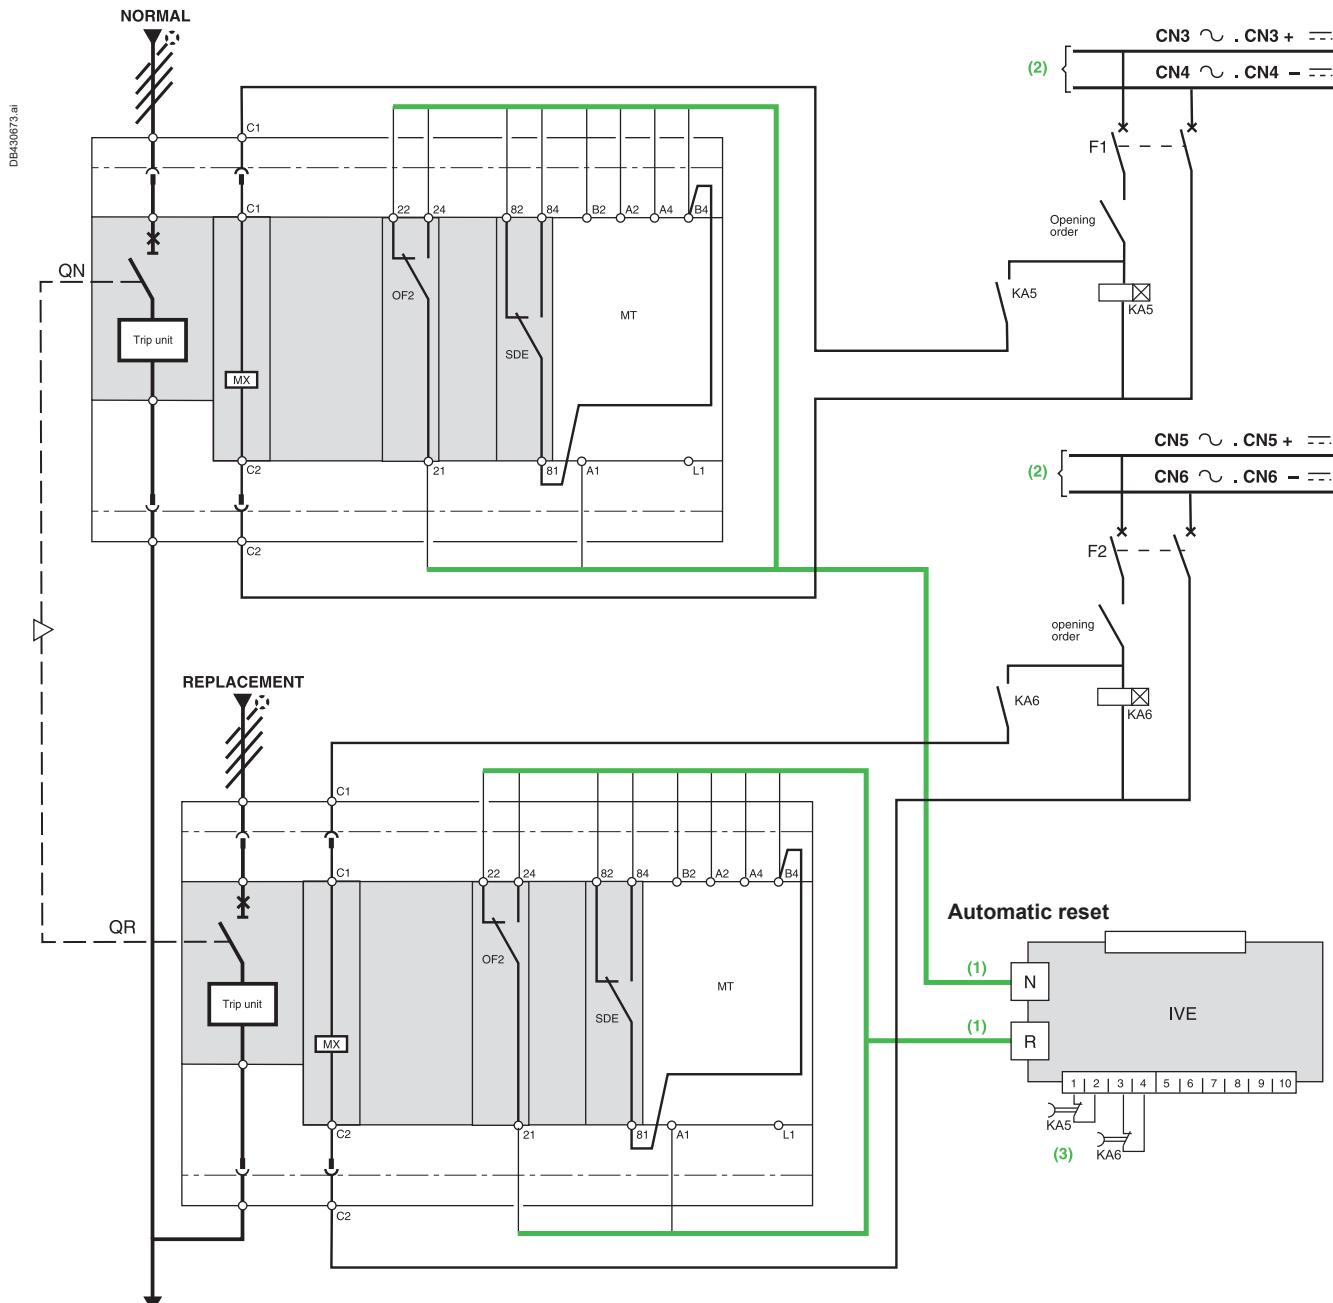

[1] Prefabricated wiring supplied

[2] This source can be:

- the source present in the case of voltage monitoring
- an independent source.

In this case, the MX release must be protected.

[3] The reset orders must be delayed by 0.3 seconds.

States permitted by mechanical interlocking system

Normal Replacement

0	0
1	0
0	1

Note: after a fault trip, the breaker must be reset manually by pressing its reset button.


Diagram shown with circuits de-energized, circuit breakers open and relays in normal position.

Remote-operated source-changeover systems

2 ComPact NS630b/1600 devices

Diagram no. 51201183

Electrical interlocking by IVE unit

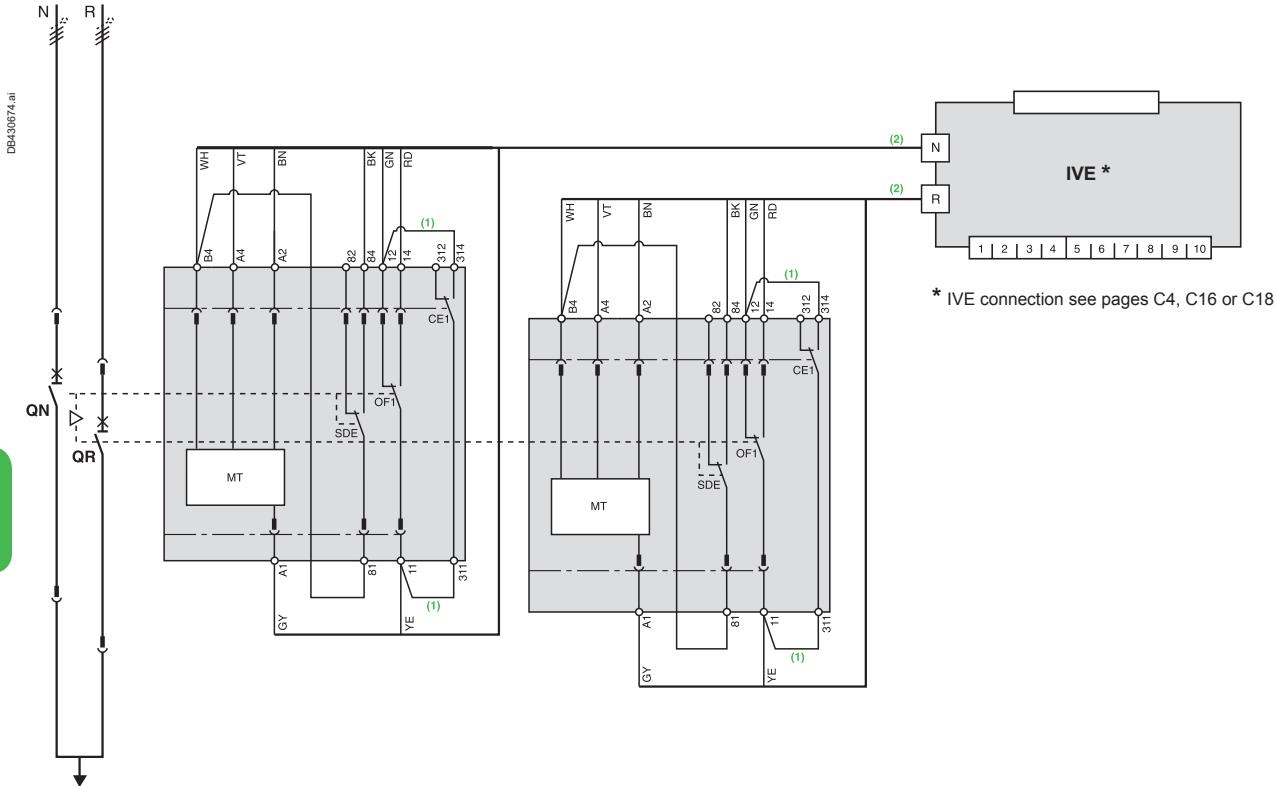

C

ATTENTION

The diagram shows the electrical wiring for circuit breakers.
When wiring the SDE with **switch-disconnectors**, connect
wire BK to terminal 82.

[1] Not to be wired on fixed version.

[2] Prefabricated wiring supplied.

Legends

- QN "Normal" source ComPact NS630b to 1600
- QR "Replacement" source ComPact NS630b to 1600
- OF... breaker ON/OFF indication contact
- SDE "fault-trip" indication contact
- CE1 "connected-position" indication contact (carriage switch)
- F1 auxiliary power supply circuit breaker
- IVE electrical interlocking and terminal block unit
- ON "Normal" source opening order
- OR "Replacement" source opening order
- CN "Normal" source closing order (0.25 second delay)
- CR "Replacement" source closing order (0.25 second delay)
- MT Motor Mechanism

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1


Note: after a fault trip, the breaker must be reset manually by pressing its reset button.
Diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...)
= supply voltage of electrical auxiliaries (electrical operation, MT...).

Remote-operated source-changeover systems

2 ComPact NS630b/1600 devices

Diagram no. 51201184

Electrical interlocking by IVE unit with emergency off by shunt release

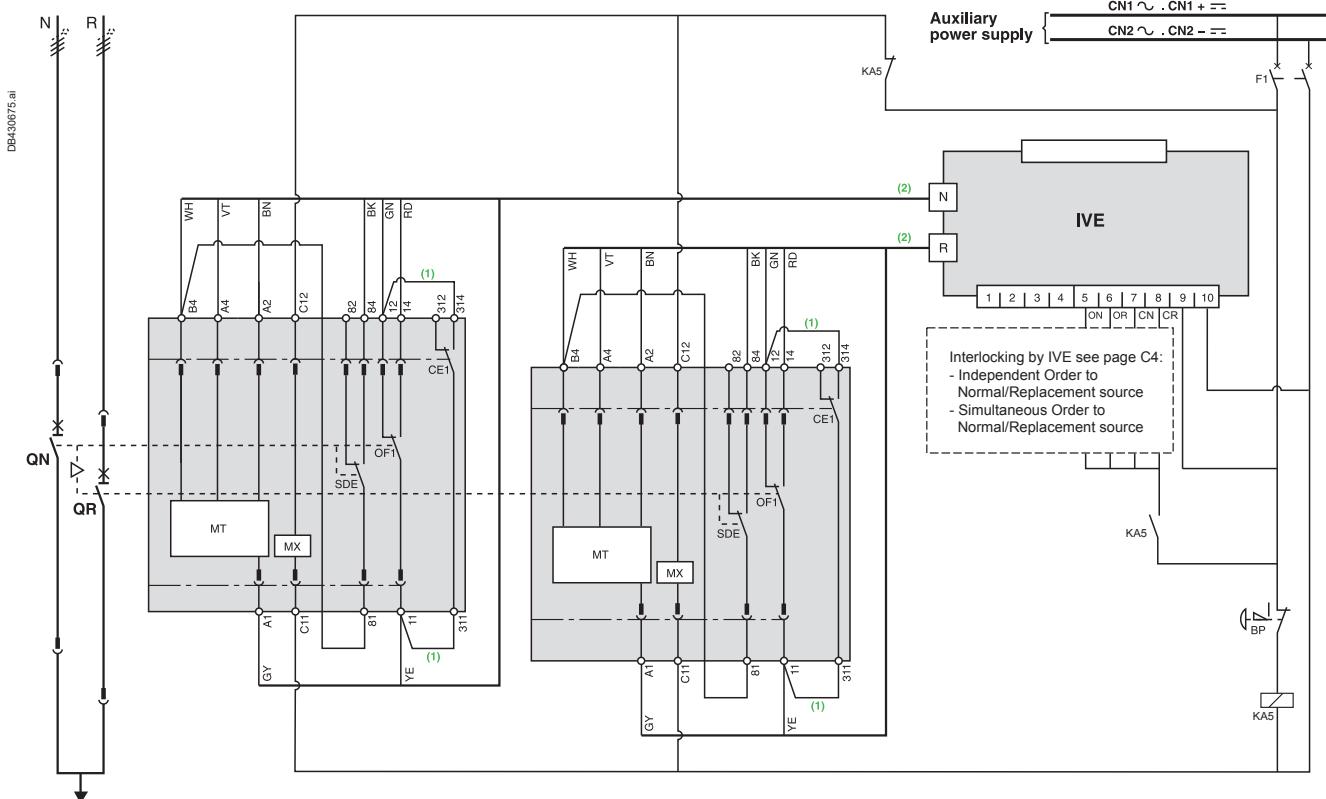

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with **switch-disconnectors**, connect wire BK to terminal 82.

[1] Not to be wired on fixed version.
[2] Prefabricated wiring supplied.

Legends

- QN "Normal" source ComPact NS630b to 1600
- QR "Replacement" source ComPact NS630b to 1600
- OF... breaker ON/OFF indication contact
- SDE "fault-trip" indication contact
- CE1 "connected-position" indication contact (carriage switch)
- F1 auxiliary power supply circuit breaker
- IVE electrical interlocking and terminal block unit
- MX shunt release
- BP emergency off button with latching
- KA5 auxiliary relay
- ON "Normal" source opening order
- OR "Replacement" source opening order
- CN "Normal" source closing order (0.25 second delay)
- CR "Replacement" source closing order (0.25 second delay)
- MT Motor Mechanism

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1


Note: after a fault trip, the breaker must be reset manually by pressing its reset button.
Diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...)
= supply voltage of electrical auxiliaries (electrical operation, MX, MT,...).

Remote-operated source-changeover systems

2 ComPact NS630b/1600 devices

Diagram no. 51201185

Electrical interlocking by IVE unit with emergency off by undervoltage release

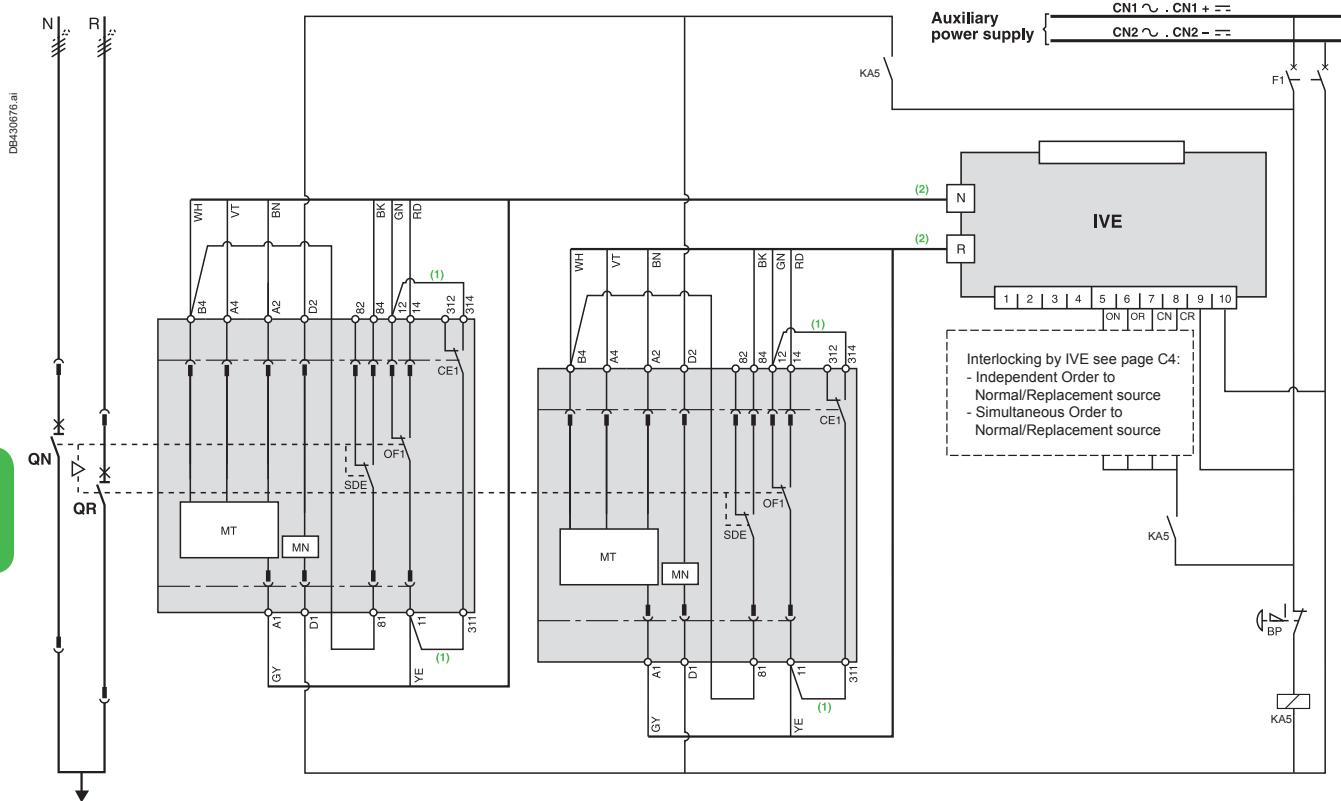

ATTENTION

The diagram shows the electrical wiring for circuit breakers.
When wiring the SDE with switch-disconnectors, connect
wire BK to terminal 82.

[1] Not to be wired on fixed version.
[2] Prefabricated wiring supplied.

Legends

- QN "Normal" source ComPact NS630b to 1600
- QR "Replacement" source ComPact NS630b to 1600
- OF... breaker ON/OFF indication contact
- SDE "fault-trip" indication contact
- CE1 "connected-position" indication contact (carriage switch)
- F1 auxiliary power supply circuit breaker
- IVE electrical interlocking and terminal block unit
- MN undervoltage release
- BP emergency off button with latching
- KA5 auxiliary relay
- ON "Normal" source opening order
- OR "Replacement" source opening order
- CN "Normal" source closing order (0.25 second delay)
- CR "Replacement" source closing order (0.25 second delay)
- MT Motor Mechanism

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system


Normal	Replacement
0	0
1	0
0	1

Note: after a fault trip, the breaker must be reset manually by pressing its reset button.
Diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MN, MT...).

Remote-operated source-changeover systems

2 MasterPact MTZ1 or MTZ2/MTZ3 devices

Electrical interlocking by IVE unit with lockout after a fault

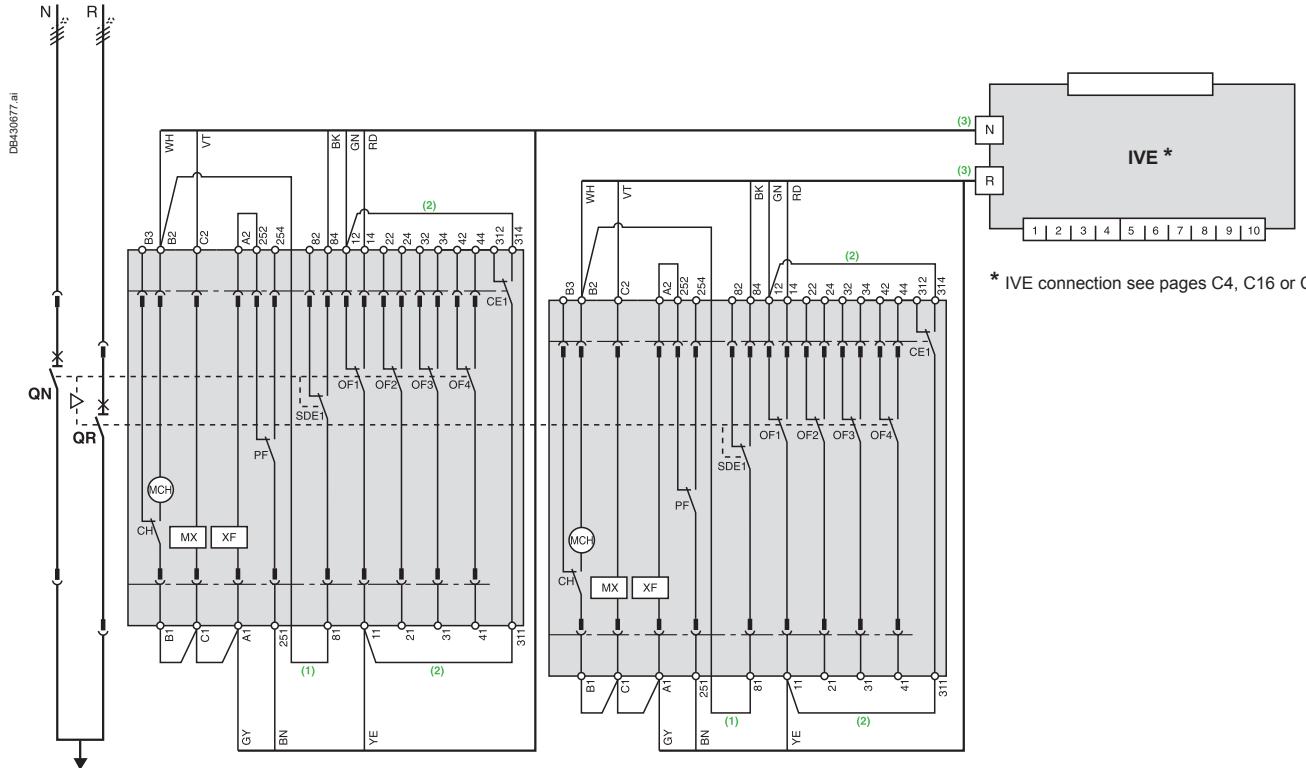

* IVE connection see pages C4, C16 or C18

C

ATTENTION

The diagram shows the electrical wiring for circuit breakers.
When wiring the SDE with **switch-disconnectors**, connect
wire BK to terminal 82.

- [1] Not to be wired for the "without lockout after a fault" solution.
- [2] Not to be wired on fixed version.
- [3] Prefabricated wiring supplied.

Legends

QN "Normal" source MasterPact MTZ1 or MTZ2 or MTZ3
 QR "Replacement" source MasterPact MTZ1 or MTZ2 or MTZ3
 MCH spring-charging motor
 MX standard opening voltage release
 XF standard closing voltage release
 OF... breaker ON/OFF indication contact
 SDE1 "fault-trip" indication contact
 PF "ready-to-close" contact
 CE1 "connected-position" indication contact (carriage switch)
 CH "springs charged" indication contact
 IVE electrical interlocking and terminal block unit
 F1 auxiliary power supply circuit breaker
 ON "Normal" source opening order
 OR "Replacement" source opening order
 CN "Normal" source closing order (0.25 second delay)
 CR "Replacement" source closing order (0.25 second delay)

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1


Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

2 MasterPact MTZ1 or MTZ2 or MTZ3 devices

Electrical interlocking by IVE unit with lockout after a fault and emergency off by shunt release

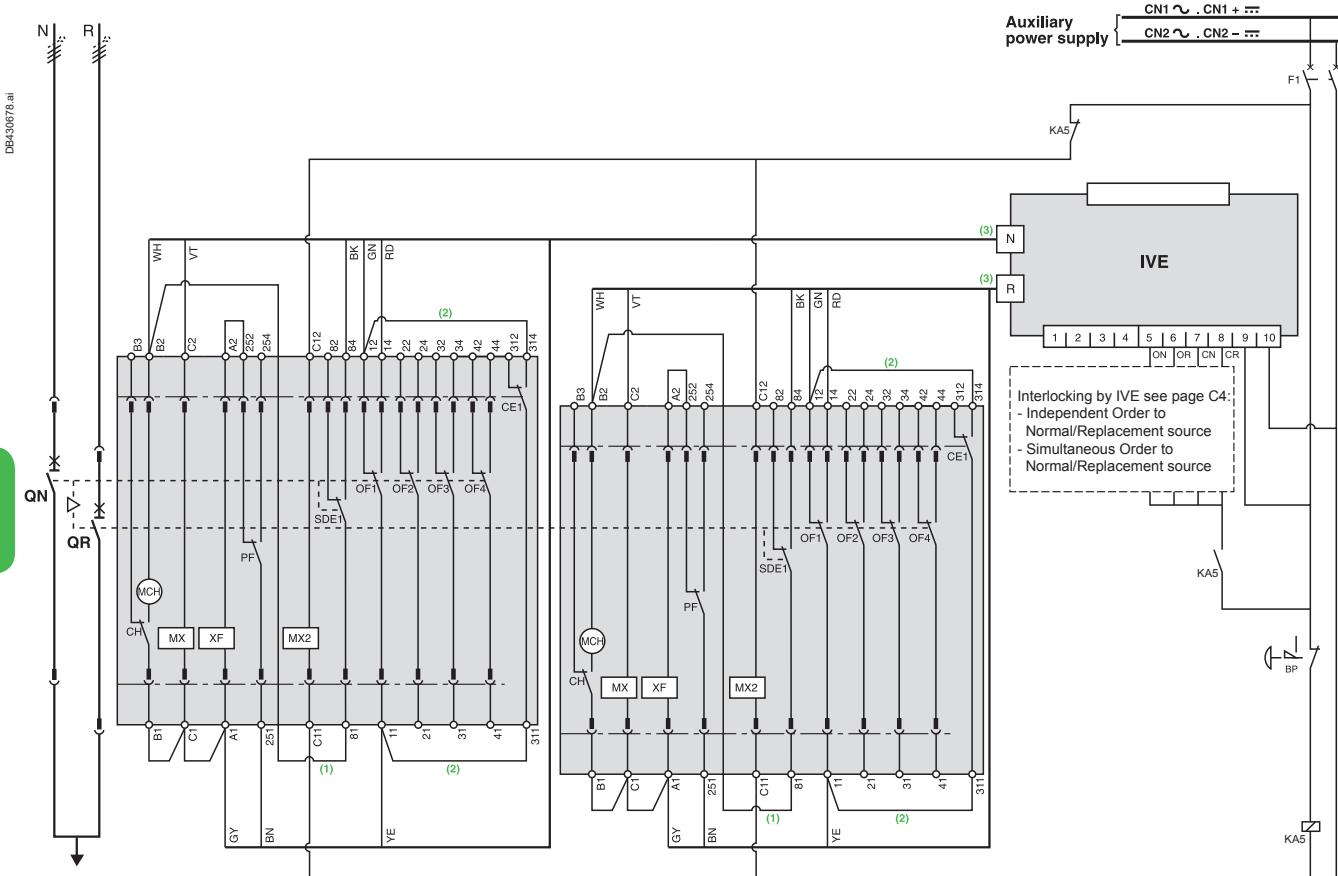

ATTENTION

The diagram shows the electrical wiring for circuit breakers.
 When wiring the SDE with switch-disconnectors, connect wire BK to terminal 82.

[1] Not to be wired for the "without lockout after a fault" solution.

[2] Not to be wired on fixed version.

[3] Prefabricated wiring supplied.

Legends

QN "Normal" source MasterPact MTZ1 or MTZ2 or MTZ3
 QR "Replacement" source MasterPact MTZ1 or MTZ2 or MTZ3
 MCH spring-charging motor
 MX standard opening voltage release
 XF standard closing voltage release
 OF... breaker ON/OFF indication contact
 SDE1 "fault-trip" indication contact
 PF "ready-to-close" contact
 CE1 "connected-position" indication contact (carriage switch)
 CH "springs charged" indication contact
 IVE electrical interlocking and terminal block unit
 KA5 auxiliary relay
 F1 auxiliary power supply circuit breaker
 BP emergency off button with latching
 ON "Normal" source opening order
 OR "Replacement" source opening order
 CN "Normal" source closing order (0.25 second delay)
 CR "Replacement" source closing order (0.25 second delay)

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system


Normal	Replacement
0	0
1	0
0	1

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...)
 = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

2 MasterPact MTZ1 or MTZ2 or MTZ3 devices

Electrical interlocking by IVE unit with lockout after a fault and emergency off by undervoltage release

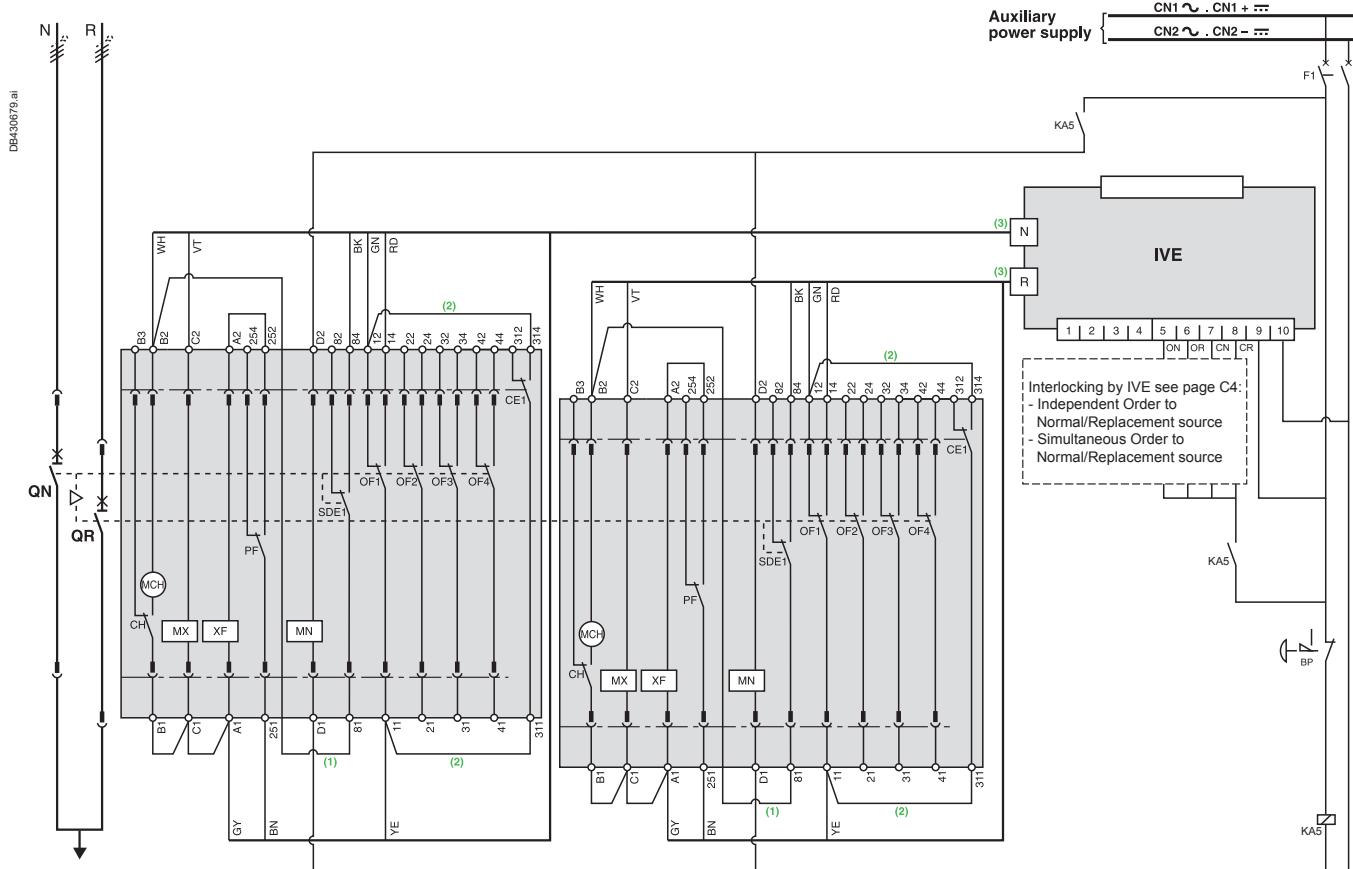

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect wire BK to terminal 82.

- [1] Not to be wired for the "without lockout after a fault" solution.
- [2] Not to be wired on fixed version.
- [3] Prefabricated wiring supplied.

Legends

QN	"Normal" source MasterPact MTZ1 or MTZ2 or MTZ3
QR	"Replacement" source MasterPact MTZ1 or MTZ2 or MTZ3
MCH	spring-charging motor
MX	standard opening voltage release
XF	standard closing voltage release
MN	undervoltage release
OF...	breaker ON/OFF indication contact
SDE1	"fault-trip" indication contact
PF	"ready-to-close" contact
CE1	"connected-position" indication contact (carriage switch)
CH	"springs charged" indication contact
IVE	electrical interlocking and terminal block unit
KA5	auxiliary relay
F1	auxiliary power supply circuit breaker
BP	emergency off button with latching
ON	"Normal" source opening order
OR	"Replacement" source opening order
CN	"Normal" source closing order (0.25 second delay)
CR	"Replacement" source closing order (0.25 second delay)

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system


Normal	Replacement
0	0
1	0
0	1

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, MN, XF...).

Remote-operated source-changeover systems

2 MasterPact MTZ1 or MTZ2 or MTZ3 devices

Automatic-control system for permanent replacement source with lockout after a fault (with MN)

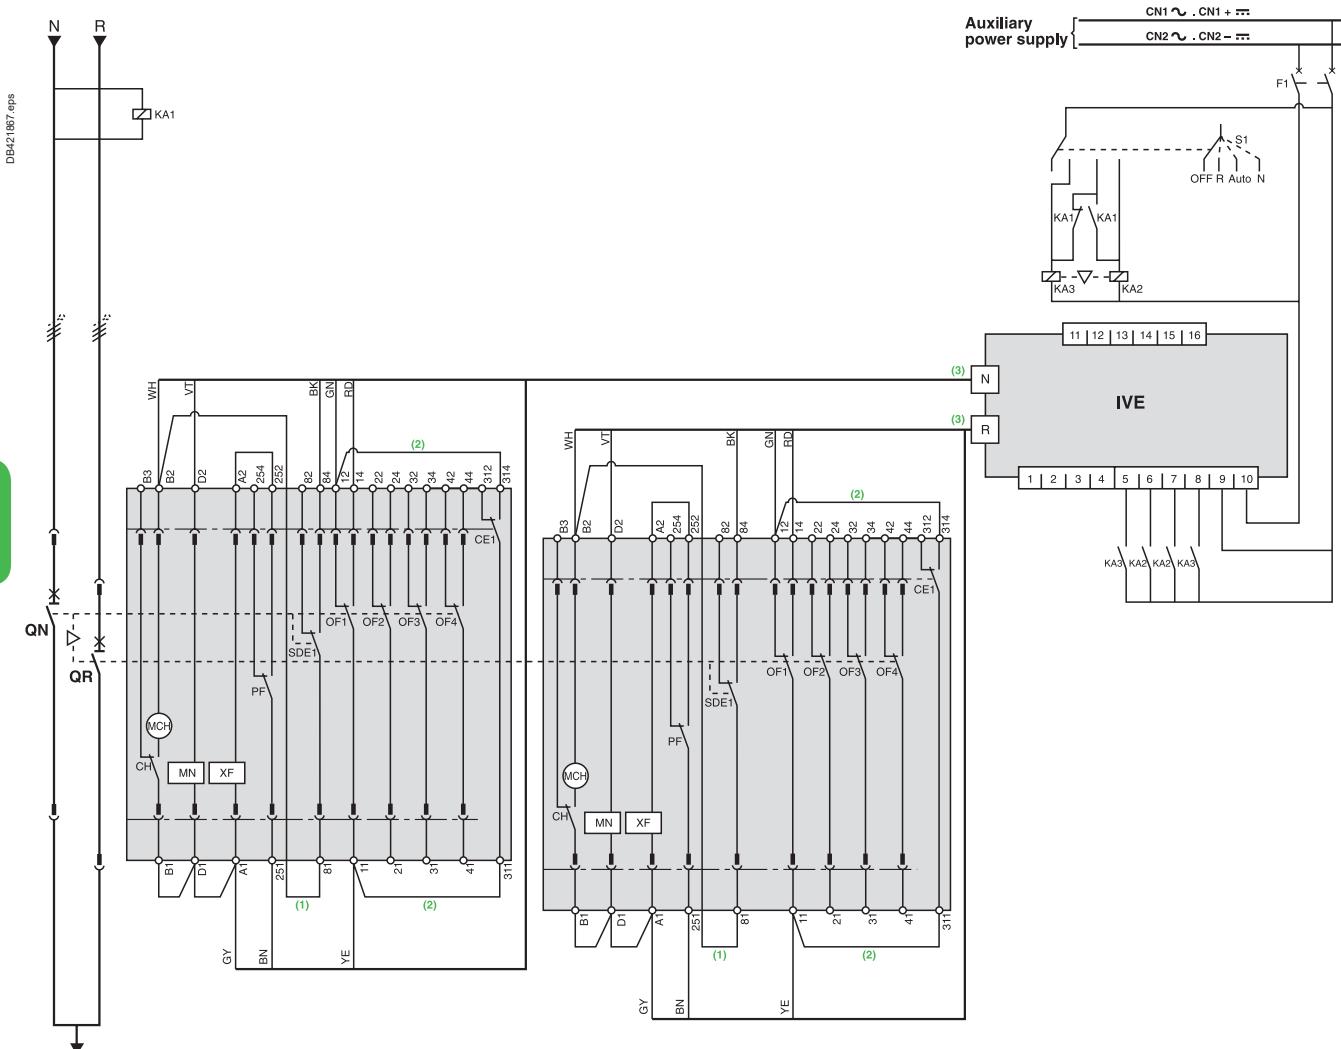

ATTENTION
The diagram shows the electrical wiring for circuit breakers.
When wiring the SDE with switch-disconnectors, connect
wire BK to terminal 82.

[1] Not to be wired for the "without lockout after a fault" solution.
 [2] Not to be wired on fixed version.
 [3] Prefabricated wiring supplied.

IMPORTANT

The relays controlling the closing order to the "Normal" and "Replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

It is recommended to use **Tesys K** relays from Schneider Electric reference LC2-K06010●●. These relays are mechanically and electrically interlocked.

Legends

QN	"Normal" source MasterPact MTZ1 or MTZ2 or MTZ3
QR	"Replacement" source MasterPact MTZ1 or MTZ2 or MTZ3
MCH	spring-charging motor
XF	standard closing voltage release
MN	undervoltage release
OF...	breaker ON/OFF indication contact
SDE1	"fault-trip" indication contact
PF	"ready-to-close" contact
CE1	"connected-position" indication contact (carriage switch)
CH	"springs charged" indication contact
IVE	electrical interlocking and terminal block unit
F1	auxiliary power supply circuit breaker
F2	circuit breaker (high breaking capacity)
S1	control switches
KA1	auxiliary relays
KA2	auxiliary relays
KA3	auxiliary relays

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown


States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
 Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).

Remote-operated source-changeover systems

2 MasterPact MTZ1 or MTZ2 or MTZ3 devices

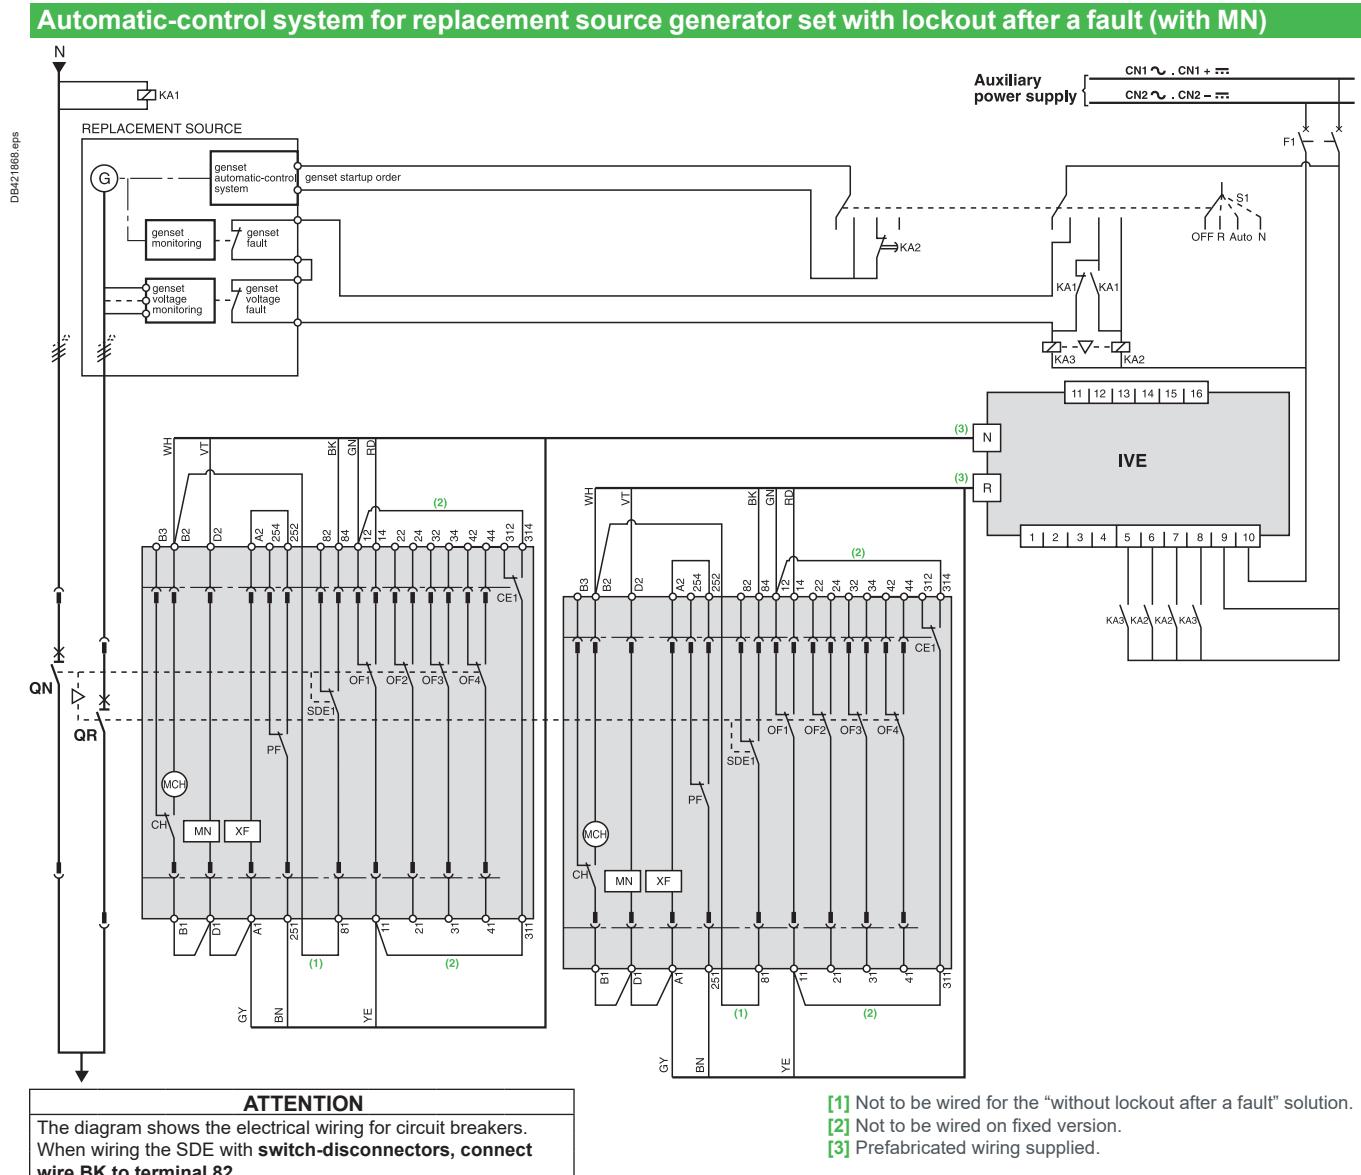

IMPORTANT

The relays controlling the closing order to the "Normal" and "Replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

It is recommended to use **Tesys K** relays from Schneider Electric reference LC2-K06010●●. These relays are mechanically and electrically interlocked.

Legends
QN "Normal" source MasterPact MTZ1 or MTZ2 or MTZ3
QR "Replacement" source MasterPact MTZ1 or MTZ2 or MTZ3
MCH spring-charging motor
XF standard closing voltage release
MN undervoltage release
OF... breaker ON/OFF indication contact
SDE1 "fault-trip" indication contact
PF "ready-to-close" contact
CE1 "connected-position" indication contact (carriage switch)
CH "springs charged" indication contact
IVE electrical interlocking and terminal block unit
F1 auxiliary power supply circuit breaker
F2 circuit breaker (high breaking capacity)
S1 control switches
KA1 auxiliary relay
KA2 time delay for genset startup order to avoid starting the genset for transient UN disturbances
KA3 auxiliary relay

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normal	Replacement
0	0
1	0
0	1

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.


Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).

Source-changeover systems with UA controllers


2 ComPact NSX100/630, NS630b/1600

or MasterPact MTZ1/MTZ2/MTZ3 devices


Source-changeover system with UA controller

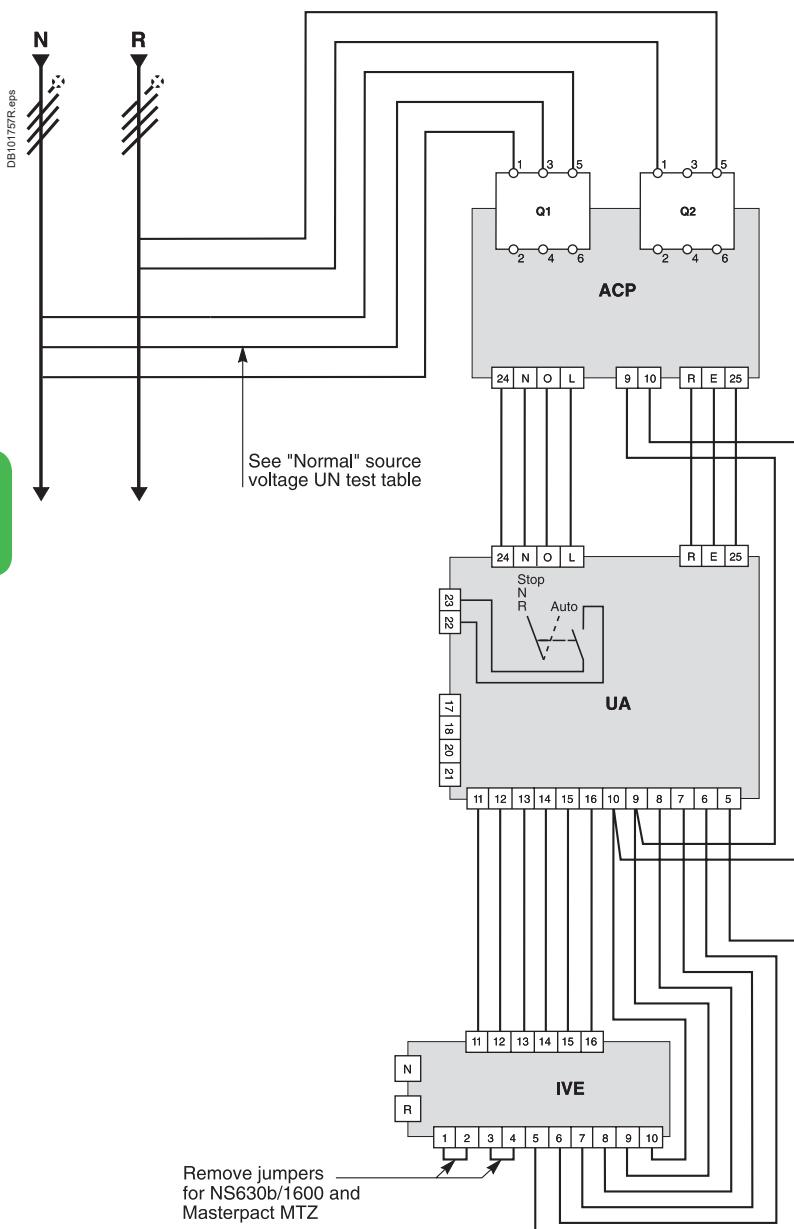

Load shedding and genset management

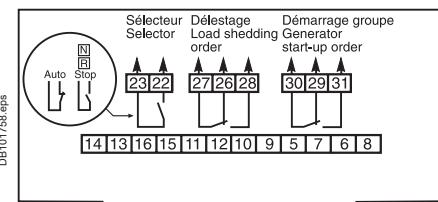

Transfer conditions

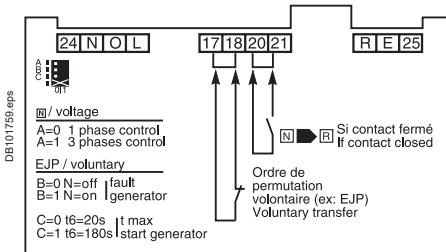

Terminals 20 and 21:
additional control contact (not part of controller).

Tests on “Normal” and “Replacement” source voltages

“Normal” source voltage UN test

Ref. UA UA150	29472 29474	29472 29474	29473 29475
Supply voltage	N / φ 220/240VAC 50/60Hz	φ / φ 220/240VAC 50/60Hz	φ / φ 380/415VAC 50/60Hz 440V - 60Hz
Switch position			
A = 0			
A = 1			

“Replacement” source voltage UR test

The single-phase check for UR is implemented across terminals 1 and 5 of circuit breaker Q2.

Legends

- | Legends | |
|---------|--|
| Q1 | circuit breaker supplying and protecting the automatic-control circuits for the "Normal" source |
| Q2 | circuit breaker supplying and protecting the automatic-control circuits for the "Replacement" source |
| ACP | control plate |
| UA | automatic controller |
| IVE | electrical interlocking and terminal block unit |


Note: diagram shown with circuits de-energized, circuit breakers open and relays in normal position.

Source-changeover systems with UA controllers

Controller settings

Source changeover system with UA controller

Controller settings

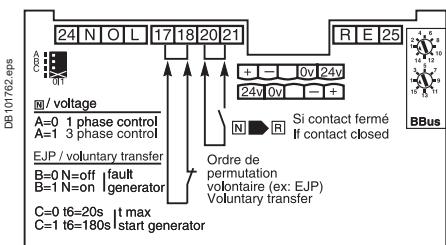

Tests on "Normal" source voltage

A = 0 single-phase test,
A = 1 three-phase test.

Voluntary transfert (e.g. for energy management)

- action in the event of genset failure
- B = 0 circuit breaker N opens,
- B = 1 circuit breaker N remains closed.
- maximum permissible genset startup time (T6)
- C = 0 T = 120 s,
- C = 1 T = 180 s.

After this time has elapsed, the genset is considered to have failed.


C

Source-changeover systems with BA controllers


2 ComPact NSX100/630, NS630b/1600

or MasterPact MTZ1/MTZ2/MTZ3 devices


Source-changeover system with BA controller

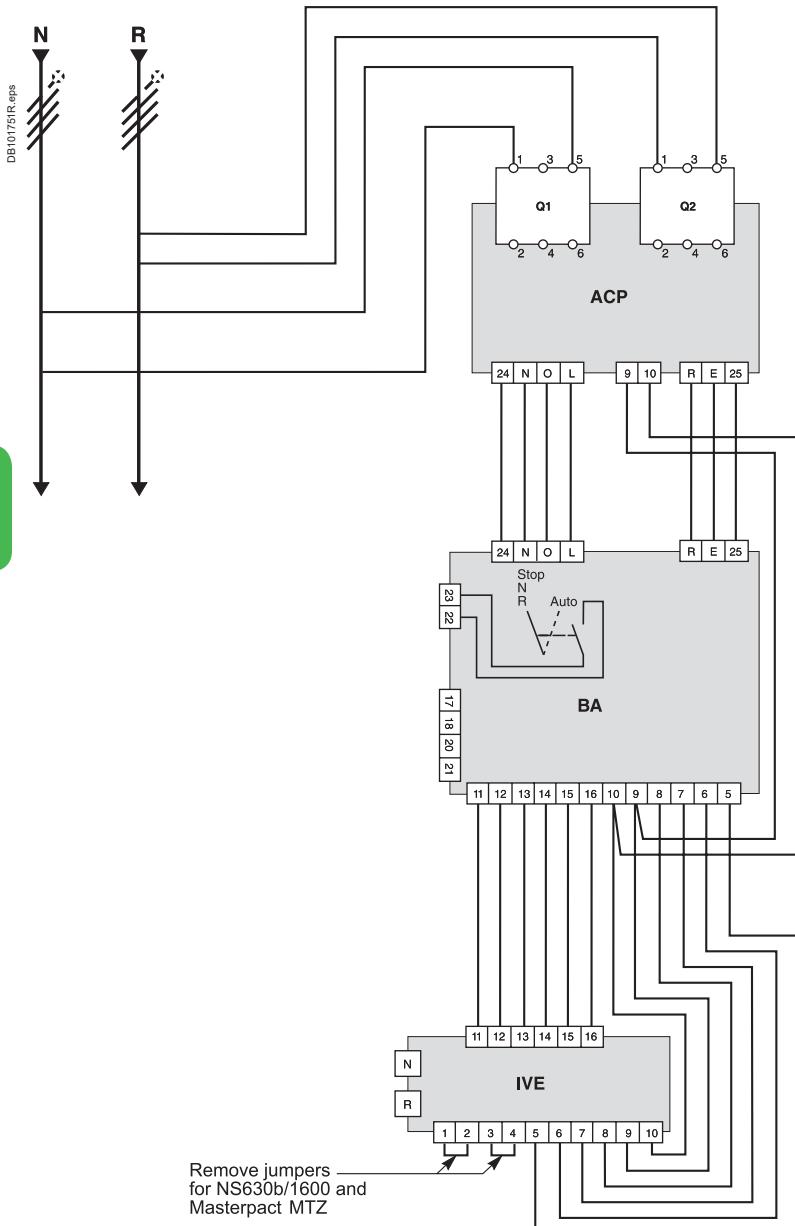

Coupling

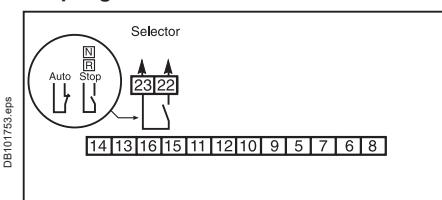

Transfer conditions

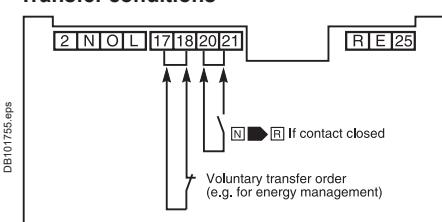

Terminals 20 and 21:
additional control contact (not part of controller).

Tests on "Normal" and "Replacement" source voltages

The single-phase check for UN and UR is implemented across terminals 1 and 5 of circuit breakers Q1 and Q2.

Legends


- Q1 circuit breaker supplying and protecting the automatic-control circuits for the "Normal" source
- Q2 circuit breaker supplying and protecting the automatic-control circuits for the "Replacement" source
- ACP control plate
- BA automatic controller
- IVE electrical interlocking and terminal block unit

Note: diagram shown with circuits de-energized, circuit breakers open and relays in normal position.

Remote-operated source-changeover systems

3 MasterPact MTZ2/MTZ3 devices

2 normal sources and 1 replacement source: electrical interlocking without lockout after a fault

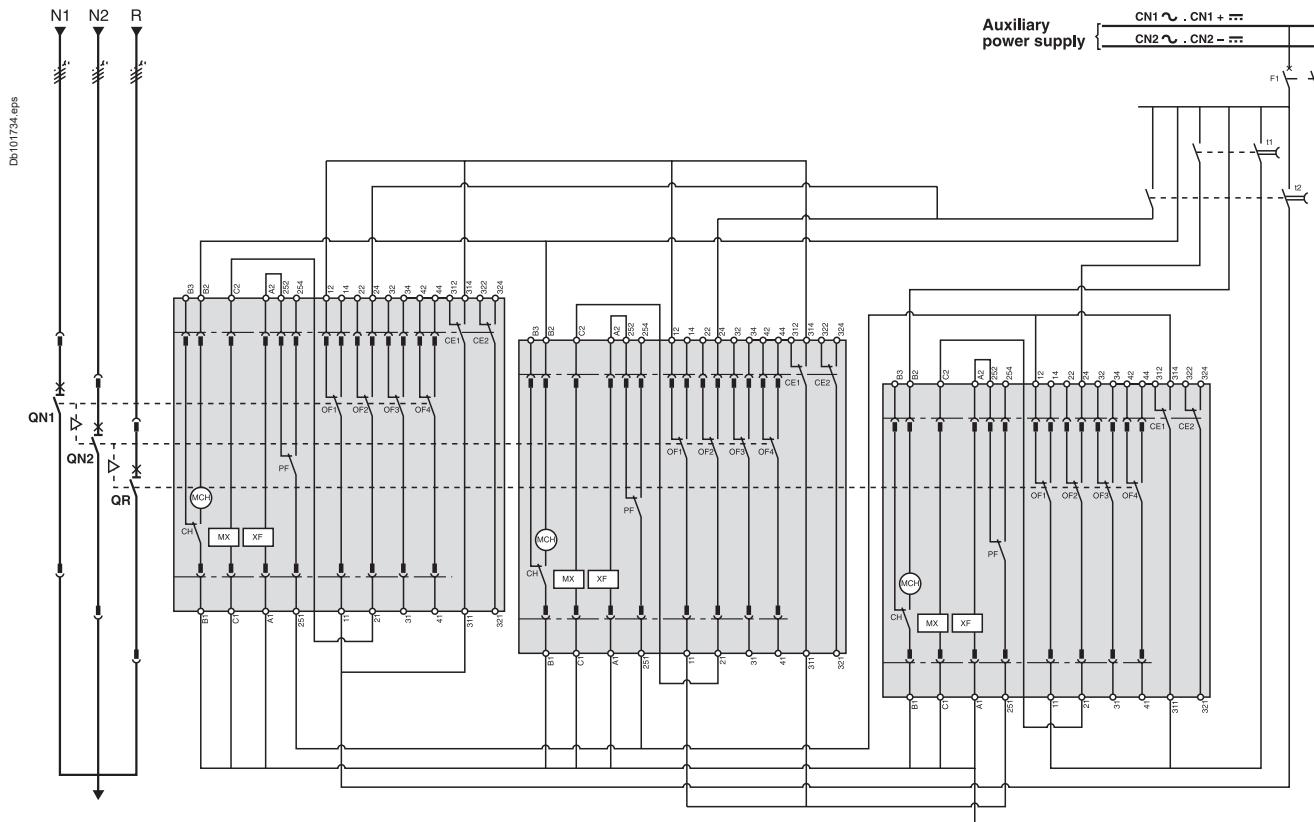

Legends

- QN... "Normal" source MasterPact MTZ2 or MTZ3
- QR "Replacement" source MasterPact MTZ2 or MTZ3
- MCH spring-charging motor
- MX standard opening voltage release
- XF standard closing voltage release
- OF... breaker ON/OFF indication contact
- PF "ready-to-close" contact
- CE "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- F1 auxiliary power supply circuit breaker
- t1 order for transfer from "R" to "N1 + N2"
(QN1 and QN2 closing time delay = 0.25 sec. minimum)
- t2 order for transfer from "N1 + N2" to "R"
(QR closing time delay = 0.25 sec. minimum)

States permitted by mechanical interlocking system


Normal 1	Normal 2	Replacement
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

3 MasterPact MTZ2/MTZ3 devices

2 normal sources and 1 replacement source: electrical interlocking with lockout after a fault

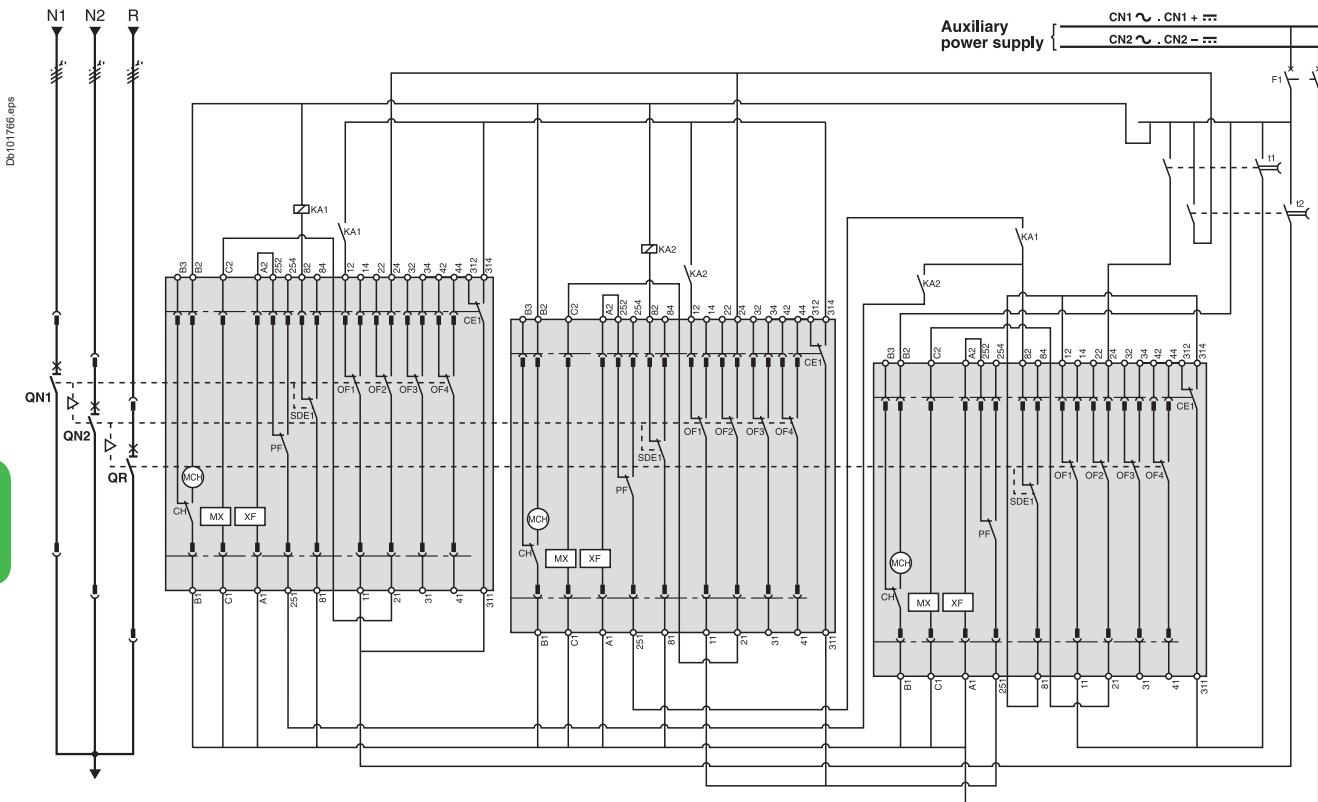

ATTENTION

The diagram shows the electrical wiring for circuit breakers.
When wiring the SDE with **switch-disconnectors**, connect
the SDE to terminals 81 and 84.

Legends

- QN... "Normal" source MasterPact MTZ2 or MTZ3
- QR "Replacement" source MasterPact MTZ2 or MTZ3
- MCH spring-charging motor
- MX standard opening voltage release
- XF standard closing voltage release
- OF... breaker ON/OFF indication contact
- SDE1 "fault-trip" indication contact
- PF "ready-to-close" contact
- CE1 "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- F1 auxiliary power supply circuit breaker
- S1 control switches
- S2 source selection switches
- KA1 auxiliary relay
- KA2 auxiliary relays with 10 to 180 sec. time delay
- t1 order for transfer from "R" to "N1 + N2"
(QN1 and QN2 closing time delay = 0.25 sec. minimum)
- t2 order for transfer from "N1 + N2" to "R"
(QR closing time delay = 0.25 sec. minimum)

States permitted by mechanical interlocking system


Normal 1	Normal 2	Replacement
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

3 MasterPact MTZ2/MTZ3 devices

2 normal sources and 1 replacement source: automatic-control system for generator set without lockout after a fault (with MN)

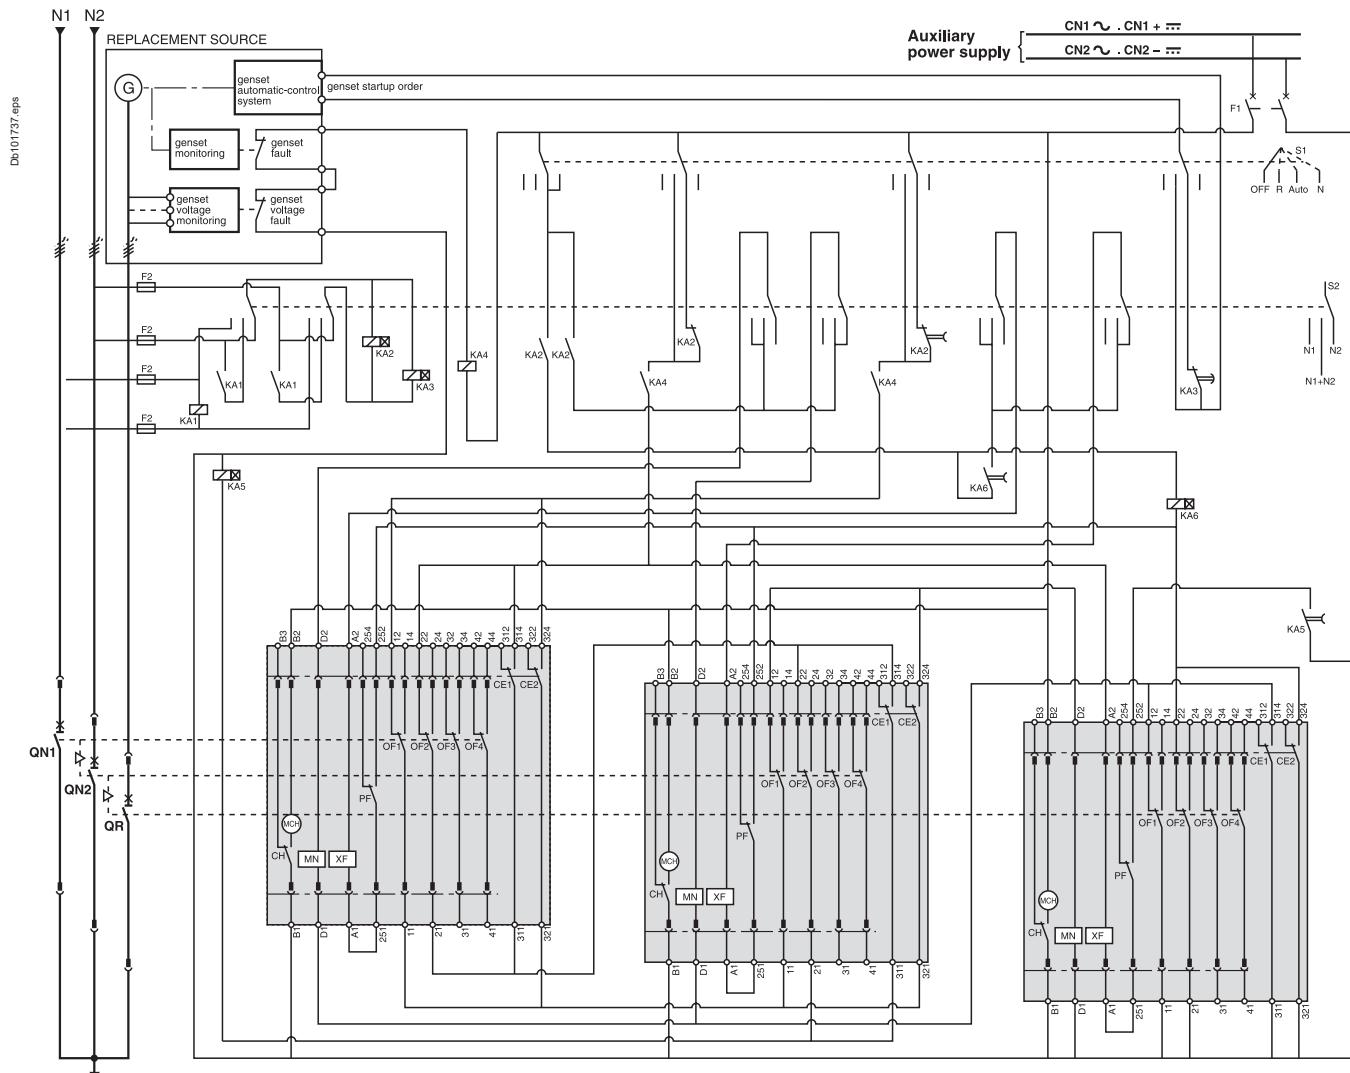

Legends

- QN... "Normal" source MasterPact MTZ2 or MTZ3
- QR "Replacement" source MasterPact MTZ2 or MTZ3
- MCH spring-charging motor
- XF standard closing voltage release
- MN undervoltage release
- OF... breaker ON/OFF indication contact
- PF "ready-to-close" contact
- CE... "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- F1 auxiliary power supply circuit breaker
- F2/F3 circuit breaker (high breaking capacity)
- S1 control switches
- S2 source selection switches
- KA1 auxiliary relay
- KA2 auxiliary relays with 10 to 180 sec. time delay
- KA3 auxiliary relays with 0.1 to 30 sec. time delay
- KA4 auxiliary relay
- KA5 auxiliary relays with 0.25 sec. time delay
- KA6 auxiliary relays with 0.25 sec. time delay

States permitted by mechanical interlocking system and with associated automatism


Normal 1	Normal 2	Replacement
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...)
= supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).

Remote-operated source-changeover systems

3 MasterPact MTZ2/MTZ3 devices

2 normal sources and 1 replacement source: automatic-control system for generator set with lockout after a fault (with MN)

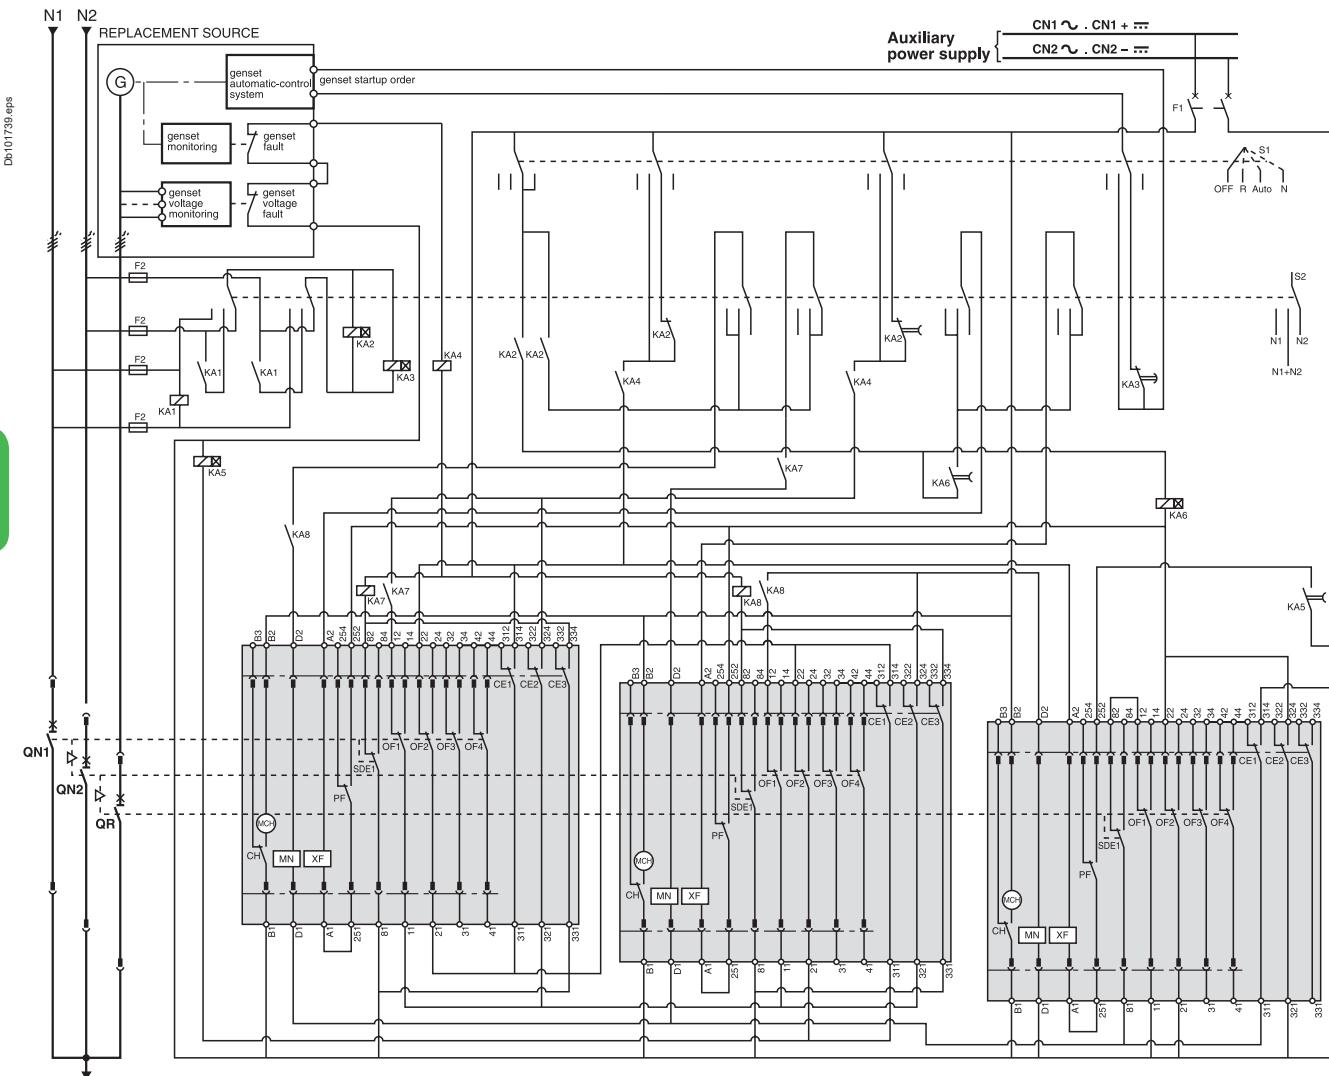

ATTENTION

The diagram shows the electrical wiring for circuit breakers.
When wiring the SDE with switch-disconnectors, connect the SDE to terminals 81 and 84.

Legends

- QN... "Normal" source MasterPact MTZ2 or MTZ3
- QR "Replacement" source MasterPact MTZ2 or MTZ3
- MCH spring-charging motor
- XF standard closing voltage release
- MN undervoltage release
- OF... breaker ON/OFF indication contact
- SDE1 "fault-trip" indication contact
- PF "ready-to-close" contact
- CE... "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- F1 auxiliary power supply circuit breaker
- F2/F3 circuit breaker (high breaking capacity)
- S1 control switches
- S2 source selection switches
- KA1 auxiliary relay
- KA2 auxiliary relays with 10 to 180 sec. time delay
- KA3 auxiliary relays with 0.1 to 30 sec. time delay
- KA4 auxiliary relay
- KA5 auxiliary relays with 0.25 sec. time delay
- KA6 auxiliary relays with 0.25 sec. time delay
- KA7 auxiliary relay
- KA8 auxiliary relay

States permitted by mechanical interlocking system and with associated automatism


Normal 1	Normal 2	Replacement
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).

Remote-operated source-changeover systems

3 MasterPact MTZ2/MTZ3 devices

3 sources with only 1 device closed: electrical interlocking without lockout after a fault

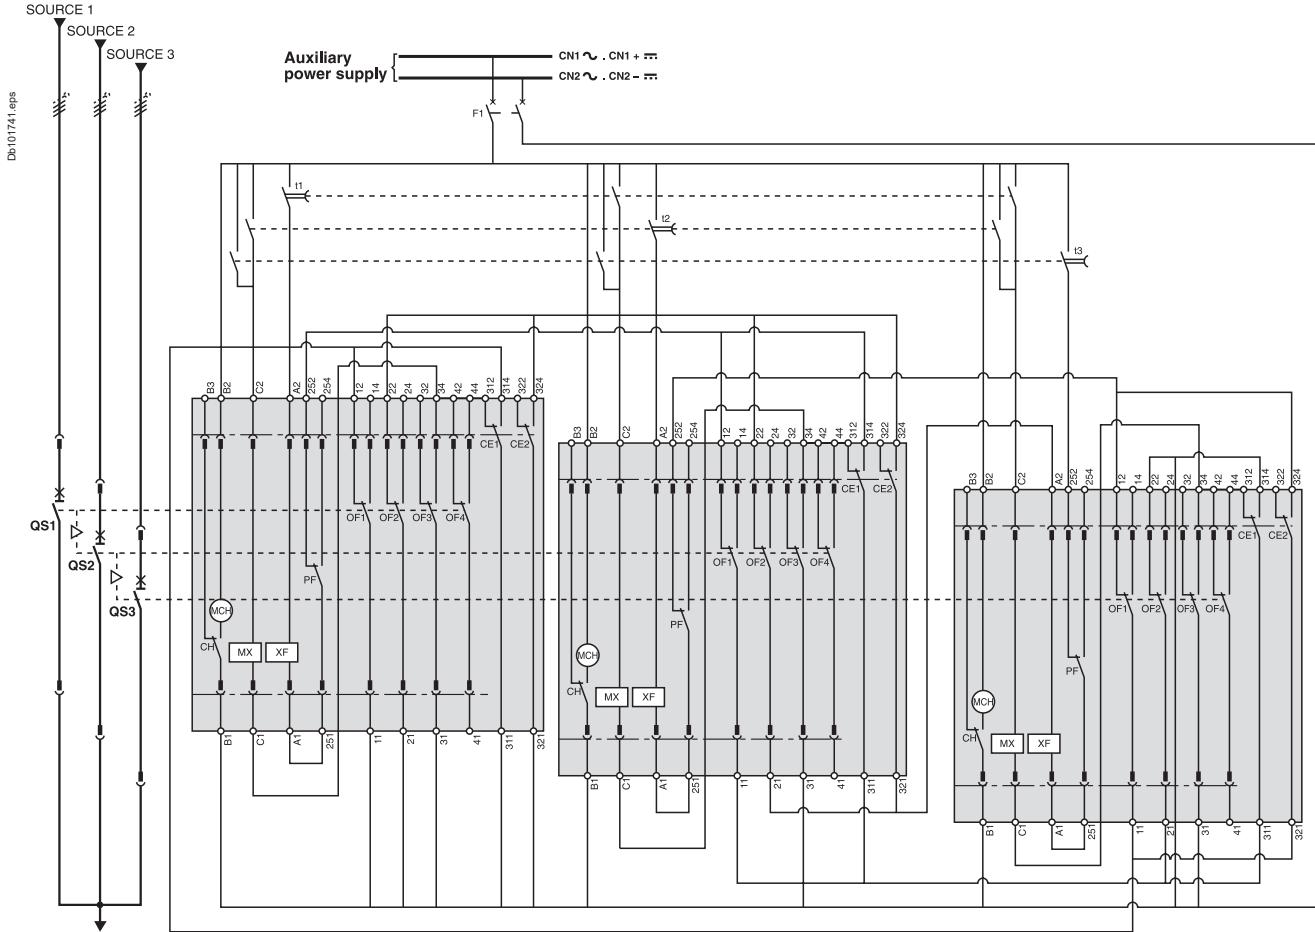

C

Legends

QS... "Source" MasterPact MTZ2 or MTZ3

MCH spring-charging motor

MX standard opening voltage release

XF standard closing voltage release

OF... breaker ON/OFF indicati

PF “ready-to-close” contact

CE... “connected-position” indication conta

CH "springs charged" indication contact

F1 auxiliary power supply circuit breaker

t1 order for transfer to "Source 1"
(SC1, Ingestion, subcode 3-25)

(QS1 closing time delay = 0.25 sec. minimum)

t2 order for transfer to "Source 2"
(OS2 closing time delay = 0.25)

(QS2 closing time delay = 0.25 sec. minimum
order for transfer to "Source 3")

t3 order for transfer to "Source 3"
(QS3 closing time delay = 0.35 s)

(QS3 closing time delay = 0.25 sec. minimum)

States permitted by mechanical interlocking system


States permitted by mechanical interlocking system		
Source 1	Source 2	Source 3
0	0	0
1	0	0
0	1	0
0	0	1

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

3 MasterPact MTZ2/MTZ3 devices

3 sources with only 1 device closed: electrical interlocking with lockout after a fault

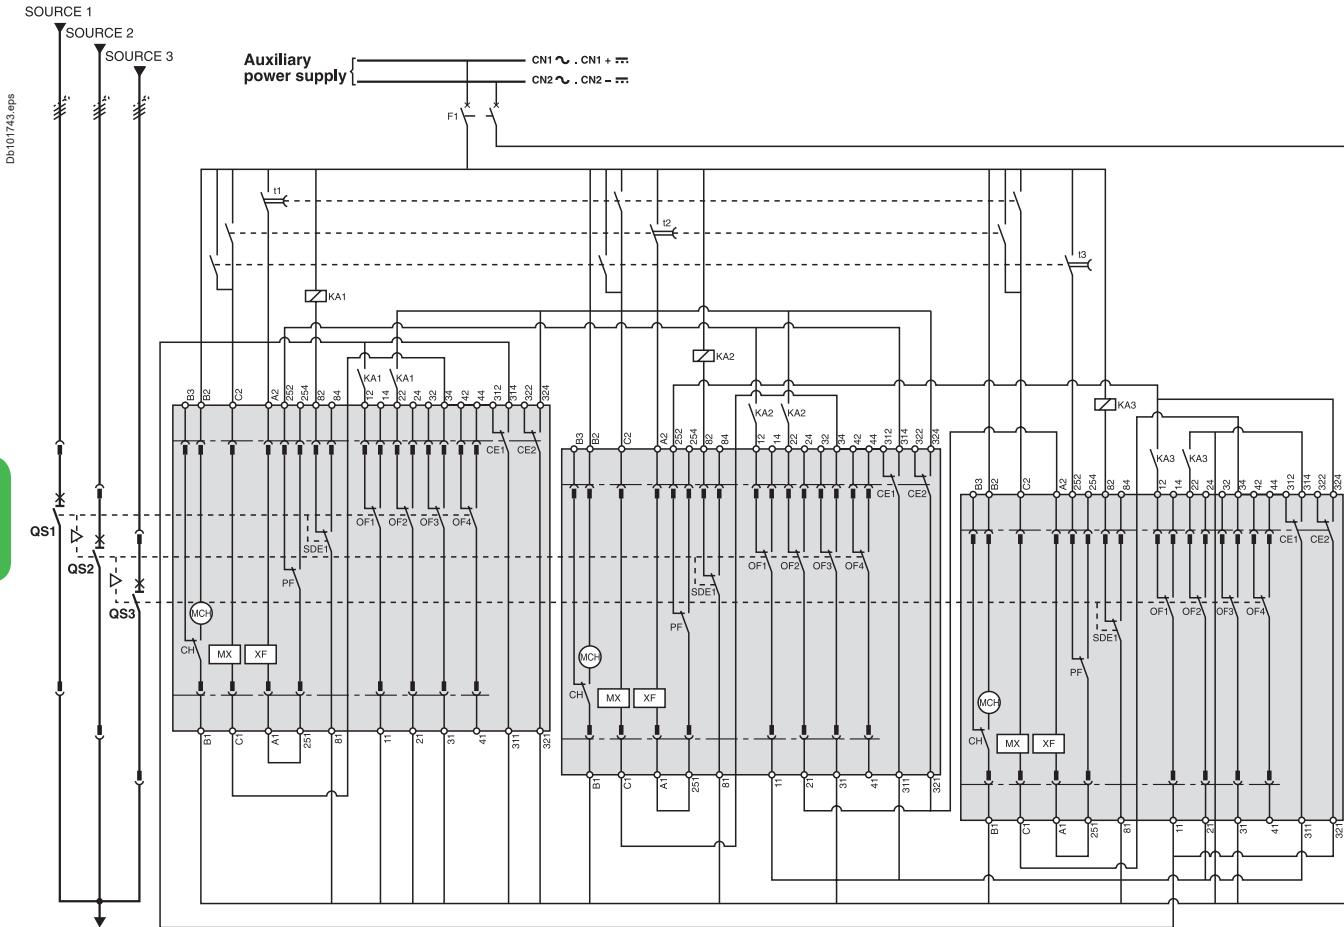

ATTENTION

The diagram shows the electrical wiring for circuit breakers.
When wiring the SDE with **switch-disconnectors**, connect the SDE to terminals 81 and 84.

Legends

- QS... "Source" MasterPact MTZ2 or MTZ3
- MCH spring-charging motor
- MX standard opening voltage release
- XF standard closing voltage release
- OF... breaker ON/OFF indication contact
- SDE1 "fault-trip" indication contact
- PF "ready-to-close" contact
- CE... "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- F1 auxiliary power supply circuit breaker
- t1 order for transfer to "Source 1"
(QS1 closing time delay = 0.25 sec. minimum)
- t2 order for transfer to "Source 2"
(QS2 closing time delay = 0.25 sec. minimum)
- t3 order for transfer to "Source 3"
(QS3 closing time delay = 0.25 sec. minimum)
- KA1 auxiliary relays
- KA2 auxiliary relays
- KA3 auxiliary relays

States permitted by mechanical interlocking system


Source 1	Source 2	Source 3
0	0	0
1	0	0
0	1	0
0	0	1

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...)
= supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

3 MasterPact MTZ2/MTZ3 devices

2 sources and 1 coupling: electrical interlocking without lockout after a fault

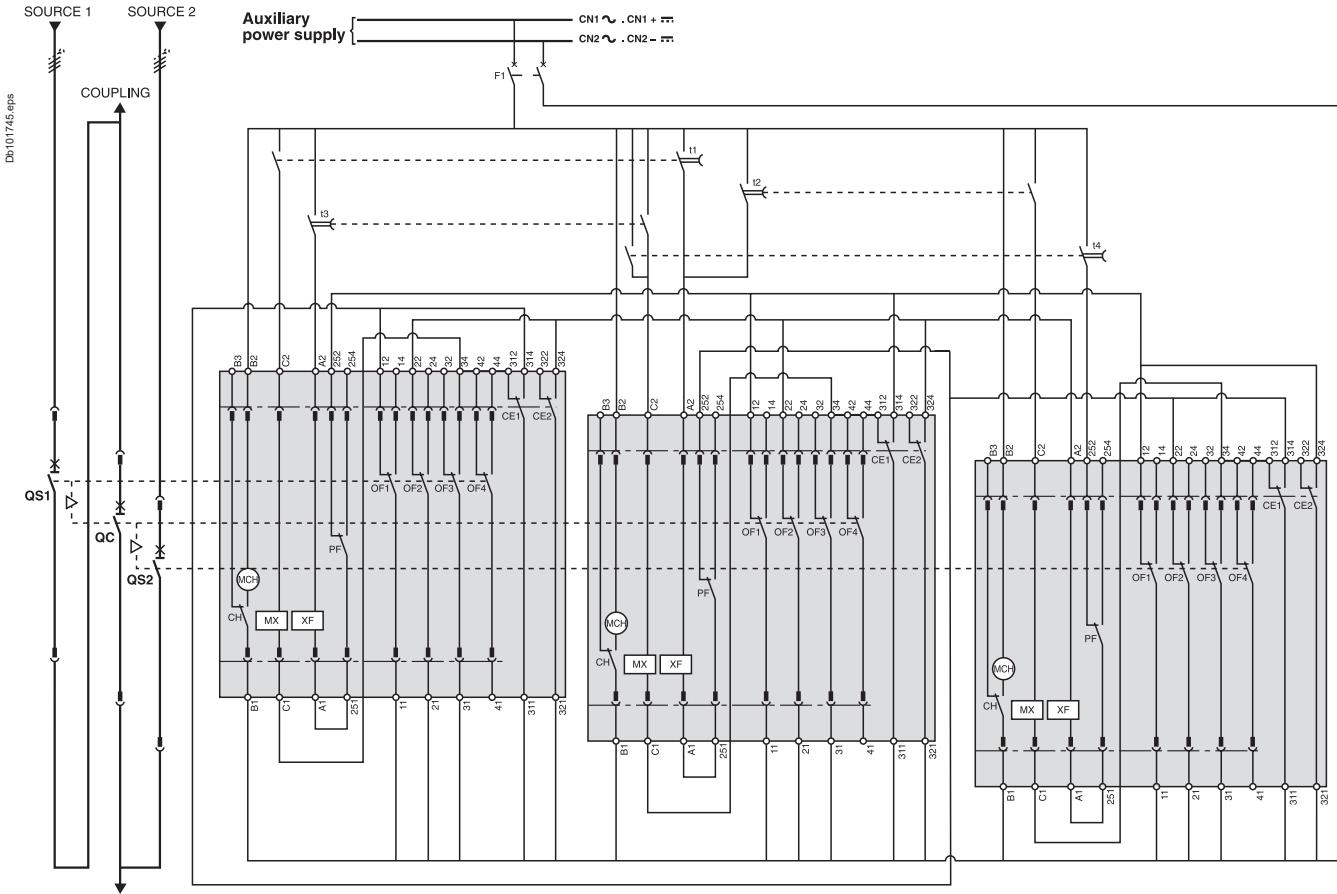

C

Legends

- QS... "Source" MasterPact MTZ2 or MTZ3
- QC "Coupling" MasterPact MTZ2 or MTZ3
- MCH spring-charging motor
- MX standard opening voltage release
- XF standard closing voltage release
- OF... breaker ON/OFF indication contact
- PF "ready-to-close" contact
- CE... "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- F1 auxiliary power supply circuit breaker
- t1 coupling order for "Source 1 failure"
(QC closing time delay = 0.25 sec. minimum)
- t2 coupling order for "Source 2 failure"
(QC closing time delay = 0.25 sec. minimum)
- t3 coupling order for "Source 1 restored"
(QS1 closing time delay = 0.25 sec. minimum)
- t4 coupling order for "Source 2 restored"
(QS2 closing time delay = 0.25 sec. minimum)

States permitted by mechanical interlocking system


Source 1	Source 2	Coupling
0	0	0
1	1	0
1	0	1
0	1	1
1	0	0
0	1	0
0	0	1

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

3 MasterPact MTZ2/MTZ3 devices

2 sources and 1 coupling: electrical interlocking with lockout after a fault

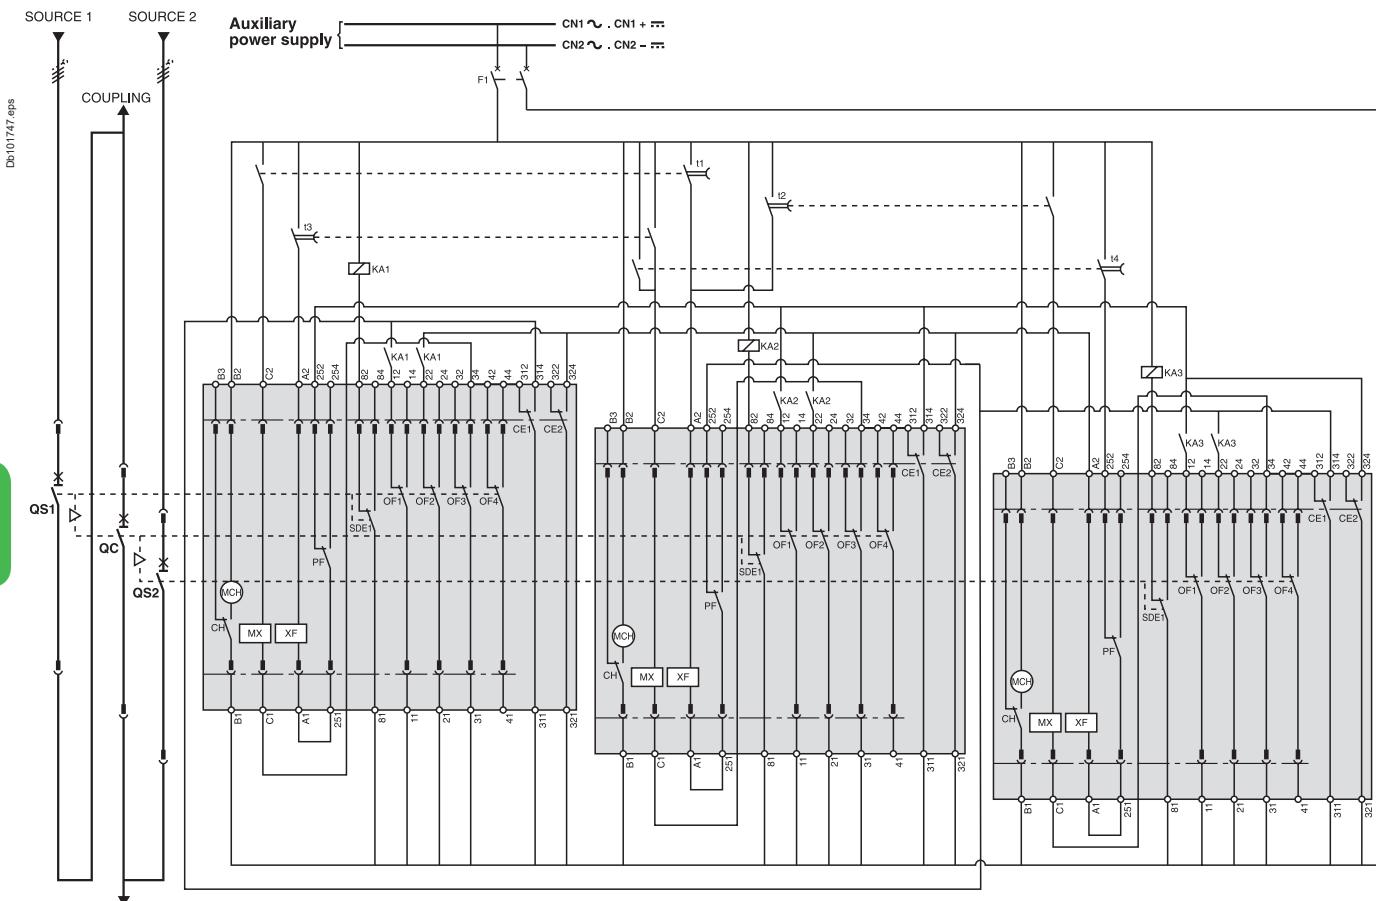

ATTENTION

The diagram shows the electrical wiring for circuit breakers.
When wiring the SDE with switch-disconnectors, connect the SDE to terminals 81 and 84.

Legends

- QS... "Source" MasterPact MTZ2 or MTZ3
- QC "Coupling" MasterPact MTZ2 or MTZ3
- MCH spring-charging motor
- MX standard opening voltage release
- XF standard closing voltage release
- OF... breaker ON/OFF indication contact
- SDE1 "fault-trip" indication contact
- PF "ready-to-close" contact
- CE... "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- F1 auxiliary power supply circuit breaker
- t1 coupling order for "Source 1 failure"
(QC closing time delay = 0.25 sec. minimum)
- t2 coupling order for "Source 2 failure"
(QC closing time delay = 0.25 sec. minimum)
- t3 coupling order for "Source 1 restored"
(QS1 closing time delay = 0.25 sec. minimum)
- t4 coupling order for "Source 2 restored"
(QS2 closing time delay = 0.25 sec. minimum)
- KA1 auxiliary relays
- KA2 auxiliary relays
- KA3 auxiliary relays

States permitted by mechanical interlocking system


Source 1	Source 2	Coupling
0	0	0
1	1	0
1	0	1
0	1	1
1	0	0
0	1	0
0	0	1

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...)
= supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

Remote-operated source-changeover systems

3 MasterPact MTZ2/MTZ3 devices

2 sources and 1 coupling: automatic-control system with lockout after a fault

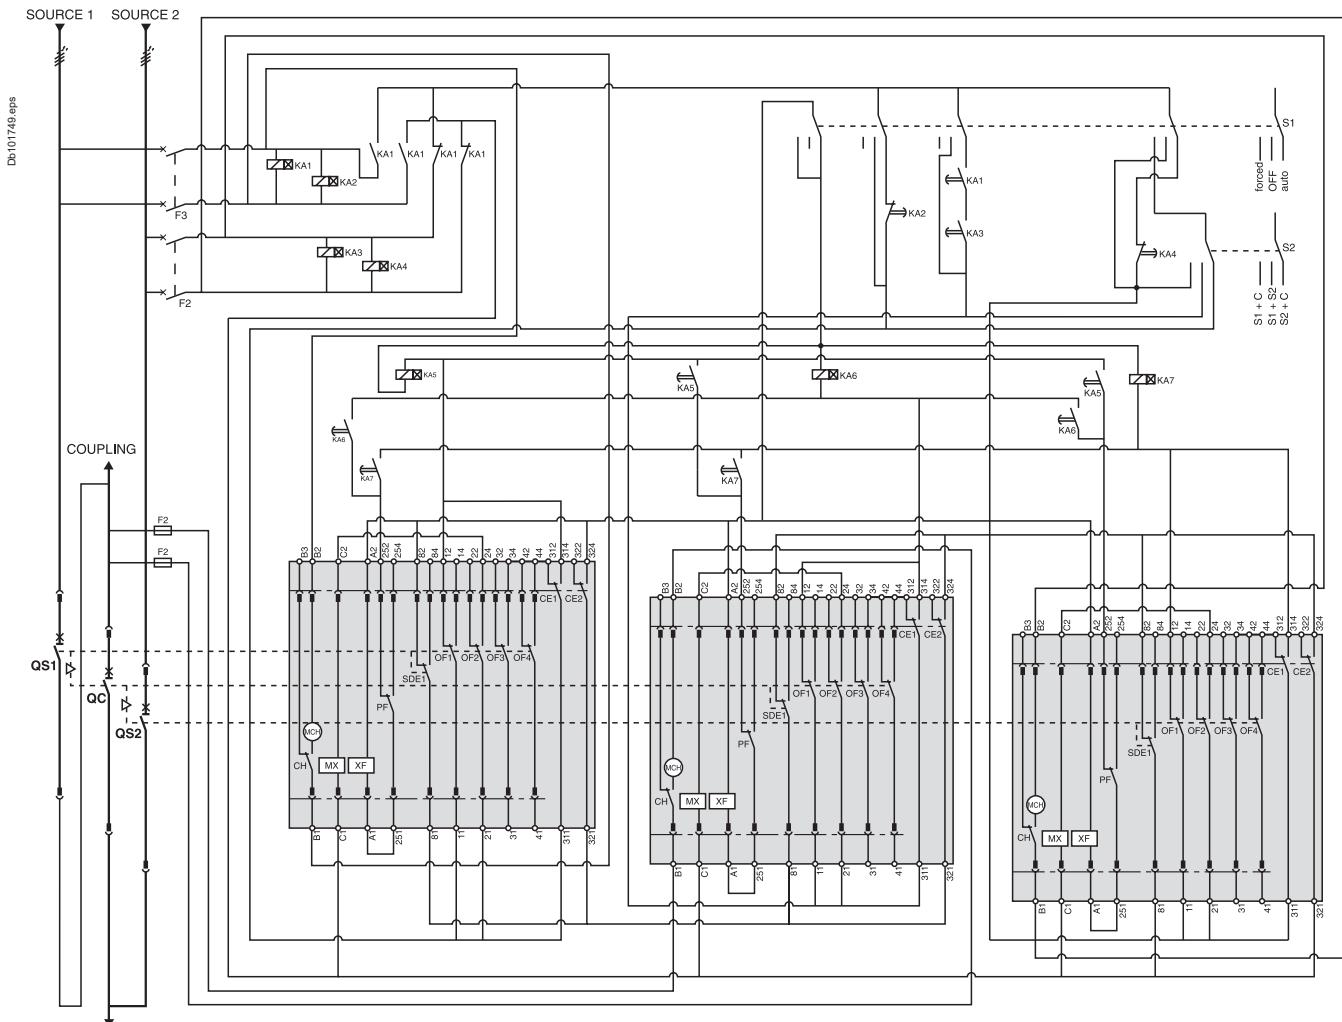

Legends

- QS... "Source" MasterPact MTZ2 or MTZ3
- QC "Coupling" MasterPact MTZ2 or MTZ3
- MCH spring-charging motor
- MX standard opening voltage release
- XF standard closing voltage release
- OF... breaker ON/OFF indication contact
- SDE1 "fault trip" indication contact
- PF "ready-to-close" contact
- CE... "connected-position" indication contact (carriage switch)
- CH "springs charged" indication contact
- F1 auxiliary power supply circuit breaker
- F2/F3 circuit breaker (high breaking capacity)
- S1 control switches
- S2 source selection switches
- KA1 auxiliary relays with 10 to 180 sec. time delay
- KA2 auxiliary relays with 0.1 to 30 sec. time delay
- KA3 auxiliary relays with 10 to 180 sec. time delay
- KA4 auxiliary relays with 0.1 to 30 sec. time delay
- KA5 auxiliary relays with 0.25 sec. time delay
- KA6 auxiliary relays with 0.25 sec. time delay
- KA7 auxiliary relays with 0.25 sec. time delay

States permitted by mechanical interlocking system and with associated automatism

Source 1	Source 2	Coupling
0	0	0
1	1	0
1	0	1
0	1	1
1	0	0
0	1	0
0	0	1

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.
Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

C

Catalog numbers and order form

References of source-changeover systems for 2 devices

ComPact INS40 to INS2500, INV100 to INV2500, and TransferPact FXM.....	D-2
ComPact NSX100 to NSX630	D-3
ComPact NS630b to NS1600	
Circuit breakers and switch-disconnectors.....	D-4
MasterPact MTZ1	
Circuit breakers and switch-disconnectors.....	D-5
MasterPact MTZ2/MTZ3	
Circuit breakers and switch-disconnectors.....	D-6

References of source-changeover systems for 3 devices

MasterPact MTZ2/MTZ3	
Circuit breakers and switch-disconnectors.....	D-7

Order form for source-changeover systems for 2 devices

ComPact INS40 to INS630	
Switch-disconnectors	D-8
ComPact NSX100 to NSX630	
Circuit breakers and switch-disconnectors.....	D-10
ComPact NS630b to NS1600	
Circuit breakers and switch-disconnectors	D-12
MasterPact MTZ1/MTZ2/MTZ3	
Circuit breakers and switch-disconnectors	D-14

Order form for source-changeover systems for 3 devices

MasterPact MTZ2/MTZ3	
Circuit breakers and switch-disconnectors.....	D-16

Other chapters

Presentation.....	2
Functions and characteristics	A-1
Dimensions	B-1
Electrical diagrams	C-1



D

References of source-changeover systems for 2 devices

ComPact INS40 to INS2500, INV100 to INV2500, and TransferPact FXM

Manual source-changeover systems

Interlocking for rotary handle

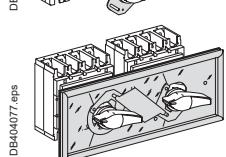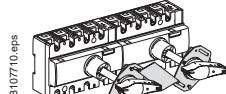

Mechanical device for INS40 to INS160 equipped with an extended rotary handle

3/4P

28953


Mechanical device for INS250-100 to INS250/INV100 to INV250 equipped with a direct or extended rotary handle

31073

Mechanical device for INS/INV320 to INS/INV630 equipped with a direct or extended rotary handle

31074

Interlocking

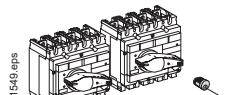


Locking device for Ronis/Profalux keylocks on INS250-100 to INS250/INV100 to INV250
Locking device for Ronis/Profalux keylocks on INS/INV320 to INS/INV630

3/4P

2x **31087**

2x **31088**

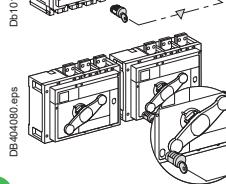

Locking device for Ronis/Profalux keylocks on INS/INV630b to INS/INV2500

2x **31291**


+ Ronis 1351B.500 keylock (2 keylocks / 1 key)

41950

or + Profalux KS5 B24 D4Z keylock (2 keylocks / 1 key)

42878

TransferPact FXM (complete source-changeover assembly)

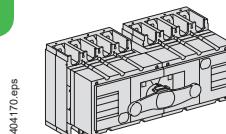

FXM100

3P

4P

31140

31141

FXM160

31144

31145

FXM200

31142

31143

FXM250

31146

31147

FXM320

31148

31149

FXM400

31150

31151

FXM500


31152

31153

FXM630

31154

31155

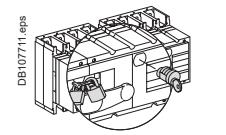

Locking for TransferPact FXM

Built in

Handle locking by 1 to 3 padlocks (in OFF position)

31097


By keylock Keylocking device

41940

+ Ronis 1351B.500 keylock

42888

or + Profalux KS5 B24 D4Z keylock

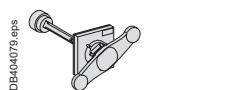

Rotary handle


Extended front control for complete source changeover assembly

31055

Connection accessories

Downstream coupling accessories

Short terminal shields (1 pair) + "Normal" source/"Replacement" source

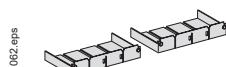


INS250/INS250

3/4P

LV429359

INS320 to INS630/INS320 to INS630

LV432620

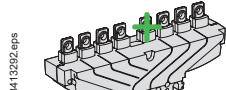

Long terminal shields (1 piece)

INS250

Long terminal shield

LV429518

INS320

Long terminal shield, 45 mm (1 piece)

LV432594

to INS630

Long terminal shield for spreaders, 52.5 mm (1 piece)

LV432596

Terminal extensions



Spreaders

52.5 mm

4P


LV432491

References of source-changeover systems for 2 devices

ComPact NSX100 to NSX630


Manual source changeover

Mechanical interlocking

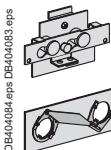

For toggle controlled circuit breakers	NSX100...250 NSX400...630	LV429354 LV432614
For rotary handled circuit breakers	NSX100...250 NSX400...630	LV429369 LV432621


Key lock interlocking

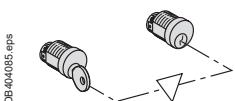

For rotary handled or remote controlled circuit breakers 2 locks, 1 key	Ronis 1351B.500 Profalux KS5 B24 D4Z	41950 42878
--	---	------------------------------


Remote controlled source changeover

Plate + IVE unit

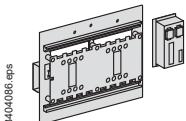

Source "Normal"/source "Replacement" (identical voltages)	24 to 250 V DC	48 to 415 V AC 50/60 Hz 440 V 60 Hz
NSX100...250/NSX100...250		
Plate + IVE unit [1]	29351	29350
Plate	29349	29349
IVE unit	29356	29352
Auxiliary switches 2 OF + 2 SDE	4 x 29450	4 x 29450
Spare wiring system (device/IVE unit)	29365	29365
Back sockets option add:	Only long RC	[2]
Plug in base option add:	Plug in kit	[2]
NSX400...630/NSX100...630		
Plate + IVE unit [1]	32611	32610
Plate	32609	32609
IVE unit	29356	29352
Auxiliary switches 2 OF + 2 SDE	4 x 29450	4 x 29450
Spare wiring system (device/IVE unit)	29365	29365
Back sockets option add:	Only long RC	[2]
Plug in base option add:	Plug in kit	[2]
Adaptator kit for NSX100...250	1 x 32618	1 x 32618

Control unit option

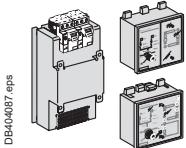


	110/127 V AC 50/60 Hz	220/240 V AC 50/60 Hz	380/415 V AC 50/60 Hz 440 V 60 Hz
ACP + controller BA [1]		29470	29471
Plate ACP		29363	29364
Controller BA		29376	29377
ACP + controller UA [1]	29448	29472	29473
Plate ACP	29447	29363	29364
Controller UA	29446	29378	29380

Wiring cable between UA/BA and ACP/IVE


Wiring cable (1.5 meter)	29368	29368
--------------------------	--------------	--------------

Connection accessories


Downstream coupling accessories

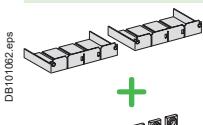

Short terminal shields (1 pair) + "Normal" source/"Replacement" source	3P NSX100...250/NSX100...250 / 250 A	4P LV429358 LV432619
	NSX400...630/NSX400...630 / 630 A	LV432620

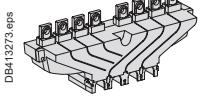

Long terminal shields (1 piece)	3/4P NSX100...250 Long terminal shield NSX400...630 Long terminal shield, 45 mm (1 piece) Long terminal shield for spreaders, 52.5 mm (1 piece)
	LV429518 LV432594 LV432596

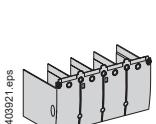

Terminal extensions



Spreaders	52.5 mm	4P	LV432491
-----------	---------	----	-----------------

[1] The supply voltages UA/BA controller, ACP plate, IVE unit and the remote control must be identical whatever the source changeover type.

[2] See products pages.

D


References of source-changeover systems for 2 devices

ComPact NS630b to NS1600

Circuit breakers and switch-disconnectors

Mechanical interlocking for source-changeover systems

Interlocking

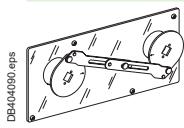

For 2 devices with extended rotary handles

33890

Interlocking using connecting rods



Complete assembly with 2 adaptation fixtures + rods


2 ComPact fixed devices

33910

2 ComPact withdrawable devices

33913

Interlocking using cables

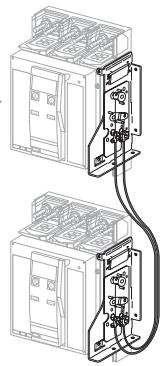

Complete assembly with 2 adaptation fixtures + cables

2 ComPact fixed devices

33911

2 ComPact withdrawable devices

33914

1 ComPact fixed + 1 ComPact withdrawable device

33915

D

Associated controller

The automatic-control option includes:

- an IVE electrical-interlocking unit
- an ACP control plate
- a BA or UA controller, depending on the required functions
- a UA/BA adapter kit

Note: the circuit breaker auxiliaries (MCH, MX, XF) and the automatic-control components (IVE, ACP, UA or BA) must have the same voltages.

TransferPact Electrical Interlocking

IVE unit	24 to 250 V DC	48/415 V AC 50/60 Hz 440 V 60 Hz
For 2 devices Wiring kit for connection of 2 fixed/withdrawable devices to the IVE unit	29356	29352 54655

DBA04093.eps

TransferPact Controllers

Control unit	110/127 V AC 50/60 Hz	220/240 V AC 50/60 Hz	380/415 V AC 50/60 Hz 440 V 60 Hz
ACP + controller BA [1]		29470	29471
Plate ACP		29363	29364
Controller BA		29376	29377
ACP + controller UA [1]	29448	29472	29473
Plate ACP	29447	29363	29364
Controller UA	29446	29378	29380

[1] The supply voltages of the UA/BA controller, ACP plate, IVE unit and circuit breaker operating mechanism must be identical whatever the type of source-changeover system.


References of source-changeover systems for 2 devices

MasterPact MTZ1

Circuit breakers and switch-disconnectors

Mechanical interlocking for source-changeover systems

Interlocking using connecting rods

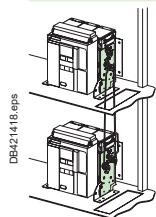

Complete assembly with 2 adaptation fixtures + rods

2 MasterPact MTZ1 fixed devices

33912

2 MasterPact MTZ1 drawout devices

33913

Choose 2 adaptation fixtures (1 for each breaker + 1 set of cables)

1 adaptation fixture for MasterPact MTZ1 fixed devices

33200

1 adaptation fixture for MasterPact MTZ1 drawout devices

33201

1 set of 2 cables

33209

Associated controller

The automatic-control option includes:

- an IVE electrical-interlocking unit
- an ACP control plate
- a BA or UA controller, depending on the required functions
- a UA/BA adapter kit.

Note: the circuit breaker auxiliaries (MCH, MX, XF) and the automatic-control components (IVE, ACP, UA or BA) must have the same voltages.

D

TransferPact Electrical Interlocking

IVE unit	24 to 250 V DC	48/415 V AC 50/60 Hz 440 V 60 Hz
For 2 devices	29356	29352
Wiring kit for connection of 2 fixed/drawout devices to the IVE unit		54655



TransferPact Controllers

Control unit	110/127 V AC 50/60 Hz	220/240 V AC 50/60 Hz	380/415 V AC 50/60 Hz 440 V 60 Hz
ACP + controller BA [2]		29470	29471
Plate ACP		29363	29364
Controller BA		29376	29377
ACP + controller UA [2]	29448	29472	29473
Plate ACP	29447	29363	29364
Controller UA	29446	29378	29380

[1] Can be used with any combination of MTZ1 or MTZ2/MTZ3, fixed or drawout devices.

[2] The supply voltages of the UA/BA controller, ACP plate, IVE unit and circuit breaker operating mechanism must be identical whatever the type of source-changeover system.


References of source-changeover systems for 2 devices

MasterPact MTZ2/MTZ3

Circuit breakers and switch-disconnectors

Mechanical interlocking for source-changeover systems for 2 devices

Interlocking of 2 devices using connecting rods

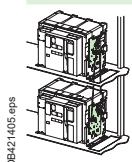

Complete assembly with 2 adaptation fixtures + rods

2 MasterPact MTZ2/MTZ3 fixed devices


48612

2 MasterPact MTZ2/MTZ3 drawout devices

48612

Note: Can be used with 1 MTZ2/MTZ3 fixed + 1 MTZ2/MTZ3 drawout.

Interlocking of 2 devices using cables [1]

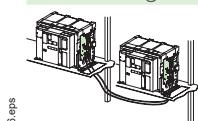

Choose 2 adaptation fixtures (1 for each breaker + 1 set of cables)

1 adaptation fixture for MasterPact MTZ2/MTZ3 fixed devices

47926

1 adaptation fixture for MasterPact MTZ2/MTZ3 drawout devices

47926

1 set of 2 cables

33209

Associated controller for 2 devices

The automatic-control option includes:

- an IVE electrical-interlocking unit
- an ACP control plate
- a BA or UA controller, depending on the required functions
- a UA/BA adapter kit.

Note: the circuit breaker auxiliaries (MCH, MX, XF) and the automatic-control components (IVE, ACP, UA or BA) must have the same voltages.

TransferPact Electrical Interlocking

IVE unit	24 to 250 V DC 440 V 60 Hz	48/415 V AC 50/60 Hz 440 V 60 Hz
For 2 devices	29356	29352
Wiring kit for connection of 2 fixed/drawout devices to the IVE unit		54655



TransferPact Controllers

Control unit	110/127 V AC 50/60 Hz	220/240 V AC 50/60 Hz	380/415 V AC 50/60 Hz 440 V 60 Hz
ACP + controller BA [2]		29470	29471
Plate ACP		29363	29364
Controller BA		29376	29377
ACP + controller UA [2]	29448	29472	29473
Plate ACP	29447	29363	29364
Controller UA	29446	29378	29380

[1] Can be used with any combination of MTZ1 or MTZ2/MTZ3, fixed or drawout devices.

[2] The supply voltages of the UA/BA controller, ACP plate, IVE unit and circuit breaker operating mechanism must be identical whatever the type of source-changeover system.

D

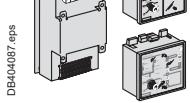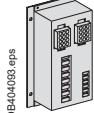


References of source-changeover systems for 3 devices

MasterPact MTZ2/MTZ3

Circuit breakers and switch-disconnectors

Mechanical interlocking for source-changeover systems for 3 devices

Interlocking of 3 devices using cables

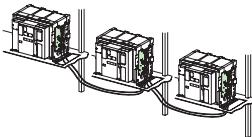

DB421407.eps

Choose 3 adaptation fixtures (1 complete set with 3 adaptation fixtures + cables)

3 sources, only 1 device closed, fixed or drawout devices

48610

2 sources, 1 coupling, fixed or drawout devices

48609

2 normal, 1 replacement source, fixed or drawout devices

48608

D

Order form for source-changeover systems for 2 devices

ComPact INS40 to INS630

Switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

Mechanical interlocking of two INS40 to INS630 devices Devices with front rotary handles, mounted side by side

Two devices with direct rotary handles			
INS250	<input type="checkbox"/>	INS320/400/500/630	<input type="checkbox"/>
Two devices with extended rotary handles			
INS40/63/80	<input type="checkbox"/>	INS100/125/160	<input type="checkbox"/>
INS250	<input type="checkbox"/>	INS320/400/500/630	<input type="checkbox"/>
Downstream coupling accessory	INS250	INS320/400/500/630	<input type="checkbox"/>
Long terminal shields	INS250	INS320/400/500/630	<input type="checkbox"/>
Complete source-changeover assembly			
INS250-100 A	<input type="checkbox"/>	INS250-160 A	<input type="checkbox"/>
INS250-200 A	<input type="checkbox"/>	INS250-250 A	<input type="checkbox"/>
INS320	<input type="checkbox"/>	INS400	<input type="checkbox"/>
INS500	<input type="checkbox"/>	INS630	<input type="checkbox"/>

Order form for source-changeover systems for 2 devices

ComPact INS40 to INS630

Switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .
(one sheet per device, make copies if necessary)

Device identification:

Q 1 - NORMAL SOURCE**Indication and measurements****Q 2 - REPLACEMENT SOURCE**

4P ammeter module	For INS250	Rating	100 A 150 A 250 A	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
		Adaptation kit required for direct handles		
	For INS320/630	Rating	400 A 600 A	<input type="checkbox"/> <input type="checkbox"/>
4P current-transformer module	For INS250	Rating	100 A 150 A 250 A	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
	For INS320/630	Rating	400 A 600 A	<input type="checkbox"/> <input type="checkbox"/>
Auxiliary contact	For INS40/160	1OF/CAF/CAO	Standard Low level	<input type="checkbox"/> <input type="checkbox"/>
	For INS250/630	1 OF/CAM	Standard Low level	<input type="checkbox"/> <input type="checkbox"/>

Switch-disconnector

ComPact type	INS40/63/80 INS100/125/160 INS250 INS320/400/500/630	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
Rating	A	<input type="checkbox"/>
Number of poles	3 or 4	<input type="checkbox"/>

Connections

Front connection	Standard	<input type="checkbox"/>
Rear connection	2 short	<input type="checkbox"/>
	2 long	<input type="checkbox"/>
INS40/80 connectors	Distribution 3x16° rigid/10° flexible	<input type="checkbox"/>
INS100/160 connectors	Snap-on ≤ 95° Distribution 4x25° rigid/16° flexible	<input type="checkbox"/> <input type="checkbox"/>
INS250 connectors	Snap-on 1.5° to 95° (< 160 A) Snap-on 10° to 185° (< 250 A) Volt. tap connector for 185° connector Clips for connectors Set of 10 Distribution 6x1.5° to 35° rigid with interphase barriers	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
INS320/630 connectors	1 cable 35° to 300° 2 cables 35° to 240° Voltage tap connector for 185° connector	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>

Distribution blocks	Linergy DX	<input type="checkbox"/>
	4P 125 A	<input type="checkbox"/>
	160 A	<input type="checkbox"/>
	1P 160 A	<input type="checkbox"/>
	Linergy BS (multi stage)	<input type="checkbox"/>
	160 A	<input type="checkbox"/>
	250 A	<input type="checkbox"/>
	Linergy DP	<input type="checkbox"/>
	250 A	<input type="checkbox"/>

Rt-angle extension	Set of 3 or 4	250 A	<input type="checkbox"/>
		630 A	<input type="checkbox"/>

Straight extension	INS250	<input type="checkbox"/>
Edgewise ext.	INS630	<input type="checkbox"/>

Spreader	INS250 (45 mm)	<input type="checkbox"/>
	Front alignment base	<input type="checkbox"/>
	INS320/630 52.5 mm	<input type="checkbox"/>
	70 mm	<input type="checkbox"/>
	One-piece	<input type="checkbox"/>
	INS250	<input type="checkbox"/>
	INS630	<input type="checkbox"/>

Cu cable lugs supplied with 2 or 3 inter-phase barriers	INS100/160	For 95° cable	<input type="checkbox"/>
	INS250	For 120° cable	<input type="checkbox"/>
		For 150° cable	<input type="checkbox"/>
		For 185° cable	<input type="checkbox"/>
	INS320/630	For 240° cable	<input type="checkbox"/>
		For 300° cable	<input type="checkbox"/>

Al cable lugs supplied with 2 or 3 inter-phase barriers	INS250	For 150° cable	<input type="checkbox"/>
	INS320/630	For 185° cable	<input type="checkbox"/>
		For 240° cable	<input type="checkbox"/>
		For 300° cable	<input type="checkbox"/>

Terminal shrouds	INS40/63/80	<input type="checkbox"/>
Terminal shields	INS40/63/80	<input type="checkbox"/>
	INS250	Long
	INS320/630	Long
		Long for 52.5 mm spreaders

Interphase barriers	INS100/160	Set of 6	<input type="checkbox"/>
	INS250	Set of 6	<input type="checkbox"/>
	INS320/630	Set of 6	<input type="checkbox"/>

Rotary handles				
Extended front handles	INS40 to INS160	Black	<input type="checkbox"/>	Red on yellow front
	INS250	Black	<input type="checkbox"/>	Red on yellow front
	INS320 to INS630	Black	<input type="checkbox"/>	Red on yellow front
		For complete changeover assembly		INS250 INS320/630
Locking of rotary handles				
Padlocking	1 to 3 padlocks (in OFF position)			<input type="checkbox"/>
Keylocking	Keylock adapter (keylock not included)			<input type="checkbox"/>
	Keylocks Ronis 1351B.500		<input type="checkbox"/>	Profalux KS5 B24 D4Z
Installation accessories				
Front-panel escutcheon	For switch-disconnectors			<input type="checkbox"/>
	For ammeter module, IP40			<input type="checkbox"/>

D

Order form for source-changeover systems for 2 devices

ComPact NSX100 to NSX630

Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

Diagram for two ComPact NSX devices

Without automatic control, without emergency off auxiliaries	(no. 51201177)	<input type="checkbox"/>
Without automatic control, with emergency off by MN	(no. 51201178)	<input type="checkbox"/>
Without automatic control, with emergency off by MX	(no. 51201179)	<input type="checkbox"/>

Mechanical interlocking of two NSX100 to NSX630 devices

(fixed, plug-in or withdrawable)

Manually operated devices, mounted side by side:

Two devices with toggles	<input type="checkbox"/>
Two devices with rotary handles	<input type="checkbox"/>

Mechanical and electrical interlocking of two NSX100 to NSX630 devices

(fixed or plug-in)

Electrically operated devices, mounted side by side:

Select 1 base plate + IVE unit, the 4 auxiliary contacts and the options / accessories

Base plate + IVE unit	Identical voltages:	48 to 415 V AC 50/60 Hz	
24 to 250 V DC	<input type="checkbox"/>	440/480 V AC 60 Hz	<input type="checkbox"/>
"Normal" NSX100/250	<input type="checkbox"/>	"Replacement" NSX100/250	<input type="checkbox"/>
"Normal" NSX400/630	<input type="checkbox"/>	"Replacement" NSX400/630	<input type="checkbox"/>
"Normal" NSX400/630	<input type="checkbox"/>	"Replacement" NSX100/250	<input type="checkbox"/>
Adapter kit for NSX400/630 with NSX100/250 (plug-in)			
Auxiliary contacts	2 OF + 2 SDE (mandatory)	Quantity	<input type="text" value="4"/>
Options	Long rear connections	<input type="checkbox"/>	Plug-in base
Downstream coupling accessory	3P	<input type="checkbox"/>	NSX100/250
	4P	<input type="checkbox"/>	NSX400/630
Prefabricated wiring	Between device and IVE	Quantity	<input type="checkbox"/>

Automatic-control option

Power supply 220/240 V - 50/60 Hz:	ACP + BA controller	<input type="checkbox"/>
	ACP + UA controller	<input type="checkbox"/>
	ACP + UA150 controller	<input type="checkbox"/>
Power supply 380/415 V - 50/60 Hz and 440 V - 60 Hz:	ACP + BA controller	<input type="checkbox"/>
	ACP + UA controller	<input type="checkbox"/>
	ACP + UA150 controller	<input type="checkbox"/>

D

Order form for source-changeover systems for 2 devices

ComPact NSX100 to NSX630

Circuit breakers and switch-disconnectors

(One sheet per device, make copies if necessary)

Name of customer: _____

Address for delivery: _____

Requested delivery date: _____

Customer order no.: _____

To indicate your choices, check the applicable square boxes
and enter the appropriate information in the rectangles**Q 1 - NORMAL SOURCE****Q 2 - REPLACEMENT SOURCE****Circuit breaker or switch disconnector**

ComPact type	NSX100/160/250	NSX400/630	
Rating	A		
Circuit breaker	B, F, N, H, S, L		
Switch-discon.	NA		
No. of poles	2, 3 or 4		
No. of poles protected	2d, 3d or 4d		
Fixed device	Front connections		
Plug-in/withdr.	Plug-in <input type="checkbox"/>	Withdrawable <input type="checkbox"/>	
Earth-leakage protection	ME, MH, MB		
Vigi module	Voltage	V	
	4P option on 3P NSX		

Trip unit

Thermal-mag.	TMD rating (16 ... 250 A) TMG rating (16 ... 63 A) MA rating (2.5 ... 220 A)	
Electronic	MicroLogic 2.2 <input type="checkbox"/> MicroLogic 2.2 G <input type="checkbox"/> MicroLogic 2.3 AB <input type="checkbox"/> MicroLogic 2.2 AB <input type="checkbox"/> MicroLogic 5.2 A <input type="checkbox"/> MicroLogic 5.2 E <input type="checkbox"/> MicroLogic 5.2 A-Z <input type="checkbox"/> MicroLogic 5.2 A-Z <input type="checkbox"/> MicroLogic 6.3 A <input type="checkbox"/> MicroLogic 6.2 A <input type="checkbox"/> MicroLogic 6.3 E <input type="checkbox"/> MicroLogic 6.2 E <input type="checkbox"/> MicroLogic 2.2 M <input type="checkbox"/> MicroLogic 6.2 E-M <input type="checkbox"/> MicroLogic 6.3 E-M <input type="checkbox"/> SDTM module <input type="checkbox"/>	MicroLogic 2.3 <input type="checkbox"/> MicroLogic 2.3 AB <input type="checkbox"/> MicroLogic 5.3 A <input type="checkbox"/> MicroLogic 5.3 E <input type="checkbox"/> MicroLogic 5.3 A-Z <input type="checkbox"/> MicroLogic 6.3 A <input type="checkbox"/> MicroLogic 6.2 A <input type="checkbox"/> MicroLogic 6.3 E <input type="checkbox"/> MicroLogic 1.3 M <input type="checkbox"/> MicroLogic 2.2 M <input type="checkbox"/> MicroLogic 2.3 M <input type="checkbox"/> MicroLogic 6.2 E-M <input type="checkbox"/> MicroLogic 6.3 E-M <input type="checkbox"/>

External neutral CT		
24 V DC power supply connector		
ZSI wiring accessory for NSX630b MTZ1/MTZ2/MTZ3		
External power supply module	24-30 V DC <input type="checkbox"/> 100-125 V AC <input type="checkbox"/>	48-60 V DC 110-130 V AC <input type="checkbox"/>
24 V DC	200-240 V AC <input type="checkbox"/>	380-415 V AC <input type="checkbox"/>

Battery module**Connection**

Rear-connection kit	Short <input type="checkbox"/> Mixed <input type="checkbox"/>	Long <input type="checkbox"/>
NSX100/250 connectors	Snap-on 1.5° to 95° (< 160 A) Snap-on 25° to 95° (< 250 A) Snap-on 120° to 185° (< 250 A) Distribution 6 x 1.5° to 35° Aluminium 2 cables 50° to 120°	
NSX400/630 connectors	1 cable 35° to 300° 2 cables 35° to 240°	
Right-angle terminal extensions		
Straight extensions	NSX100/250	
Edgewise extensions	<input type="checkbox"/> 45° term. ext. <input type="checkbox"/> Dbl.-L term. ext.	
Spreader	NSX100/250 (one piece) <input type="checkbox"/> NSX400/630 (52.5 mm) <input type="checkbox"/>	(45 mm) <input type="checkbox"/> (70 mm) <input type="checkbox"/>
Cu cable lugs	NSX100/250 120° <input type="checkbox"/> NSX400/630 240° <input type="checkbox"/>	150° <input type="checkbox"/> 185° <input type="checkbox"/> 300° <input type="checkbox"/>
AI cable lugs	NSX100/250 150° <input type="checkbox"/> NSX400/630 240° <input type="checkbox"/>	185° <input type="checkbox"/> 300° <input type="checkbox"/>
V measr Input for connector	For lugs NSX100/250 ≤ 185° For lugs NSX400/630	
Terminal shields	NSX100/250 Long <input type="checkbox"/> NSX400/630 Long <input type="checkbox"/> Long for 52.5 mm spreaders <input type="checkbox"/>	
Interphase barriers	Set of 6 <input type="checkbox"/>	
2 insulating scrn. NSX100/250	<input type="checkbox"/> NSX400/630 70 pitch <input type="checkbox"/>	

Test tool

Pocket battery for MicroLogic	
Maintenance case	
USB maintenance interface	
Power supply 110-240 V AC	
Spare MicroLogic cord	

Indication and measurement

Ammeter module	Standard <input type="checkbox"/> I max <input type="checkbox"/>	3P <input type="checkbox"/> 3P <input type="checkbox"/>	4P <input type="checkbox"/> 4P <input type="checkbox"/>
Current-transformer module		3P <input type="checkbox"/> 3P <input type="checkbox"/>	4P <input type="checkbox"/> 4P <input type="checkbox"/>
Current-transformer module + TCU		3P <input type="checkbox"/> 3P <input type="checkbox"/>	4P <input type="checkbox"/> 4P <input type="checkbox"/>
Insulation-monitoring module		3P <input type="checkbox"/> 3P <input type="checkbox"/>	4P <input type="checkbox"/> 4P <input type="checkbox"/>
Voltage-presence indicator			
Auxiliary contact	OF <input type="checkbox"/> OF <input type="checkbox"/>	SD <input type="checkbox"/> SD <input type="checkbox"/>	SDE <input type="checkbox"/> SDE <input type="checkbox"/>
		SDV <input type="checkbox"/> SDV <input type="checkbox"/>	Standard <input type="checkbox"/> Low level <input type="checkbox"/>
SDE adapter (TM, MA or MicroLogic 2 trip units)			
SDX module			

Remote operation

Electrical operation	Motor mechanism <input type="checkbox"/> Instantaneous MX <input type="checkbox"/> Instantaneous MN <input type="checkbox"/> Fixed time delay MN <input type="checkbox"/> Adjust. time delay MN <input type="checkbox"/>	AC <input type="checkbox"/> AC <input type="checkbox"/> AC <input type="checkbox"/> AC <input type="checkbox"/> AC <input type="checkbox"/>	DC <input type="checkbox"/> DC <input type="checkbox"/> DC <input type="checkbox"/> DC <input type="checkbox"/> DC <input type="checkbox"/>	V <input type="checkbox"/> V <input type="checkbox"/> V <input type="checkbox"/> V <input type="checkbox"/> V <input type="checkbox"/>
----------------------	--	---	---	--

Rotary handles

Direct	Black <input type="checkbox"/> MCC conversion access. <input type="checkbox"/>	Red and yellow front <input type="checkbox"/> CNOMO conversion access. <input type="checkbox"/>
Extended	Black <input type="checkbox"/>	Red and yellow front <input type="checkbox"/>
	Telescopic handle for withdrawable device <input type="checkbox"/>	
Indication auxiliary	1 early-break switch <input type="checkbox"/>	2 early-make switches <input type="checkbox"/>

Locking

Toggle (1 to 3 padlocks)	Removable <input type="checkbox"/>	Fixed <input type="checkbox"/>
Rotary handle	Keylock adapter (keylock not included) <input type="checkbox"/> Keylocks Ronis 1351B.500 <input type="checkbox"/>	Profalux KS5 B24 D4Z <input type="checkbox"/>
Motor mechanism	Keylock adapter + keylock Ronis (special) <input type="checkbox"/> Keylock adapter (keylock not included) <input type="checkbox"/> Keylocks Ronis 1351B.500 <input type="checkbox"/>	NSX100/250 <input type="checkbox"/> NSX400/630 <input type="checkbox"/> Profalux KS5 B24 D4Z <input type="checkbox"/>

Interlocking

Mechanical	Toggle operated <input type="checkbox"/>	Rotary Handle <input type="checkbox"/>
By key (2 keylocks, 1 key) for rotary handle	Locking kit without locks <input type="checkbox"/> Keylocks Ronis 1351B.500 <input type="checkbox"/>	Profalux KS5 B24 D4Z <input type="checkbox"/>

Installation accessories

IP30 escutcheon for all types (toggle/rotary handle/motor mechanism)	
IP30 escutcheon (with access to toggle + trip unit)	
IP30 escutcheon for Vigi module	
IP40 escutcheon for all types (toggle/rotary handle/motor mechanism)	
IP40 escutcheon for Vigi module	
IP40 escutcheon for Vigi or ammeter module	
Toggle cover	
Sealing accessories	
DIN rail adapter	
3P 60 mm busbar adapter	

Plug-in / withdrawable configuration accessories

Auxiliary connections	1 automatic connector fixed part with 9 wires (for base) <input type="checkbox"/> 1 automatic connector moving part with 9 wires (for circuit breaker) <input type="checkbox"/> 1 sup. for 3 auto. conn. moving parts <input type="checkbox"/> 1 sup. for 2 auto. conn. <input type="checkbox"/> 9-wire manual auxiliary connector (fixed + moving) <input type="checkbox"/>	
Plug-in base accessories	Long insulated terminals <input type="checkbox"/> 2 IP4 shutters for base <input type="checkbox"/>	Set of 2 <input type="checkbox"/>
Chassis accessories	Escutcheon collar <input type="checkbox"/> Locking kit (keylock not included) <input type="checkbox"/> 2 carriage switches (conn./disconnected position indication) <input type="checkbox"/>	Toggle <input type="checkbox"/> Vigi <input type="checkbox"/>
Parts or plug-in Withdrawable kits	Plug-in base FC/RC 2P <input type="checkbox"/> 3P <input type="checkbox"/> Set of two power connections <input type="checkbox"/> Safety trip for advanced opening <input type="checkbox"/> For 3P/4P chassis <input type="checkbox"/>	4P <input type="checkbox"/> Vigi <input type="checkbox"/> Moving part <input type="checkbox"/> Fixed part <input type="checkbox"/>
Adaptater for plug-in base (for terminal shield or interphase barriers)		

Communication

NSX Cord L = 0.35 m <input type="checkbox"/> NSX Cord U > 480 V AC L = 0.35 m <input type="checkbox"/>	NSX Cord L = 1.3 m <input type="checkbox"/> NSX Cord L = 3 m <input type="checkbox"/>
BSCM (NSX400/630)	
Communicating motor mechanism 220-240 V	
Switchboard front display module FDM121	
FDM mounting accessory	
Modbus interface	
Stacking accessory	
ULP line termination	
RJ45 connectors female/female	Wire length RJ45 L = 0.3 m <input type="checkbox"/> Wire length RJ45 L = 1 m <input type="checkbox"/> Wire length RJ45 L = 3 m <input type="checkbox"/>
	Wire length RJ45 L = 0.6 m <input type="checkbox"/> Wire length RJ45 L = 2 m <input type="checkbox"/> Wire length RJ45 L = 5 m <input type="checkbox"/>

D

Order form for source-changeover systems for 2 devices

ComPact NS630b to NS1600

Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

Diagram for two ComPact NS devices

Electrical interlocking with lockout after fault:

Permanent replacement source (with IVE unit)	(no. 51201183)	<input type="checkbox"/>
With emergency off by MX (with IVE unit)	(no. 51201184)	<input type="checkbox"/>
With emergency off by MN (with IVE unit)	(no. 51201185)	<input type="checkbox"/>

Interlocking using connecting rods between two NS630b to NS1600 devices

Manually operated devices installed side-by-side:

For two fixed NS devices with extended rotary handles

Electrically operated devices installed one above the other:

Select a complete set including two adaptation fixtures and the connecting rods

Complete set for:	2 fixed NS devices	<input type="checkbox"/>
	2 withdrawable NS devices	<input type="checkbox"/>

Interlocking using cables between two NS630b to NS1600 devices

Electrically operated devices installed one above the other or side-by-side:

Select a complete set including two adaptation fixtures and the cables

Complete set for:	2 fixed NS devices	<input type="checkbox"/>
	2 withdrawable NS devices	<input type="checkbox"/>
	1 fixed NS device + 1 withdrawable NS device	<input type="checkbox"/>

Electrical interlocking between two NS630b to NS1600 devices

1 IVE unit 48/415 V - 50/60 Hz and 440 V - 60 Hz

1 wiring kit for connection between 2 fixed / withdrawable devices to the IVE unit

Automatic-control option

Power supply 110 V - 50/60 Hz: ACP + BA controller

ACP + UA controller

ACP + UA150 controller

Power supply 220/240 V - 50/60 Hz: ACP + BA controller

ACP + UA controller

ACP + UA150 controller

Power supply 380/415 V - 50/60 Hz and 440 V - 60 Hz: ACP + BA controller

ACP + UA controller

ACP + UA150 controller

D

Order form for source-changeover systems for 2 devices

ComPact NS630b to NS1600

Circuit breakers and switch-disconnectors

(One sheet per device, make copies if necessary)

Name of customer:

Address for delivery:

Requested delivery date:

Customer order no.:

To indicate your choices, check the applicable square boxes
and enter the appropriate information in the rectangles

Device identification:

Q1 - NORMAL SOURCE**Q2 - REPLACEMENT SOURCE****Circuit breaker or switch disconnector**

ComPact type	NS630b to NS1600			
Rating	A			
Circuit breaker	N, H, L			
Switch-disconnector	NA			
Number of poles	3 or 4			
Device	Fixed			
	Withdr. with chassis			
	Withdr. without chassis (moving part only)			
Chassis alone without connections				

MicroLogic control unit

Basic protection	2.0	5.0	6.0	
A - ammeter	2.0	5.0	6.0	7.0
E - energy meter	2.0	5.0	6.0	
P - power meter	5.0	6.0		7.0
AD - external power-supply module		V		
TCE - external sensor (CT) for neutral protection				
Rectangular sensor	280 x 115 mm			
TCW - external sensor for SGR protection				
LR - long-time rating plug	Standard 0.4 to 1 Ir			
	Low setting 0.4 to 0.8 Ir			
	High setting 0.8 to 1 Ir			
	LT OFF			

Communication

Eco COM module Modbus	Device		Chassis	
Front Display Module (FDM121)		Mounting accessory		
Breaker ULP cord	L = 0.35 m			
	L = 1.3 m			
	L = 3 m			

Connections

Horizontal rear connections	Top		Bottom	
Vertical rear connections	Top		Bottom	
Front connections	Top		Bottom	
4x240° bare cable connectors	NS - FC fixed			
+ shields				
Long connection shields	NS - FC fixed			
Vertical-connection adapters	NS - FC fixed, withdr.			
Cable-lug adapters	NS - FC fixed, withdr.			
Arc chute screen	NS - FC fixed			
Interphase barriers	NS - FC fixed, withdr.			
Spreaders	NS - FC fixed, withdr.			
VO - safety shutters on chassis	NS - FC fixed			

Indication contacts

SD trip indication (maximum 1)	6 A-240 V AC	<input type="checkbox"/> Low level	<input type="checkbox"/>
SDE fault-trip indication (maximum 1) (SDE integrated in electrically operated devices)	6 A-240 V AC	<input type="checkbox"/> Low level	<input type="checkbox"/>
OF ON/OFF indication contacts (maximum 3)	6 A-240 V AC	qty <input type="text"/>	qty <input type="checkbox"/> Low level
Carriage switches (possible combinations: 3 CE, 2 CD, 1 CT)	6 A-240 V AC	qty <input type="checkbox"/> Low level	qty <input type="checkbox"/>
CE - "connected" position	6 A-240 V AC	qty <input type="checkbox"/> Low level	qty <input type="checkbox"/>
CD - "disconnected" position	6 A-240 V AC	qty <input type="checkbox"/> Low level	qty <input type="checkbox"/>
CT - "test" position	6 A-240 V AC	qty <input type="checkbox"/> Low level	qty <input type="checkbox"/>
Auxiliary terminals for chassis alone		Jumpers (set of 10)	
3-wire terminal (30 parts)	<input type="checkbox"/>	6-wire terminal (10 parts)	<input type="checkbox"/>

Remote operation

Electrical operation	Standard	AC	Communicating
	Power supply	DC	V
Voltage releases	MX	AC	V
	MN	DC	V
MN delay unit		Adjustable	Non-adjustable

Rotary handles for fixed and withdrawable device

Direct	Black <input type="checkbox"/>	Red on yellow front
		CNOMO conversion access.
Extended	Black <input type="checkbox"/>	Red on yellow front
		Telescopic handle for withdrawable device
Indication auxiliary	6 A-240 V AC	2 early-make switches 2 early-break switches

Locking

Toggle (1 to 3 padlocks)	Removable system	<input type="checkbox"/> Fixed system
Rotary handle using a keylock	OFF position	<input type="checkbox"/> ON and OFF positions
	Ronis 1351B.500	<input type="checkbox"/> Profalux KS5 B24 D4Z
	Keylock kit (without keylock)	
For electrically operated devices	VBP - ON/OFF pushbutton locking	
	OFF position locking:	
	VCPO - by padlocks	<input type="checkbox"/>
	VSPO - by keylocks	
Keylock kit (w/o keylock)	Profalux	Ronis
1 keylock	Profalux	Ronis
2 identical keylocks, 1 key	Profalux	Ronis

Chassis locking in "disconnected" position:

VSPD - by keylocks	Keylock kit (w/o keylock)	Profalux	Ronis
	Kirk	Castell	
1 keylock	Profalux	Ronis	
2 identical keylocks, 1 key	Profalux	Ronis	
2 keylocks, different keys	Profalux	Ronis	
Optional connected/disconnected/test position locking			

VPEC - door interlock	On right-hand side of chassis
	On left-hand side of chassis

VPOC - racking interlock

VDC - mismatch protection	

Accessories

CDM - mechanical operation counter	
CDP - escutcheon	
CP - transparent cover for escutcheon	
OP - blanking plate for escutcheon	
Mounting brackets for fixed NS	For mounting on horizontal plane
Test kits	Mini <input type="checkbox"/> Portable test kit <input type="checkbox"/>

D

Order form for source-changeover systems for 2 devices

MasterPact MTZ1/MTZ2/MTZ3

Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

Diagram for 2 MasterPact MTZ1/MTZ2/MTZ3 devices

Electrical interlocking with lockout after fault:

Permanent replacement source (with IVE unit)

With emergency off by MX (with IVE unit)

With emergency off by MN (with IVE unit)

Automatic control with lockout after fault:

Permanent replacement source (with IVE unit)

Engine generator set (with IVE unit)

Interlocking using connecting rods (MTZ1/MTZ2/MTZ3 devices one above the other)

Select a complete set including two adaptation fixtures and the connecting rods

Complete set for:	2 drawout MTZ1	<input type="checkbox"/>	2 fixed MTZ1
	2 drawout MTZ2/3	<input type="checkbox"/>	2 fixed MTZ2/3
	1 fixed MTZ1 device + 1 fixed MTZ2/3 device	<input type="checkbox"/>	
	1 drawout MTZ1 device + 1 drawout MTZ2/3 device	<input type="checkbox"/>	

Interlocking using cables (MTZ1/MTZ2/MTZ3 devices one above the other or side-by-side)

Select two adaptation fixtures (one for each device) and a set of two cables

Adaptation fixture for: (MTZ1/MTZ2/3 fixed and drawout devices may be mixed)	1 fixed MTZ1 device	qty <input type="checkbox"/>
	1 drawout MTZ1 device	qty <input type="checkbox"/>
	1 fixed MTZ2/3 device	qty <input type="checkbox"/>
	1 drawout MTZ2/3 device	qty <input type="checkbox"/>
	1 set of 2 cables (for two devices)	qty <input type="checkbox"/>

Electrical interlocking 2 MasterPact MTZ1/MTZ2/MTZ3 devices

1 IVE unit 48/415 V - 50/60 Hz and 440 V - 60 Hz

1 wiring kit for connection between 2 fixed / withdrawable devices to the IVE unit

Automatic-control option

Power supply 220/240 V - 50/60 Hz:	ACP + BA controller	<input type="checkbox"/>
	ACP + UA controller	<input type="checkbox"/>
	ACP + UA150 controller	<input type="checkbox"/>
Power supply 380/415 V - 50/60 Hz and 440 V - 60 Hz:	ACP + BA controller	<input type="checkbox"/>
	ACP + UA controller	<input type="checkbox"/>
	ACP + UA150 controller	<input type="checkbox"/>

Order form for source-changeover systems for 2 devices

MasterPact MTZ1/MTZ2/MTZ3

Circuit breakers and switch-disconnectors

(One sheet per device, make copies if necessary)

Name of customer:

Address for delivery:

Requested delivery date:

Customer order no.:

To indicate your choices, check the applicable square boxes
and enter the appropriate information in the rectangles

Device identification:

Q1 - NORMAL SOURCE**Q2 - REPLACEMENT SOURCE****Circuit breaker or switch disconnector**

MasterPact type	MTZ1	MTZ2/MTZ3
Rating	A	
Sensor rating	A	
Circuit breaker	N1, H1, H2, H3, L1	
Switch-disconnector	NA, HA, HF, ES, HA10 (MTZ2/3)	
Number of poles	3 or 4	
Option: neutral on right side		
Device	Fixed	
	Withdr. with chassis	
	Withdr. without chassis (moving part only)	

Chassis alone without connections

MicroLogic control unit

LI	2.X
LSI	5.X
LSIG	6.X
LSIV	7.X
AD - external power-supply module	V
TCE - external sensor (CT) for neutral protection	
Rectangular sensor for earth-leakage protection	MTZ1 (280 x 115 mm)
	MTZ2/3 (470 x 160 mm)
LR - long-time rating plug	Standard 0.4 to 1 Ir
	Low setting 0.4 to 0.8 Ir
	High setting 0.8 to 1 Ir
	LT OFF
PTE - external voltage measurement input (required for reverse supply)	

BAT - battery module**Communication**

Eco COM module Modbus	Device	<input type="checkbox"/>	Chassis	<input type="checkbox"/>
Front Display Module (FDM121)		<input type="checkbox"/>	Mounting accessory	
Breaker ULP cord	L = 0.35 m	<input type="checkbox"/>		
	L = 1.3 m	<input type="checkbox"/>		
	L = 3 m	<input type="checkbox"/>		
ULP port		<input type="checkbox"/>	IFM	
ULP cord		<input type="checkbox"/>	EIFE	
I/O module		<input type="checkbox"/>	FDM128	
IFE		<input type="checkbox"/>		

Connections

Horizontal	Top	<input type="checkbox"/>	Bottom	<input type="checkbox"/>
Vertical	Top	<input type="checkbox"/>	Bottom	<input type="checkbox"/>
Front	Top	<input type="checkbox"/>	Bottom	<input type="checkbox"/>
Vertical-connection adapters	MTZ1 - FC fixed, drawout.			
Cable-lug adapters	MTZ1 - FC fixed, draw.			
Arc chute screen	MTZ1 - FC fixed			
Interphase barriers	MTZ1 - MTZ2/3 fixed, draw.			
Spreaders	MTZ1 fixed, drawout			
Disconnectable front	MTZ2/3 fixed			
connection adapter				
Lugs for 240° or 300° cables	MTZ2/3 fixed, drawout	<input type="checkbox"/>		
VO - safety shutters on chassis	MTZ1, MTZ2/3	<input checked="" type="checkbox"/>		
VIVC - shutter position	MTZ2/3	<input type="checkbox"/>		
indication and locking				

Indication contacts**OF - ON/OFF indication contacts**

Standard	4 OF 6 A-240 V AC (10 A-240 V AC and low-level for MTZ2/3)	qty <input type="checkbox"/>
Additional	1 block of 4 OF for MTZ2/3	max. 2

EF - combined "connected/closed" contacts

1 EF 6 A-240 V AC for MTZ2/3	max. 8	qty <input type="checkbox"/>
1 EF low-level for MTZ2/3	max. 8	qty <input type="checkbox"/>

SDE - "fault-trip" indication contact

Standard	1 SDE 6 A-240 V AC	qty <input type="checkbox"/>
Additional	1 SDE 6 A-240 V AC	1 SDE Low level

Programmable contacts

Carriage switches	6 A-240 V AC	qty <input type="checkbox"/>
CE - "connected" position	max. 3 for MTZ2/3 / MTZ1	2 M2C contacts

CD - "disconnected" position	max. 3 for MTZ2/3, 2 for MTZ1	qty <input type="checkbox"/>
CT - "test" position	max. 3 for MTZ2/3, 1 for MTZ1	qty <input type="checkbox"/>

AC - MTZ2/3 actuator for 6 CE - 3 CD - 0 CT additional carriage switches	qty <input type="checkbox"/>
---	------------------------------

Remote operation

Remote ON/OFF	MCH - gear motor	qty <input type="checkbox"/>
	XF - closing voltage release	qty <input type="checkbox"/>
	MX - opening voltage release	qty <input type="checkbox"/>
	PF - "ready to close" contact	Low level
		6 A-240 V AC

BPFE - electrical closing pushbutton	qty <input type="checkbox"/>
Res - electrical reset option	qty <input type="checkbox"/>
RAR - automatic reset option	qty <input type="checkbox"/>

Remote tripping	MN - undervoltage release	qty <input type="checkbox"/>
	R - delay unit (non-adjustable)	qty <input type="checkbox"/>
	Rr - adjustable delay unit	qty <input type="checkbox"/>
	2 nd MX - shunt release	qty <input type="checkbox"/>

Locking

VBP - ON/OFF pushbutton locking (by transparent cover + padlocks)	qty <input type="checkbox"/>
--	------------------------------

OFF position locking:

VCPO - by padlocks	Keylock kit (w/o keylock)	qty <input type="checkbox"/>
VSPO - by keylocks	Kirk	qty <input type="checkbox"/>
	1 keylock	qty <input type="checkbox"/>
	2 identical keylocks, 1 key	qty <input type="checkbox"/>
	2 keylocks, different keys (MTZ2/3)	qty <input type="checkbox"/>

Chassis locking in "disconnected" position:

VSPD - by keylocks	Keylock kit (w/o keylock)	qty <input type="checkbox"/>
	Kirk	qty <input type="checkbox"/>
	1 keylock	qty <input type="checkbox"/>
	2 identical keylocks, 1 key	qty <input type="checkbox"/>
	2 keylocks, different keys	qty <input type="checkbox"/>

Optional connected/disconnected/test position locking

VPEC - door interlock

On right-hand side of chassis

On left-hand side of chassis

VPOC - racking interlock**IPA - cable-type door interlock****IBPO - racking interlock between crank and OFF pushbutton for MTZ2/3****DAE - automatic spring discharge before breaker removal for MTZ2/3****VDC - mismatch protection device - chassis****Accessories****CDM - mechanical operation counter****CB - auxiliary terminal shield for chassis****CDP - escutcheon****CP - transparent cover for escutcheon****OP - blanking plate for escutcheon****Brackets for mounting MTZ2/3 fixed**

On backplates

D

Order form for source-changeover systems for 3 devices

MasterPact MTZ2/MTZ3

Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .

Diagram for 3 MasterPact MTZ2/MTZ3 devices

2 "Normal" sources + 1 "Replacement" source:

Electrical interlocking without lockout after fault

Electrical interlocking with lockout after fault

2 "Normal" sources + 1 "Replacement" source with source selection:

Automatic control w/ engine generator set w/o lockout after fault

Automatic control w/ engine generator set w/ lockout after fault

3 sources, only 1 device ON:

Electrical interlocking without lockout after fault

Electrical interlocking with lockout after fault

2 "Normal" sources + 1 coupling:

Electrical interlocking without lockout after fault

Electrical interlocking with lockout after fault

Automatic control with lockout after fault:

Interlocking using cables (MTZ2/MTZ3 devices one above the other or side-by-side)

Select a complete set including three adaptation fixtures and the cables

1 complete set for: 3 sources / 1 device ON, fixed or drawout

2 sources + 1 coupling, fixed or drawout

2 sources + 1 replacement source, fixed or drawout

D

Order form for source-changeover systems for 3 devices

MasterPact MTZ2/MTZ3

Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles .
(one sheet per device, make copies if necessary)

Device identification:

Q 1 - NORMAL SOURCE**Q 2 - REPLACEMENT SOURCE****Circuit breaker or switch-disconnector**

MasterPact type	MTZ2/MTZ3	
Rating	A	
Sensor rating	A	
Circuit breaker	N1, H1, H2, H3, L1	
Switch-disconnector	NA, HA, HF	
Number of poles	3 or 4	
Option: neutral on right side		
Device	Fixed	
	Drawout with chassis	
	Drawout without chassis (moving part only)	

Chassis alone without connections**MicroLogic control unit**

LI	2.X	
LSI	5.X	
LSIG	6.X	
LSIV	7.X	
AD - external power-supply module	V	
TCE - external sensor (CT) for neutral protection		
Rectangular sensor for earth-leakage protection	470 x 160 mm	

TCW - external sensor for SGR protection

LR - long-time rating plug	Standard 0.4 to 1 Ir	
	Low setting 0.4 to 0.8 Ir	
	High setting 0.8 to 1 Ir	
	LT OFF	

PTE - external voltage measurement input (required for reverse supply)**BAT - battery module****Communication**

Eco COM module	Modbus	Device	Chassis	
Front Display Module (FDM121)		Mounting accessory		
Breaker ULP cord	L = 0.35 m			
	L = 1.3 m			
	L = 3 m			
ULP port		IFM		
ULP cord		EIFE		
I/O module		FDM128		
IFE				

Connections

Horizontal	Top	<input type="checkbox"/>	Bottom	<input type="checkbox"/>
Vertical	Top	<input type="checkbox"/>	Bottom	<input type="checkbox"/>
Front	Top	<input type="checkbox"/>	Bottom	<input type="checkbox"/>
Interphase barriers	Fixed, drawout			
Disconnectable front connection adapter	Fixed			
VO - safety shutters on chassis		X		
VIVC - shutter position indication and locking				

Indication contacts**OF - ON/OFF indication contacts**

Standard	4 OF 6 A-240 V AC (10 A-240 V AC and low-level)		
Additional	1 block of 4 OF	max. 2	qty <input type="text"/>

EF - combined "connected/closed" contacts

1 EF 6 A-240 V AC	max. 8	qty <input type="text"/>
1 EF low-level	max. 8	qty <input type="text"/>

SDE - "fault-trip" indication contact

Standard	1 SDE 6 A-240 V AC		
Additional	1 SDE 6 A-240 V AC	<input type="checkbox"/>	1 SDE Low level

Programmable contacts

Carriage switches	6 A-240 V AC	<input type="checkbox"/>	2 M2C contacts
CE - "connected" position	Max. 3		Low level
CD - "disconnected" position	Max. 3		qty <input type="text"/>
CT - "test" position	Max. 3		qty <input type="text"/>
AC - MTZ2/3 actuator for 6 CE - 3 CD - 0 CT additional carriage switches			qty <input type="text"/>

Remote operation

Remote ON/OFF	MCH - gear motor	V	
	XF - closing voltage release	V	
	MX - opening voltage release	V	
	PF - "ready to close" contact	Low level	
		6 A-240 V AC	
	BPFE - electrical closing pushbutton		
	Res - electrical reset option	V	
	RAR - automatic reset option		

Remote tripping

	MN - undervoltage release	V	
	R - delay unit (non-adjustable)		
	Rr - adjustable delay unit		
	2 ^{eme} MX - shunt release	V	

Locking

VBP - ON/OFF pushbutton locking (by transparent cover + padlocks)	<input type="checkbox"/>
---	--------------------------

OFF position locking:

VCPO - by padlocks			
VSPO - by keylocks	Keylock kit (w/o keylock)	Profalux	Ronis
	Kirk		Castell
	1 keylock	Profalux	Ronis
	2 identical keylocks, 1 key	Profalux	Ronis
	2 keylocks, different keys	Profalux	Ronis

Chassis locking in "disconnected" position:

VSPD - by keylocks	Keylock kit (w/o keylock)	Profalux	Ronis
	Kirk		Castell
	1 keylock	Profalux	Ronis
	2 identical keylocks, 1 key	Profalux	Ronis
	2 keylocks, different keys	Profalux	Ronis
	Optional connected/disconnected/test position locking		

VPEC - door interlock

	On right-hand side of chassis	
	On left-hand side of chassis	

VPOC - racking interlock

IPA - cable-type door interlock		
---------------------------------	--	--

IBPO - racking interlock between crank and OFF pushbutton for MTZ2/3

DAE - automatic spring discharge before breaker removal for MTZ2/3		
--	--	--

VDC - mismatch protection

CDM - mechanical operation counter		
------------------------------------	--	--

CB - auxiliary terminal shield for chassis

CDP - escutcheon		
------------------	--	--

CP - transparent cover for escutcheon

OP - blanking plate for escutcheon		
------------------------------------	--	--

Brackets for mounting MTZ2/3 fixed		On backplates
------------------------------------	--	---------------

D

Catalog numbers and order form
Notes

www.se.com

D

**Schneider Electric Industries SAS**

35, rue Joseph Monier
CS 30323
92506 Rueil Malmaison Cedex
France

RCS Nanterre 954 503 439
Capital social 928 298 512 €
www.se.com

04-2020